


ON-VEHICLE REPAIR

HINT: The components mentioned below can be replaced on the vehicle as they do not require removal of the transmission. For the respective operating procedures refer to the following pages:

Components	Removal	Installation	Remarks
Valve Body	Steps 11 to 15 on pages AT-43 to 45	Steps 32 to 36 on pages AT-150 to 151	—
Throttle Cable	Steps 15 and 16 on pages AT-44 to 45	Steps 28 to 31 on pages AT-149 to 150	- Adjust the throttle cable after installing. (See page AT- 13) - If the throttle cable is new, see the HINT below.

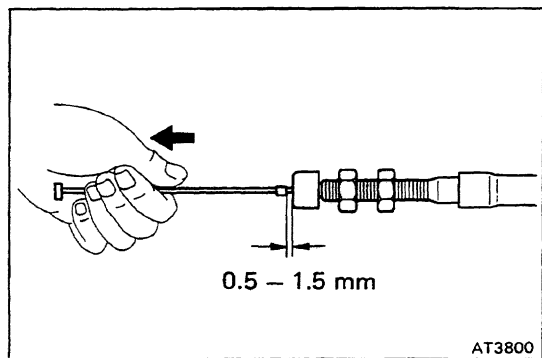

HINT: New cables do not have a cable stopper staked.

(a) Pull the inner cable lightly until a slight resistance is felt, and hold it.

(b) Stake the stopper, 0.5 – 1.5 mm (0.020 – 0.059 in.) from the end of outer cable.