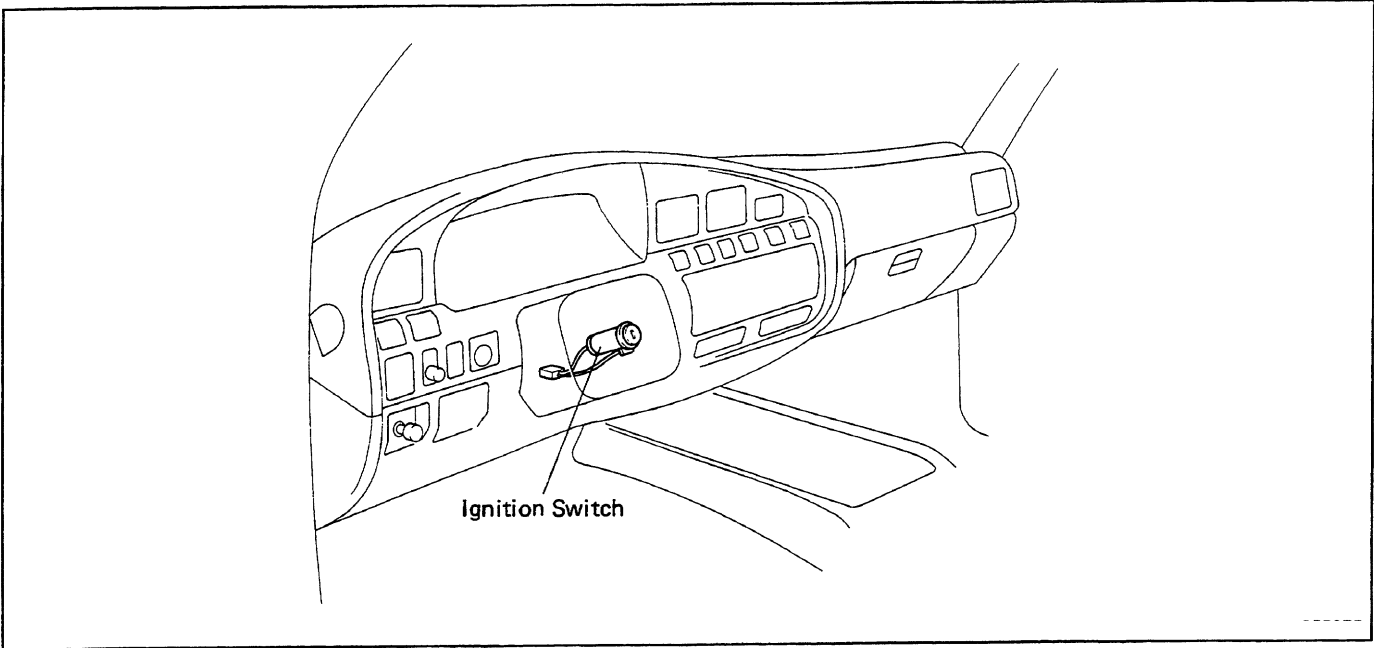
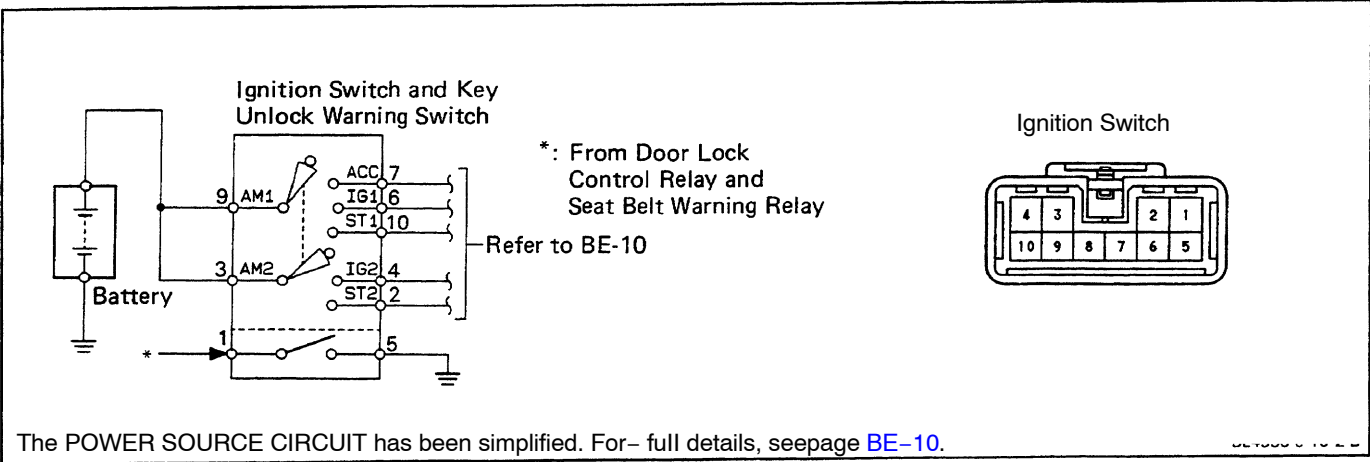


IGNITION SWITCH

Parts Location



Wiring and Connector Diagrams



Parts Inspection

Ignition System

INSPECT SWITCH

(Ignition Switch/Continuity)

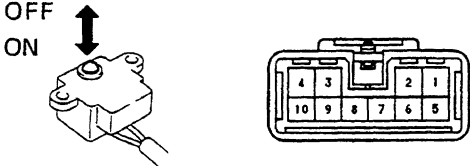
 
 
Terminal	2	3	4	6	7	9	10
Switch position							
LOCK							
ACC							
ON							
START							

If continuity is not as specified, replace the switch.

Key Confine Prevention System

1. INSPECT SWITCHES

(Key Unlock Warning Switch /Continuity)

	Terminal	1	5
	Switch position		
	OFF (Ignition Key removed)		
	ON (Ignition Key set)		

(Door Courtesy Switch /Continuity)

See Step 2 on page [BE-41](#).

If continuity is not as specified, replace the switch.

2. INSPECT RELAY

See seat belt warning relay on page [BE-41](#).