



POWER MIRROR CONTROL SYSTEM

Parts Location

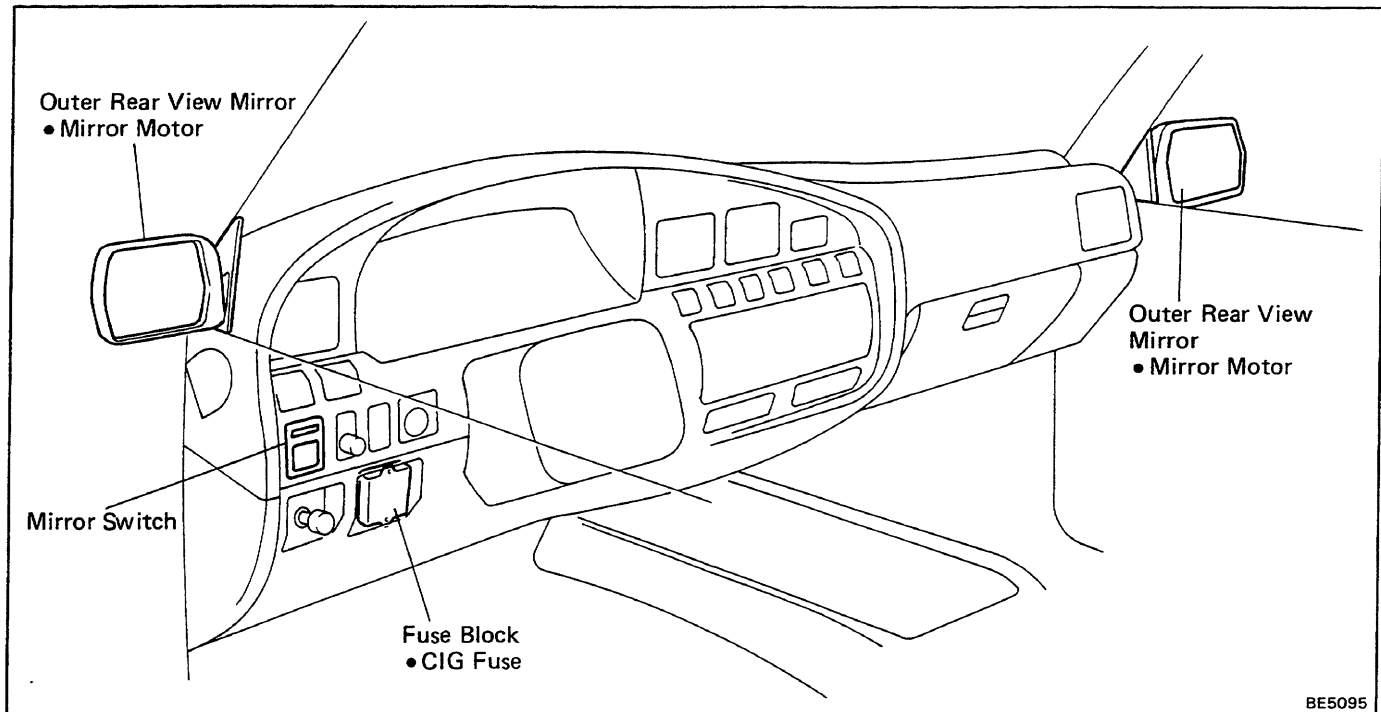

Wiring and Connector Diagrams

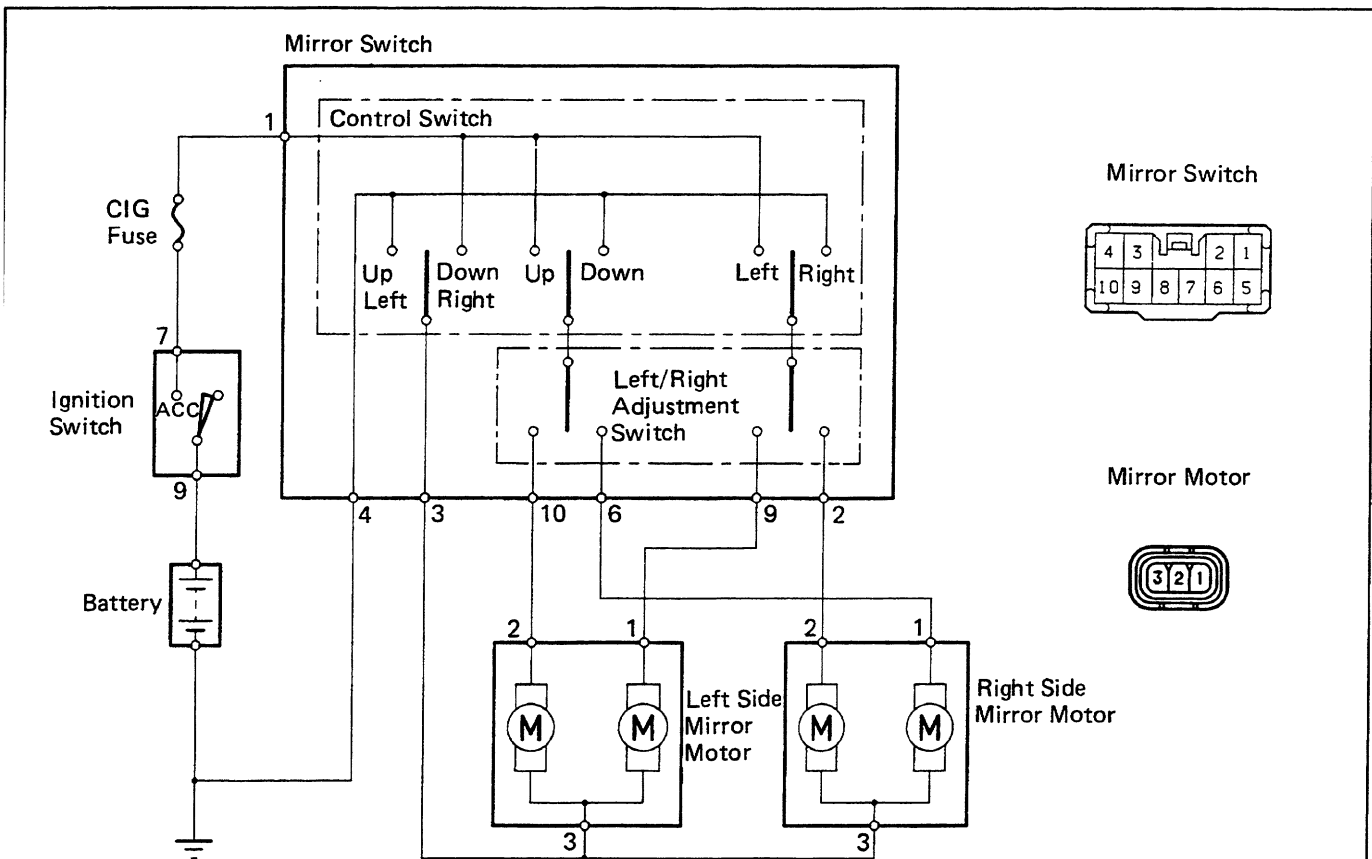


The POWER SOURCE CIRCUIT has been simplified. For full details, see page BE-10.

Troubleshooting

Problem	Possible cause	Remedy	Page
Remote control mirror system does not operate	CIG fuse faulty Mirror switch faulty Mirror motor faulty Wiring or ground fault	Replace fuse and check for short Check switch Check motor Repair as necessary	BE-4, 6 BE-66 BE-66

Parts inspection

1. INSPECT MIRROR SWITCH (Continuity)

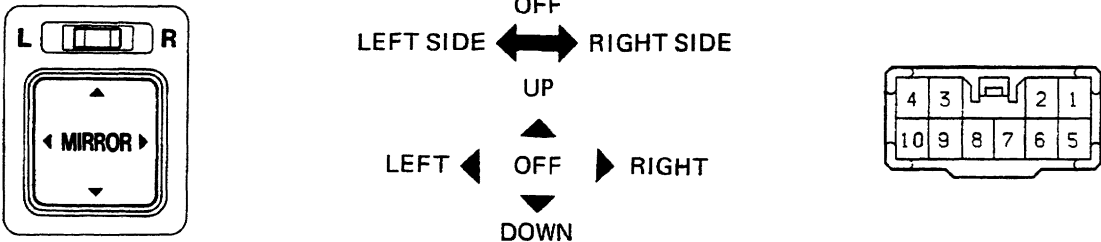													
BE2357 S-10-2													
Left/Right adjustment switch position	LEFT SIDE					OFF			RIGHT SIDE				
Terminal	1	3	4	9	10	1	3	4	1	2	3	4	6
Control switch position													
OFF													
UP	○	○	○	○	○		○	○	○		○	○	○
DOWN	○	○	○	○	○	○	○		○		○	○	○
LEFT	○	○	○	○			○	○	○	○	○	○	
RIGHT	○	○	○	○		○	○		○	○	○	○	

If continuity is not as specified, replace switch.

2. INSPECT MIRROR MOTOR

Connect the positive (+) lead from the battery to terminal in column "A" and the negative (-) lead to terminal in column "B", check that the mirror operates in column "C".

A (+)	B (-)	C (Operation)
2	3	Mirror turns upward (↑)
3	2	Mirror turns downward (↓)
1	3	Mirror turns to left side (←)
3	1	Mirror turns to right side (→)

If operation is not as specified, replace the mirror assembly.

