



QUARTER WINDOW GLASS COMPONENTS

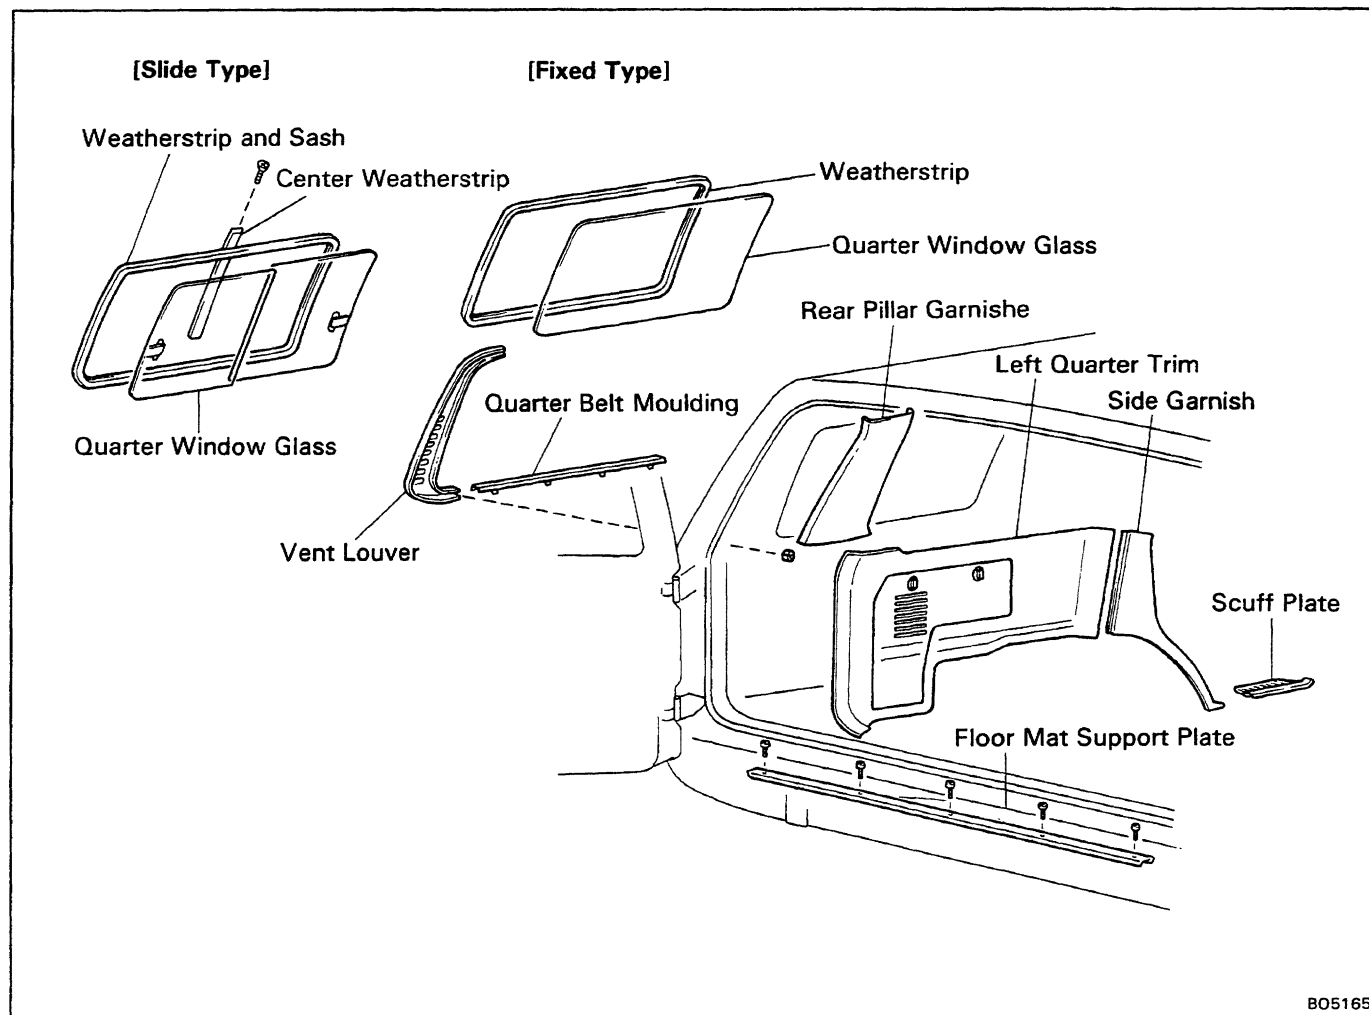

BO5165

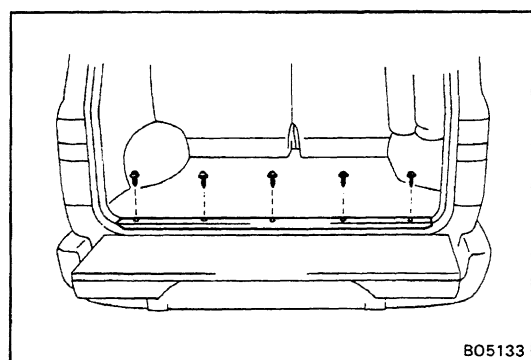


BO5133

REMOVAL OF QUARTER WINDOW GLASS

1. REMOVE FLOOR MAT SUPPORT PLATE

Remove five screws and the plate.

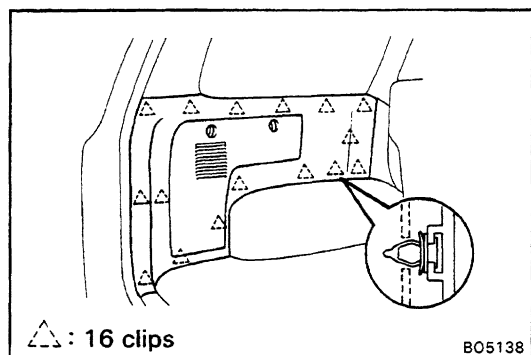

△ : 16 clips


BO5138

2. REMOVE QUARTER TRIM

(a) Insert a screwdriver between the retainers and quarter trim to pry it loose.

HINT: Tape the screwdriver tip before use.

(b) Remove quarter trim.

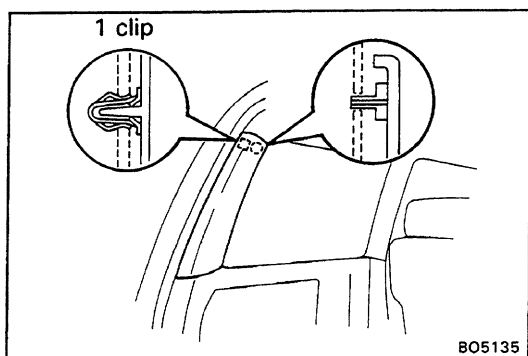


3. REMOVE REAR PILLAR GARNISH

- (a) Insert a screwdriver between the retainers and quarter trim to pry it loose.

HINT: Tape the screwdriver tip before use.

- (b) Remove the garnish.

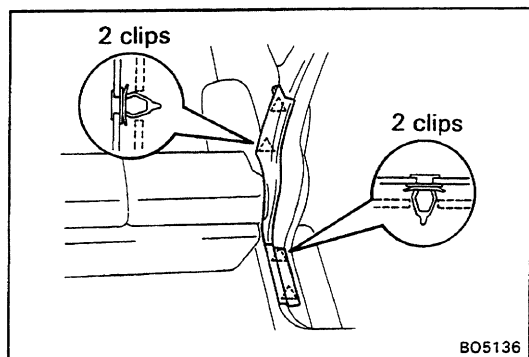


4. REMOVE REAR SEAT SIDE GARNISHES AND SCUFF PLATE

- (a) Insert a screwdriver between the retainers and the body to pry it loose.


HINT: Tape the screwdriver tip before use.

- (b) Pull out the side garnish.

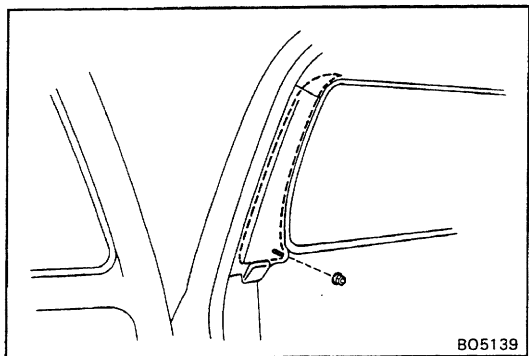

5. REMOVE VENT LOUVER AND QUARTER BELT MOULDING

- (a) Remove a nut from the vent louver.

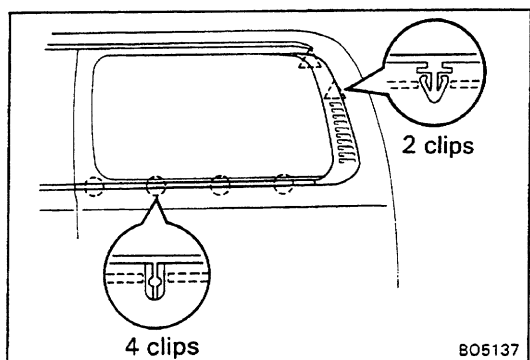


- (b) Insert a screwdriver between the retainers and body to pry it loose.

HINT: Tape the screwdriver tip before use.

- (c) Pull out the vent louver.

- (d) Pull out the clips from the edge of the panel, and remove the moulding.

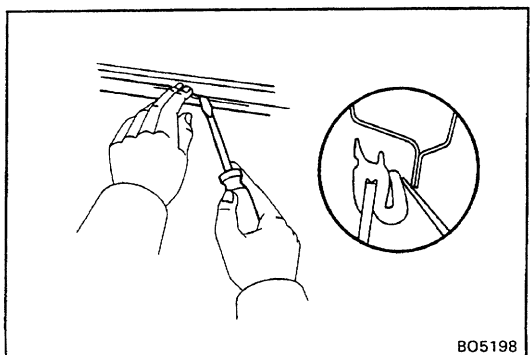

6. REMOVE QUARTER WINDOW GLASS


If reusing the weatherstrip:

- (a) Using a screw driver loosen the weatherstrip from the body.

NOTICE: Be careful not to damage the body.


- (b) Pry the lip of the weatherstrip outward from the interior part of the body flange.

- (c) Pull the glass outwards and remove it with the weatherstrip.

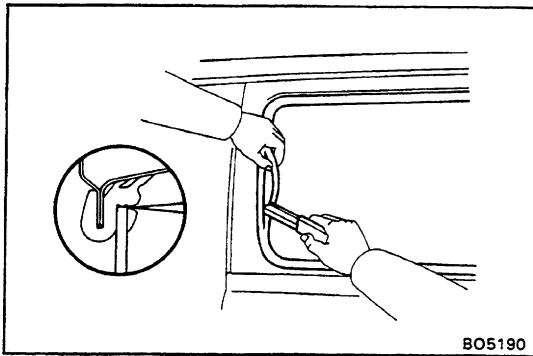

If using a new weatherstrip:

- (a) From outside of the vehicle, cut off the weatherstrip lip with a knife.
HINT: Do not damage the body and the glass.
- (b) Push the glass outwards and remove the glass.
- (c) Remove the remaining weatherstrip.

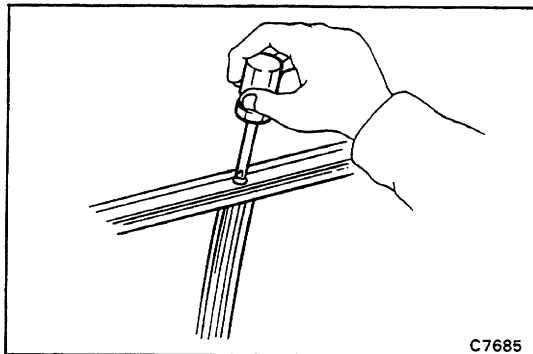


DISASSEMBLY OF QUARTER WINDOW GLASS

(See page [BO-48](#))

(Slide Type)

1. REMOVE CENTER WEATHERSTRIP

Remove the screw and the weatherstrip.

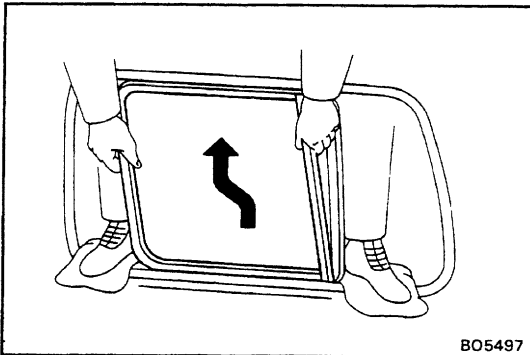


2. REMOVE QUARTER WINDOW GLASS

Pull up on the sash and remove the two glasses.

3. REMOVE QUARTER WINDOW GLASS RUN FROM THE SASH

4. REMOVE QUARTER WINDOW WEATHERSTRIP FROM THE SASH

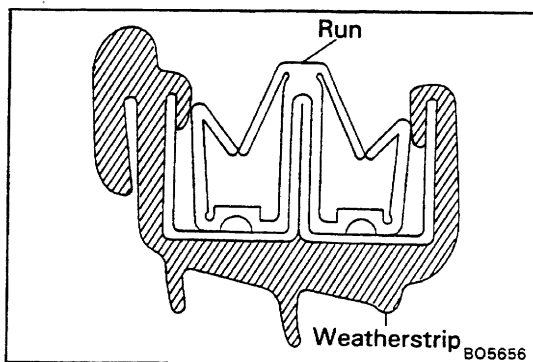

ASSEMBLY OF QUARTER WINDOW GLASS

(See page [BO-48](#))

(Slide Type)

1. INSTALL QUARTER WINDOW WEATHERSTRIP ON SASH AS SHOWN

NOTICE: If the weatherstrip has hardened, it may develop leaks.

Use a new one if possible.


2. INSTALL QUARTER WINDOW GLASS RUN AS SHOWN


3. INSTALL QUARTER WINDOW GLASS

Pull up on the sash and install the two glasses.

4. INSTALL CENTER WEATHERSTRIP

Install the weatherstrip with the screw.

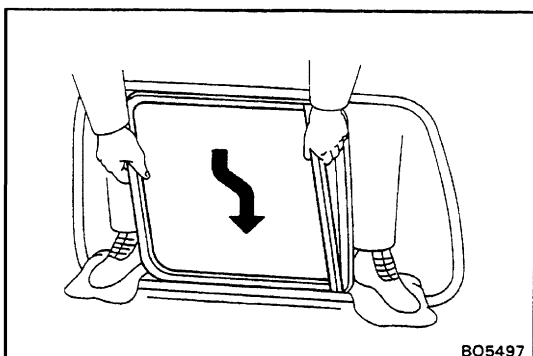

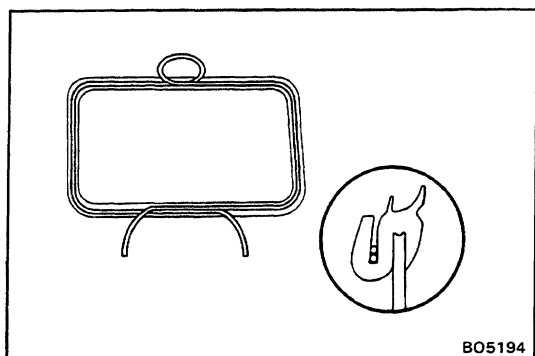

INSTALLATION OF QUARTER WINDOW GLASS


(See page [BO-48](#))

1. INSTALL WEATHERSTRIP ON GLASS

(a) Attach the weatherstrip to the glass.

NOTICE: If the weatherstrip has hardened, it may develop leaks. Use a new one if possible.


(b) Insert a cord into the groove of the weatherstrip all the way around with the ends overlapping.

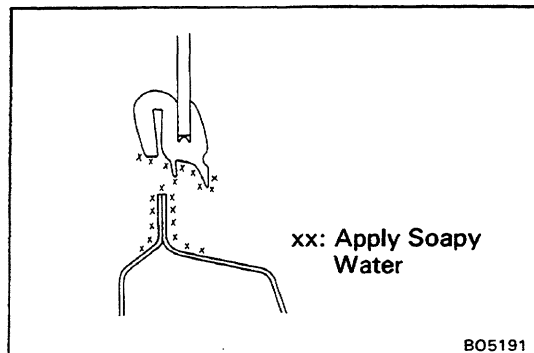


2. INSTALL QUARTER WINDOW GLASS

(a) Apply soapy water to the contact surface of the weatherstrip lip and to the body flange.

HINT: Begin installation in the middle of the lower part of the quarter window glass.

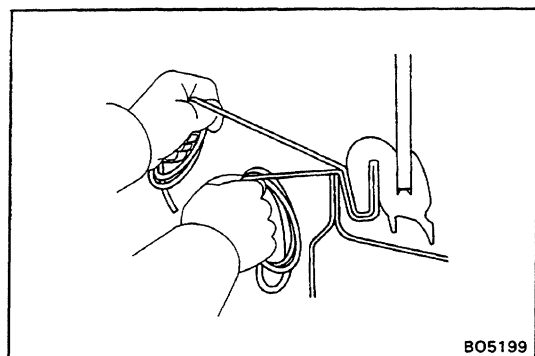

(b) Hold the glass in position on the body.

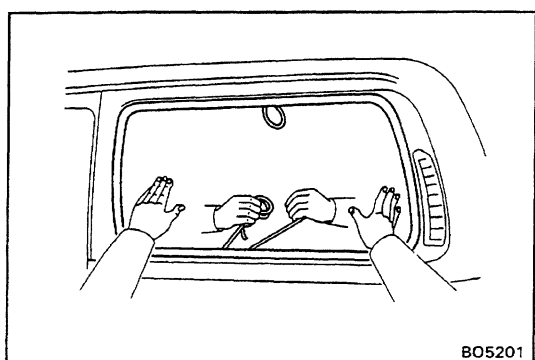

(c) From the inside, pull on one cord at an angle so it pulls the lip over the flange. From the outside, press the glass along the weatherstrip until the glass is installed.

3. SNUG DOWN GLASS

To snug down the glass, tap from the outside with your open hand.

4. INSPECT FOR LEAKS AND REPAIR

Perform a leak test.

5. INSTALL FOLLOWING PARTS:

- Pillar garnishes
- Quarter trim
- Floor mat support plate
- Side garnishes and scuff plate

