
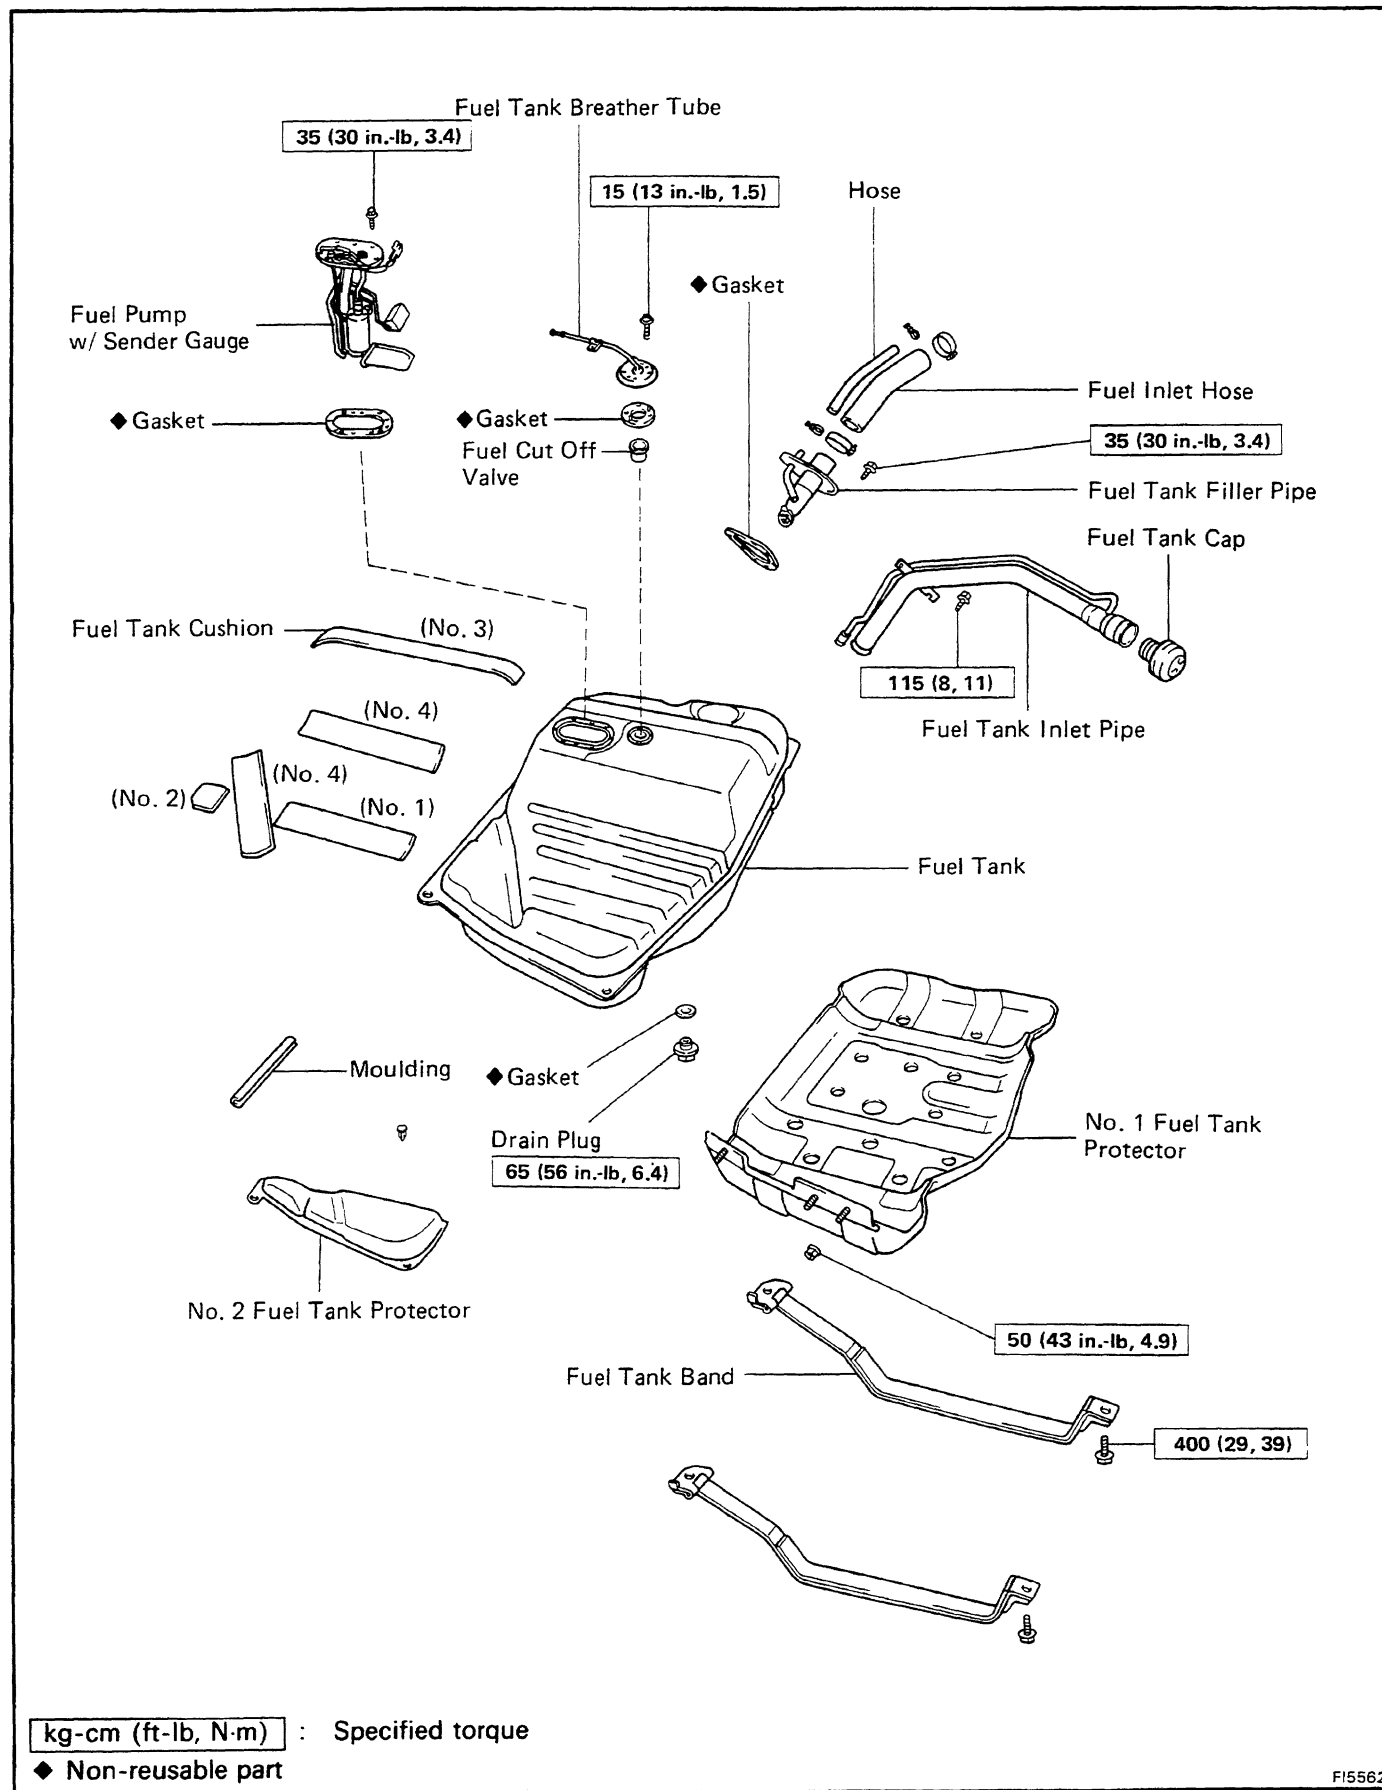


Fuel Tank and Lines COMPONENTS

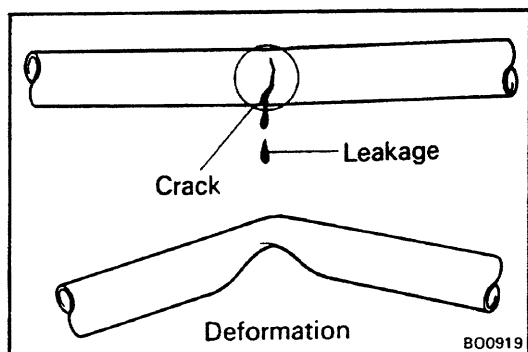

PRECAUTIONS

1. Always use new gaskets when replacing the fuel tank or component parts.
2. Apply the proper torque to all parts tightened.

**INSPECT FUEL LINES AND CONNECTIONS**

- (a) Check the fuel lines for cracks or leakage, and all connections for deformation.
 - (b) Check the fuel tank vapor vent system hoses and connections for looseness, kinks or damage.
 - (c) Check the fuel tank for deformation, cracks, fuel leakage or tank band looseness.
 - (d) Check the filler neck for damage or fuel leakage.
 - (e) Hose and tube connections are as shown in the illustration.
- If a problem is found, repair or replace the parts as necessary.

