

ABBREVIATIONS USED IN THIS MANUAL

A/C	Air Conditioner
AI	Air Injection
ASV	Air Switching Valve
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
A.T.P.	Automatic Transmission Parking
Bo	Overdrive Brake
B2	Second Brake
B3	First and Reverse Brake
BTDC	Before Top Dead Center
BVSV	Bimetal Vacuum Switching Valve
Co	Overdrive Direct Clutch
C,	Forward Clutch
C2	Direct Clutch
CCS	Cruise Control System
CD	Compact Disc
DP	Dash Pot
ECU	Electronic Control Unit
EFI	Electronic Fuel Injection
EGR	Exhaust Gas Recirculation
ESA	Electronic Spark Advance
EVAP	Evaporative (Emission Control)
EX	Exhaust (manifold, valve)
Ex.	Except
Fo	Overdrive One-Way Clutch
F2	No.2 One-Way Clutch
FIPG	Formed on Place Gasket
FL	Fusible Link IG Ignition
IN	Intake (manifold, valve)
ISC	Idle Speed Control
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LSP	Load Sensing Proportioning
BV	By-Pass Valve
Max.	Maximum MID Multipurpose
O/D	Overdrive
O/S	Oversize
PCV	Positive Crankcase Ventilation
PS	Power Steering
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard SW Switch
TDC	Top Dead Center
TWC	Three-Way Catalyst
U/S	Undersize
VCV	Vacuum Control Valve
VSV	Vacuum Switching Valve
VTV	Vacuum Transmitting Valve
w/	With
w/o	Without
4WD	Four Wheel Drive Vehicles (4 x 4)