
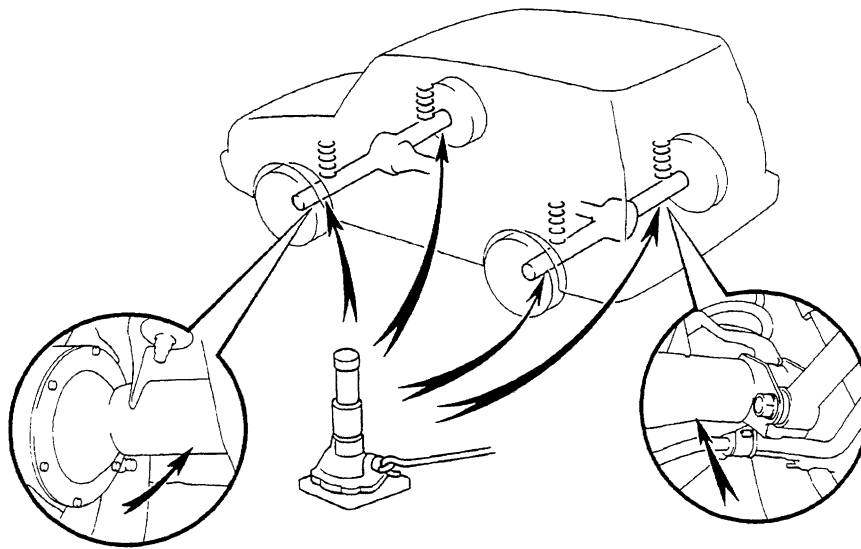


VEHICLE LIFT AND SUPPORT LOCATIONS

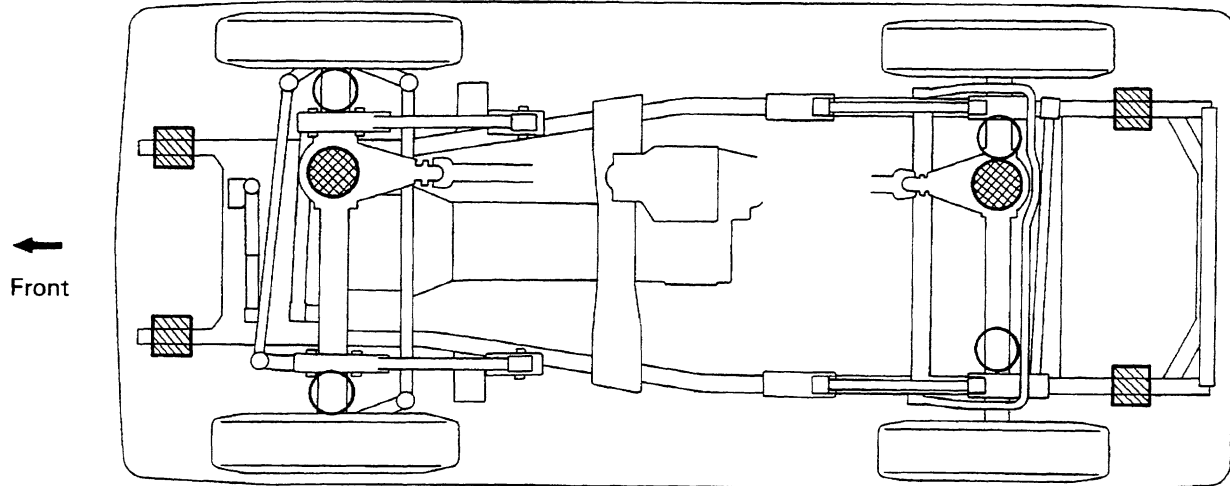

JACK POSITION ———— ●

Front Under the front differential

Rear Under there are differential

SCREW TYPE JACK POSITION ———— ○

SUPPORT POSITION

Safety stand..... ▨