
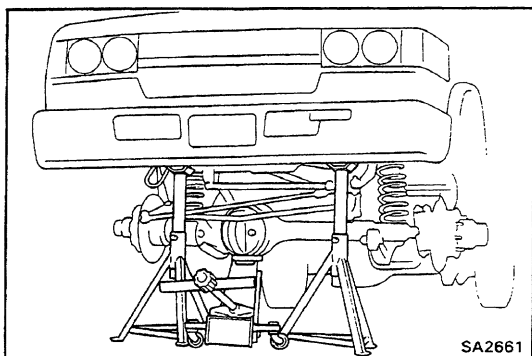



FRONT SUSPENSION COMPONENTS

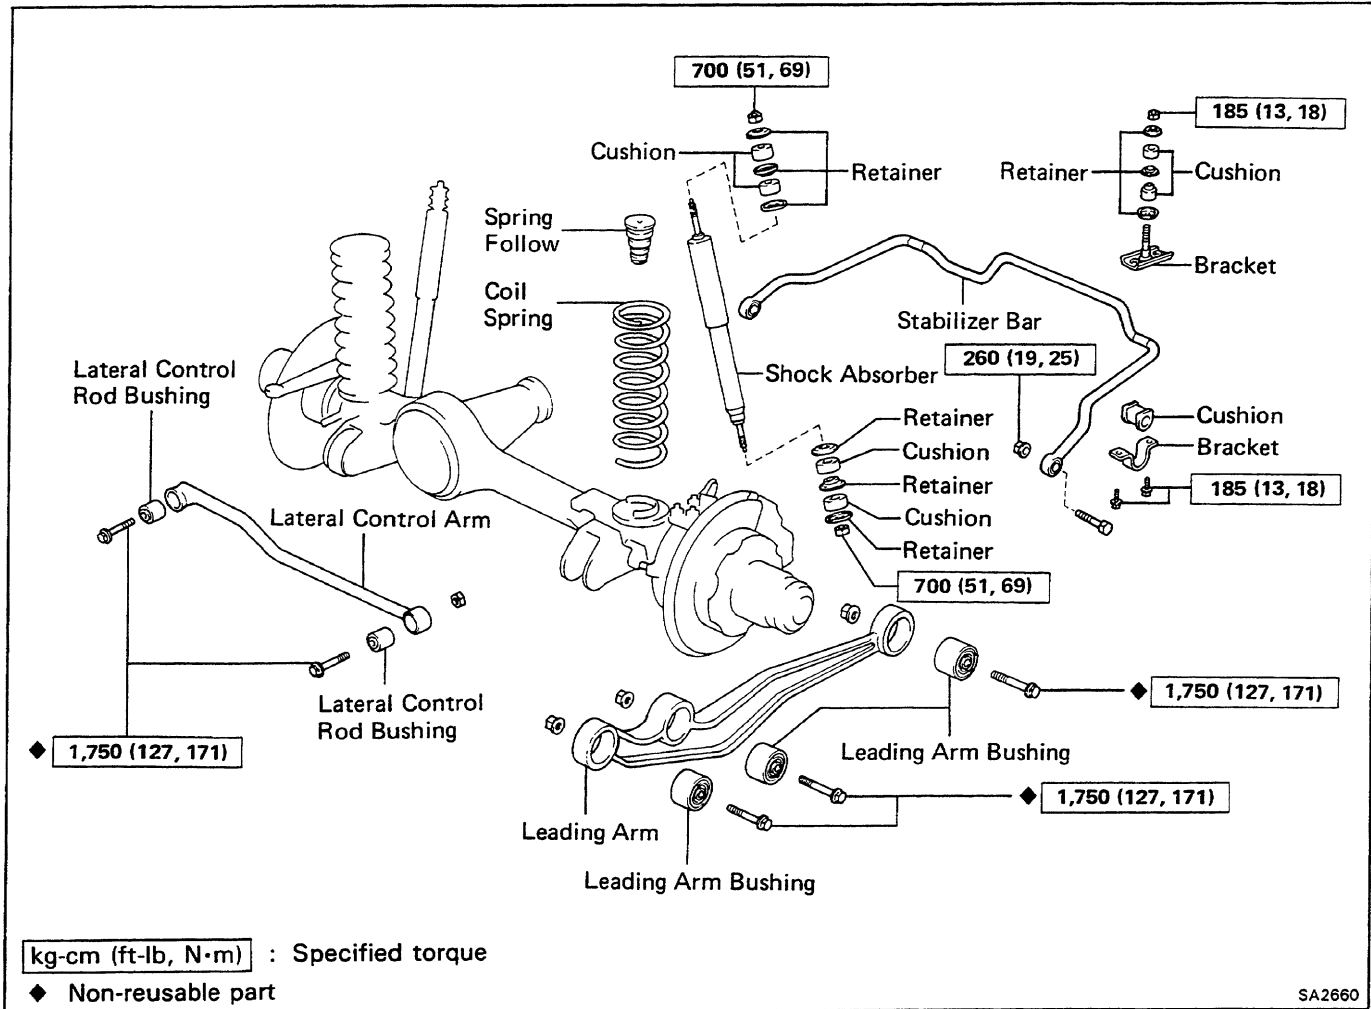

Coil Spring and Shock Absorber REMOVAL OF COIL SPRING AND SHOCK ABSORBER

1. JACK UP AND SUPPORT BODY

Jack up and support the body on stands.

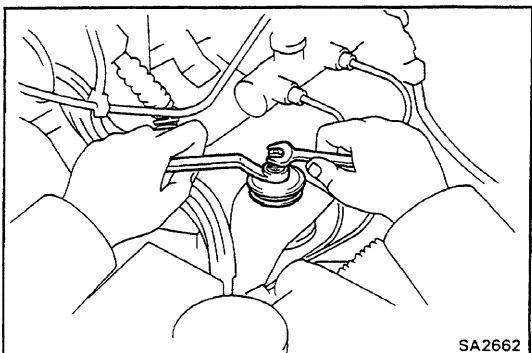

2. REMOVE FRONT SHOCK ABSORBER

- Jack up and support the axle housing.
- Hold the piston rod, and remove the upper mounting nut.