
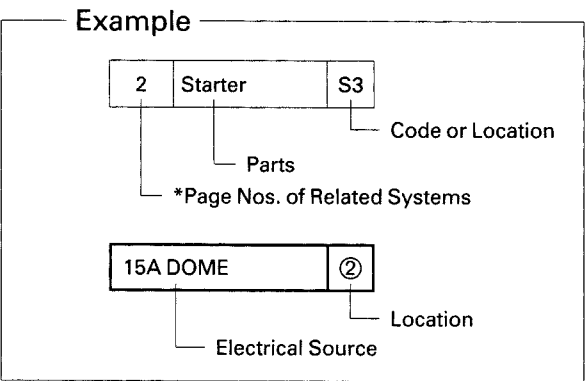


POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

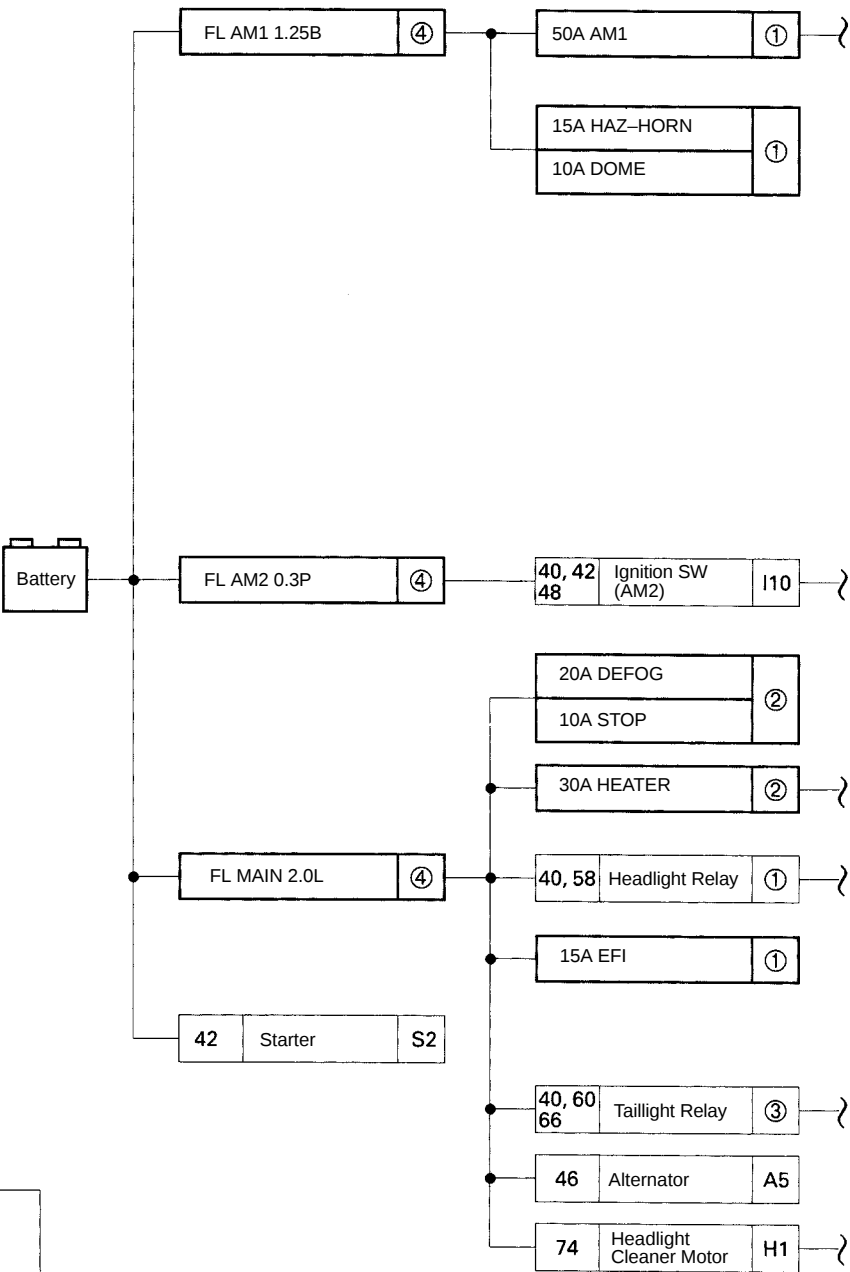

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 16) (2) : Fuse Block (See page 18) (3) : R/B No. 1 (See page 18)

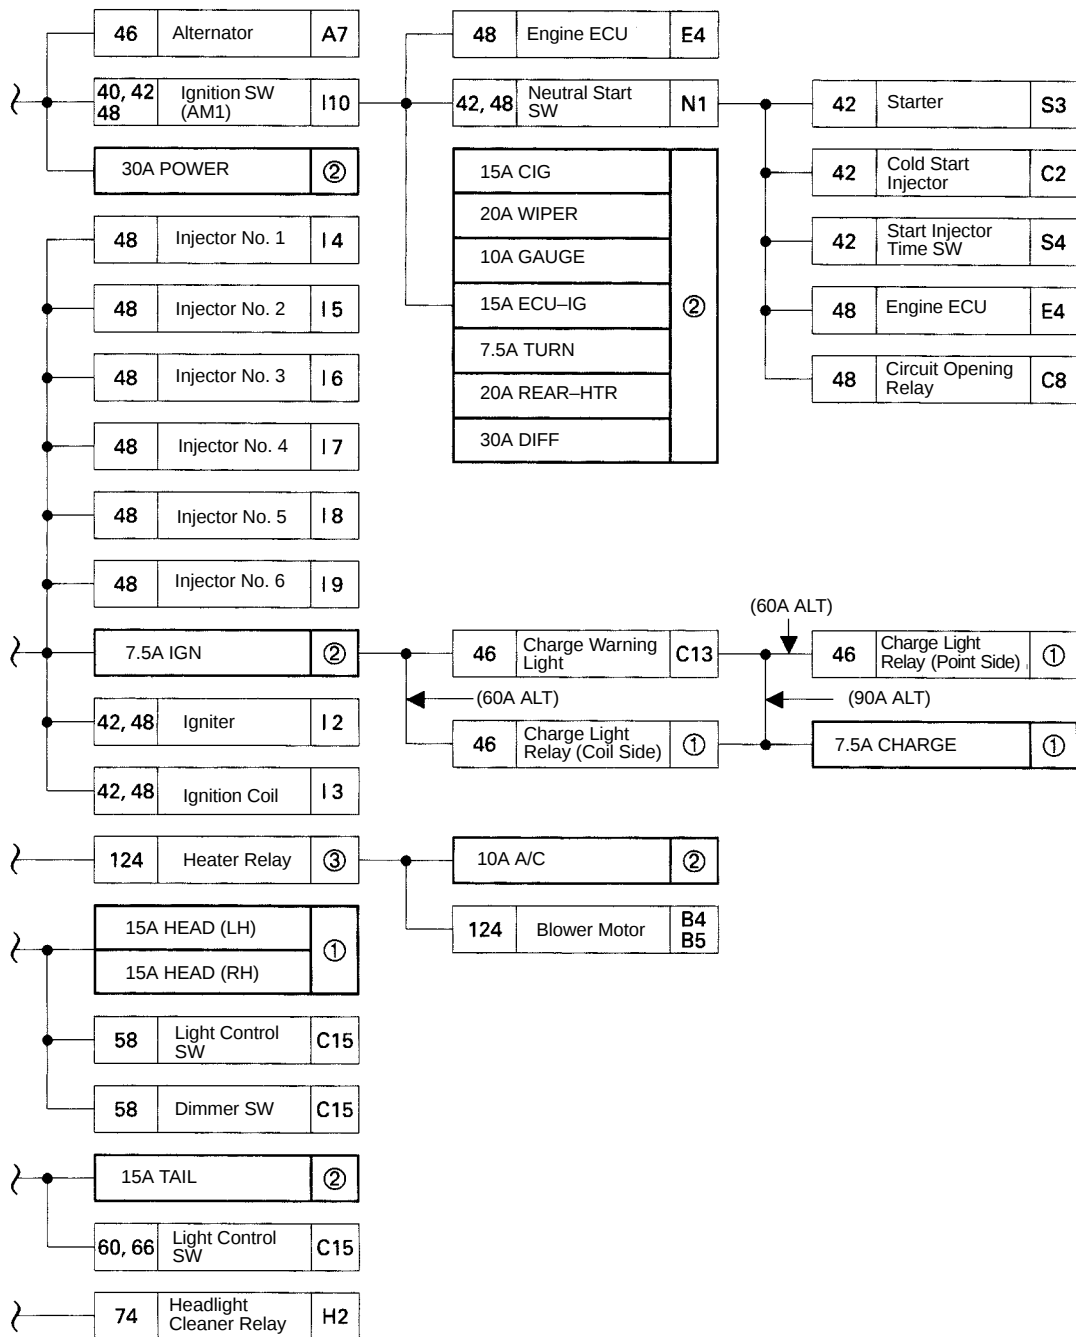

(4) : Fusible Link (F8, F9, F10 See on page19)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	124	116	48	46	110	124	66	66 110	66	100 108	64	116	124					70	48	122	108	99	66				
			Parts		Code or Location		CB or Fuse		A/C Pressure SW	A/T Fluid Temp. Sensor	Air Flow Meter	Alternator	Auto Antenna Control Motor	A/C Amplifier	Ashtray	Auto Antenna Control SW	A/T Shift Lever Illumination	A/T Indicator SW	Back-Up Light SW	Brake Fluid Level SW	Blower High Relay	Blower Motor (for A/C)	Blower Motor (for Heater)	Blower Resistor	Back Door Courtesy SW	Check Connector	Cooling Fan Motor (for Engine Compartment)	Center Diff. Lock Control Relay	Cigarette Lighter	Cigarette Lighter Illumination
									A2	A3	A4	A6	A7	A8	A11	A12	A13	B1	B2	B3	B4	B5	B6	B7	C1	C3	C5	C6	C7	
①	7.5A	CHARGE					●																							
	15A	EFI				●																				●				
	15A	HEAD (LH)																												
	15A	HEAD (RH)																												
	15A	HAZ-HORN																												
	10A	DOME																							●		●			
②	15A	CIG					●				●																		●	
	15A	TAIL								●	●	●																		●
	10A	STOP																												
	20A	DEFOG																												
	20A	WIPER																												
	10A	GAUGE			●									●	●	●												●		
	7.5A	TURN																												
	15A	ECU-IG																												
	20A	REAR-HTR																												
	7.5A	IGN				●																								
	10A	A/C	●						●																					
	30A	DIFF																			●	●	●	●				●		
	30A	HEATER																			●	●	●	●						
	30A	POWER																												

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 16) (2) : Fuse Block (See page 18) (3) : R/B No. 1 (See page 18)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	70	92	48	108	60	72	76	70	48	116	66	74	58										
			Parts	Code or Location	Door Courtesy SW Rear RH	Door Lock Control Relay	Engine ECU	4WD Indicator SW	Front Clearance Light LH	Front Clearance Light RH	Front Turn Signal Light LH	Front Turn Signal Light RH	Front Washer Motor	Front Wiper Control Motor	Front Interior Light (w/ Moon Roof)	Front Interior Light (w/o Moon Roof)	Fuel Pump	Fuel Sender	Glove Box Light	Glove Box Light SW	Headlight Cleaner Relay	Headlight No. 1 LH	Headlight No. 1 RH	Headlight No. 2 LH	Headlight No. 2 RH	
																										CB or Fuse
①	7.5A	CHARGE																								
	15A	EFI			●	●											●									
	15A	HEAD (LH)																				●		●		
	15A	HEAD (RH)																					●		●	
	15A	HAZ-HORN								●	●															●
	10A	DOME	●												●	●										
②	15A	CIG																								
	15A	TAIL					●	●										●	●							
	10A	STOP				●																				
	20A	DEFOG																								
	20A	WIPER									●	●								●						
	10A	GAUGE				●	●											●								
	7.5A	TURN								●	●															
	15A	ECU-IG																								
	20A	REAR-HTR																								
	7.5A	IGN				●																				
	10A	A/C																								
	30A	DIFF																								
	30A	HEATER																								
	30A	POWER		●																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 16) (2) : Fuse Block (See page 18) (3) : R/B No. 1 (See page 18)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	66	64	72	62	60	64	72	62	60	124	70	102	78	84	96	104	112	48 62 86 96	86	
			Parts																				
			Code or Location																				
			CB or Fuse	R7	R8			R9			R12	R13	R14	R15	R17	R18	R19	R20	S1	S5	S6	S9	S10
①	7.5A	CHARGE																					
	15A	EFI																					
	15A	HEAD (LH)																					
	15A	HEAD (RH)																					
	15A	HAZ-HORN			●					●													
	10A	DOME												●					●	●			
②	15A	CIG															●	●			●		
	15A	TAIL	●				●					●											
	10A	STOP				●					●										●	●	
	20A	DEFOG													●								
	20A	WIPER														●	●						
	10A	GAUGE		●				●											●				
	7.5A	TURN			●					●													
	15A	ECU-IG																●				●	
	20A	REAR-HTR										●	●										
	7.5A	IGN																					
	10A	A/C																					
	30A	DIFF																					
	30A	HEATER																					
	30A	POWER																					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 16) (2) : Fuse Block (See page 18) (3) : R/B No. 1 (See page 18)

