


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 40)

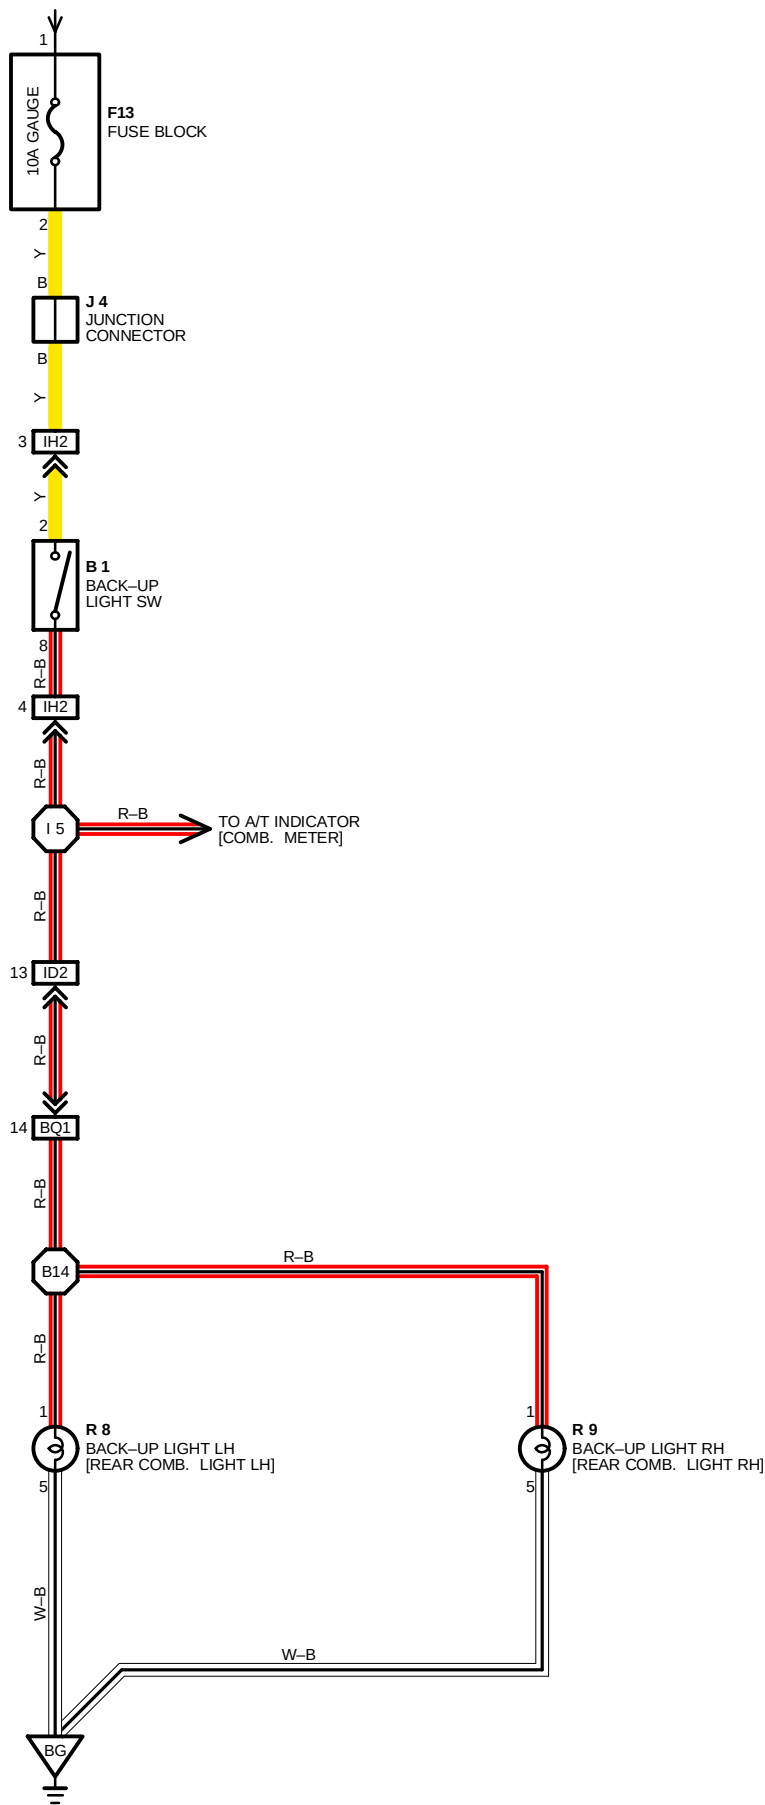

SERVICE HINTS

B 1 BACK-UP LIGHT SW

2-8 : CLOSED WITH SHIFT LEVER IN R POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	19	J 4	20	R 9	21
F13	20	R 8	21		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	24	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IH2	24	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BQ1	26	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	26	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	24	COWL WIRE	B14	28	FLOOR NO. 3 WIRE

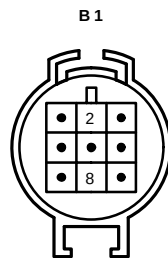

F13
(SEE PAGE 18)

