

CHARGING



SERVICE HINTS

A 6 (B) ALTERNATOR

- (B) 1-GROUND: **13.9–15.1 VOLTS** WITH ENGINE RUNNING AT **2000 RPM** AND **25° C (77°F)**
13.5–14.3 VOLTS WITH ENGINE RUNNING AT **2000 RPM** AND **115° C (239°F)**
 (B) 2-GROUND: **0–4 VOLTS** WITH IGNITION SW AT **ON** POSITION AND ENGINE NOT RUNNING

CHARGE LIGHT RELAY (60A ALT)

- (2) 1– (2) 2: CLOSED WITH IGNITION SW **ON** POSITION AND ENGINE NOT RUNNING



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 5	A 19	C13	A 20	F13	20
A 6	B 19	F 8	B 19		
C12	B 20	F10	A 19		



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	16	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	22	FRONT SIDE OF LEFT FENDER



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	22	ENGINE ROOM MAIN WIRE	I 6	24	COWL WIRE

