


COOLING FAN

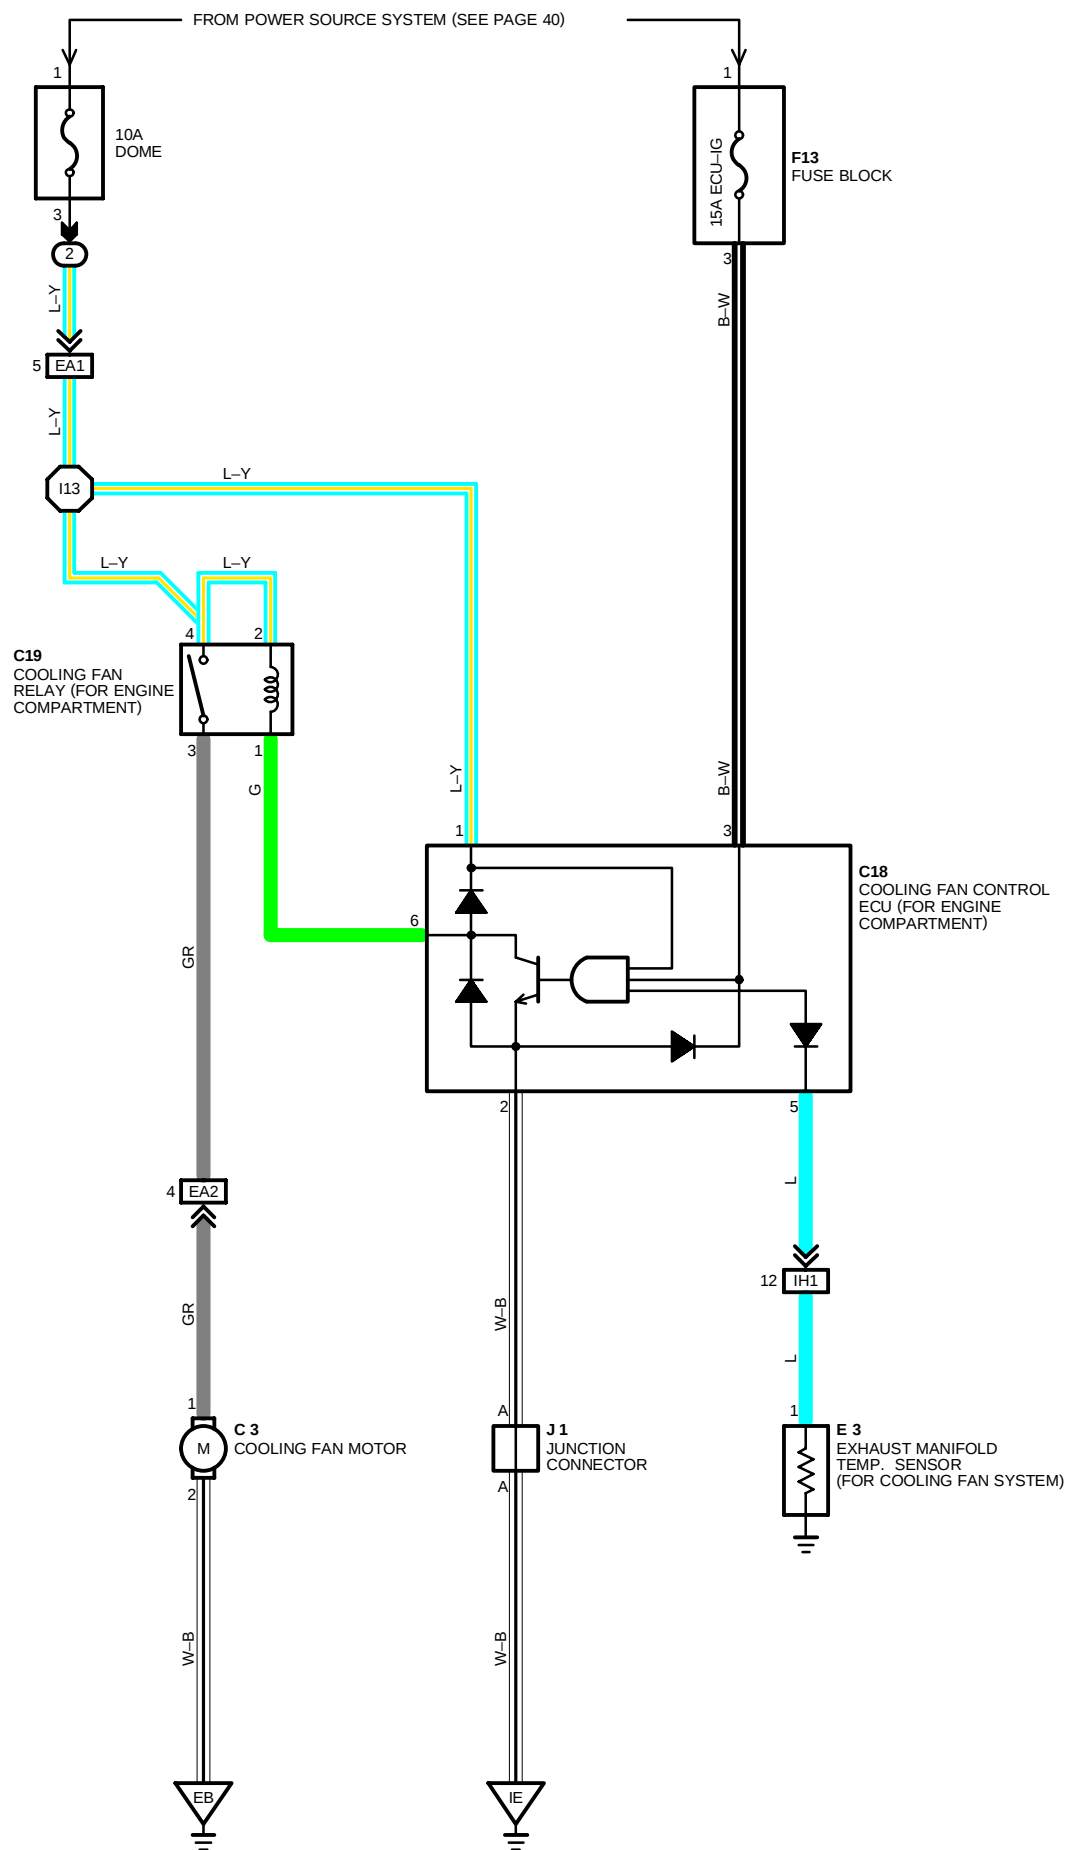

SERVICE HINTS

C18 COOLING FAN CONTROL ECU

- 1-GROUND : ALWAYS APPROX. **12** VOLTS
- 3-GROUND : APPROX. **12** VOLTS WITH IGNITION SW AT **ON** POSITION
- 2-GROUND : ALWAYS CONTINUITY

C19 COOLING FAN RELAY

- 3-4: CLOSED WITH IGNITION SW ON AND EXHAUST MANIFOLD TEMP. OVER **100°C (180°F)**

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 3	19	C19	20	F13	20
C18	20	E 3	19	J 1	20

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	16	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2	22	
IH1	24	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	22	FRONT SIDE OF LEFT FENDER
IE	24	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I13	24	COWL WIRE			

 
C 3 GRAY




C18 GRAY



C19

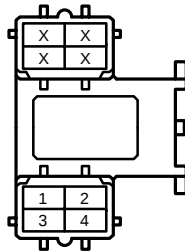

E 3

 

F13

(SEE PAGE 18)

J 1



(HINT : SEE PAGE 7)