


HEADLIGHT

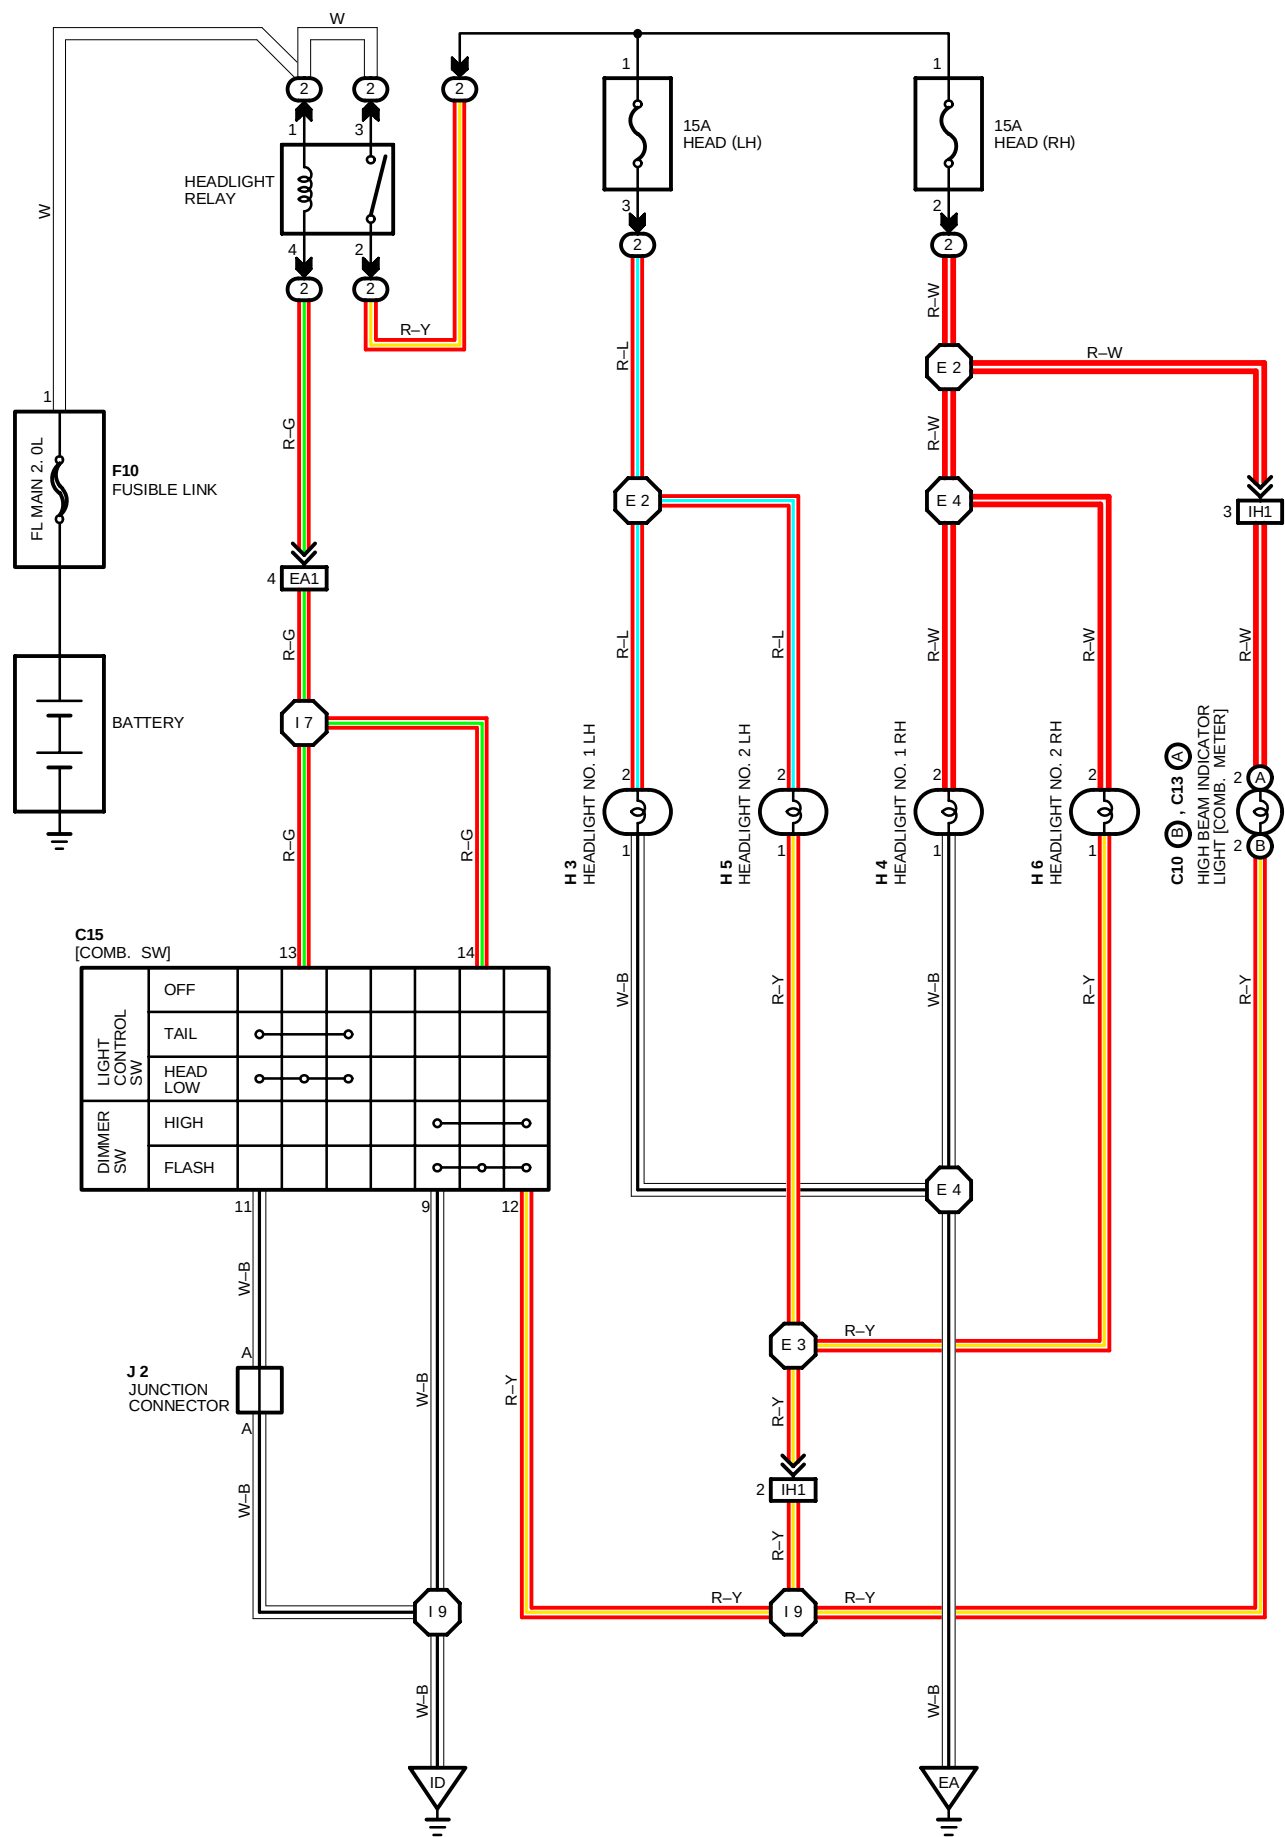

SERVICE HINTS

HEADLIGHT RELAY

(2) 3- (2) 2: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

C15 LIGHT CONTROL SW [COMB. SW]

13-11 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION

C15 DIMMER SW [COMB. SW]

14-9 : CLOSED WITH DIMMER SW AT **FLASH** POSITION

12-9 : CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C10	B	20	F10	19	H 5	19
C13	A	20	H 3	19	H 6	19
C15		20	H 4	19	J 2	20

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	16	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IH1	24	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	22	FRONT SIDE OF RIGHT FENDER
ID	24	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	22	ENGINE ROOM MAIN WIRE	I 7	24	COWL WIRE
E 3			I 9		
E 4					

 
C10 **B** BROWN



C13 **A** BLUE

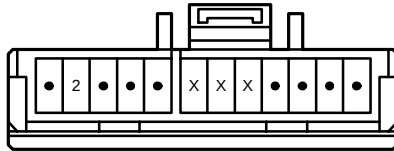

C15 BLACK

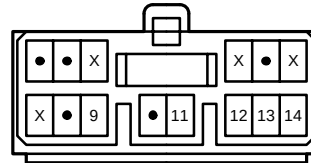

F10



H 3, H 4 BROWN



H 5, H 6 BLACK



J 2



(HINT : SEE PAGE 7)