


# HEADLIGHT CLEANER

FROM POWER SOURCE SYSTEM (SEE PAGE 40)

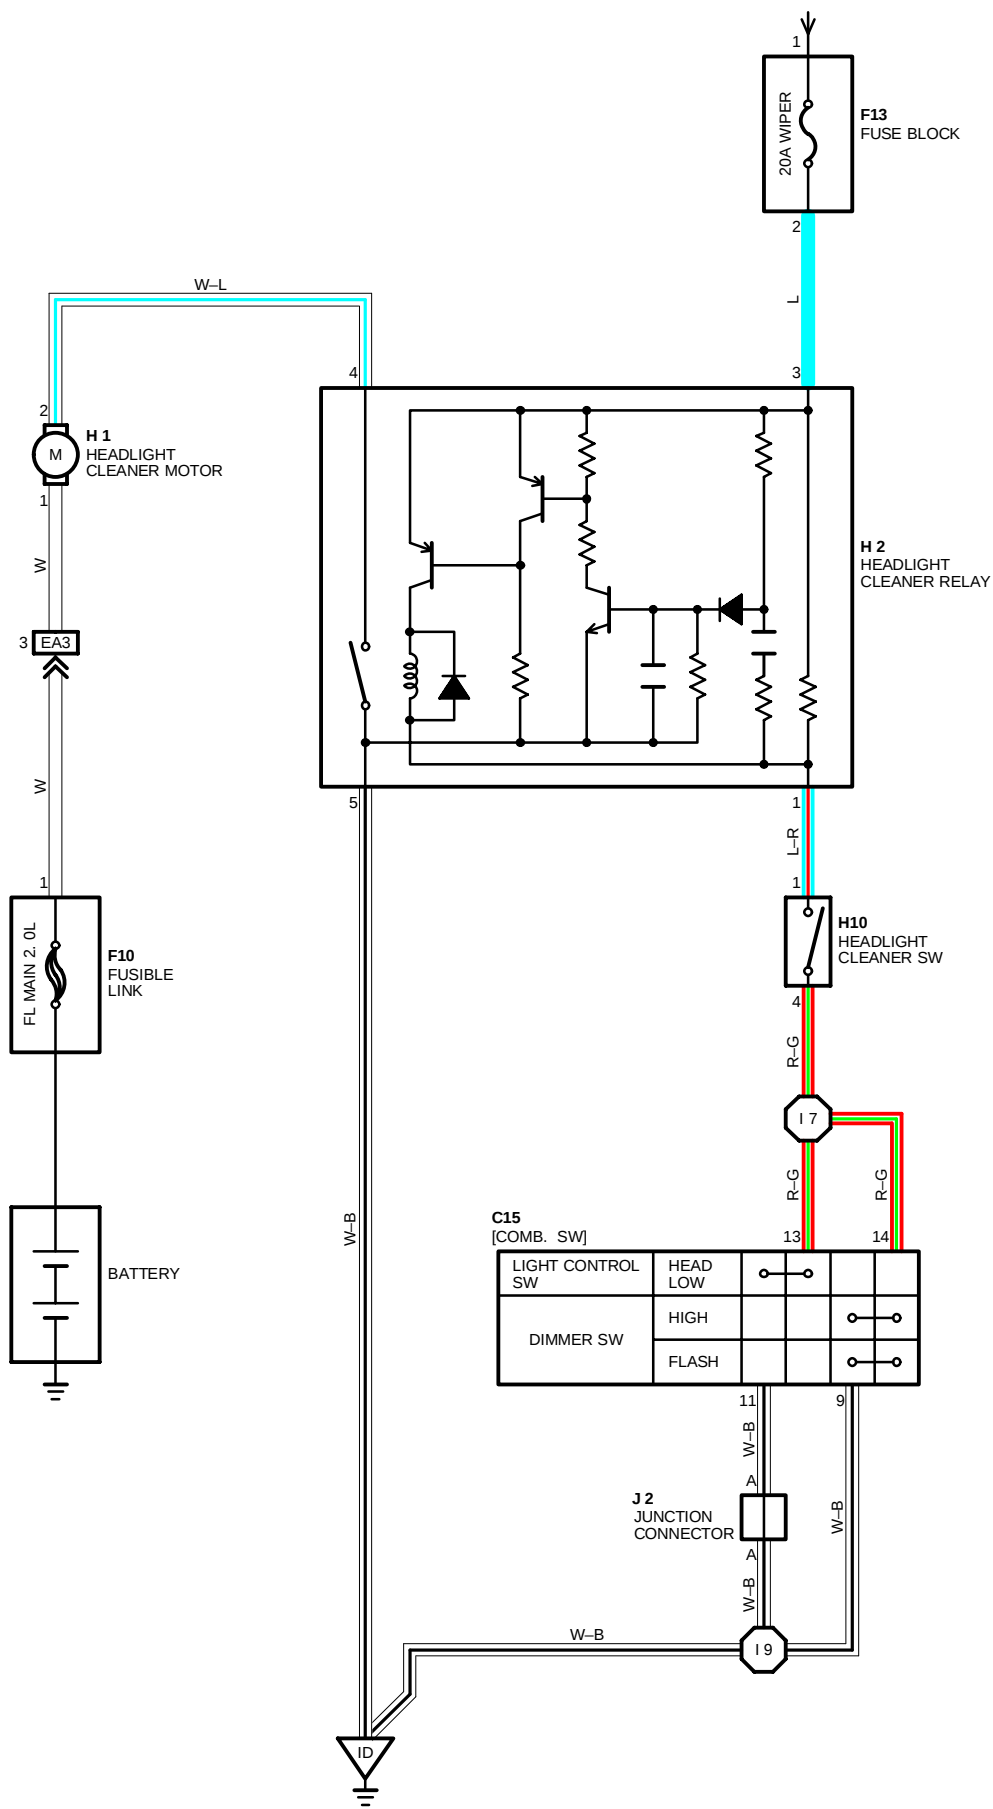

## SERVICE HINTS

### H 2 HEADLIGHT CLEANER RELAY

5-4: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION AND HEADLIGHT CLEANER SW ON  
CLOSED WITH DIMMER SW AT **FLASH** POSITION AND HEADLIGHT CLEANER SW ON

## ○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| C15  | 20       | H 1  | 19       | J 2  | 20       |
| F10  | 19       | H 2  | 19       |      |          |
| F13  | 20       | H10  | 20       |      |          |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

 

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|------------------------------------------------------------|
| EA3  | 22       | COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)          |

## ▽ : GROUND POINTS



| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| I D  | 24       | LEFT KICK PANEL        |

## ○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I 7  | 24       | COWL WIRE                       | I 9  | 24       | COWL WIRE                       |

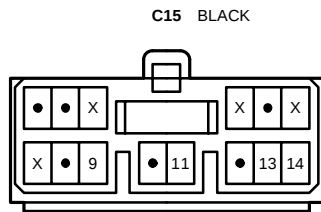

F13  
(SEE PAGE 18)

 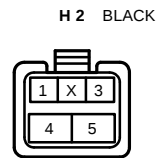

(HINT : SEE PAGE 7)