


STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 40)

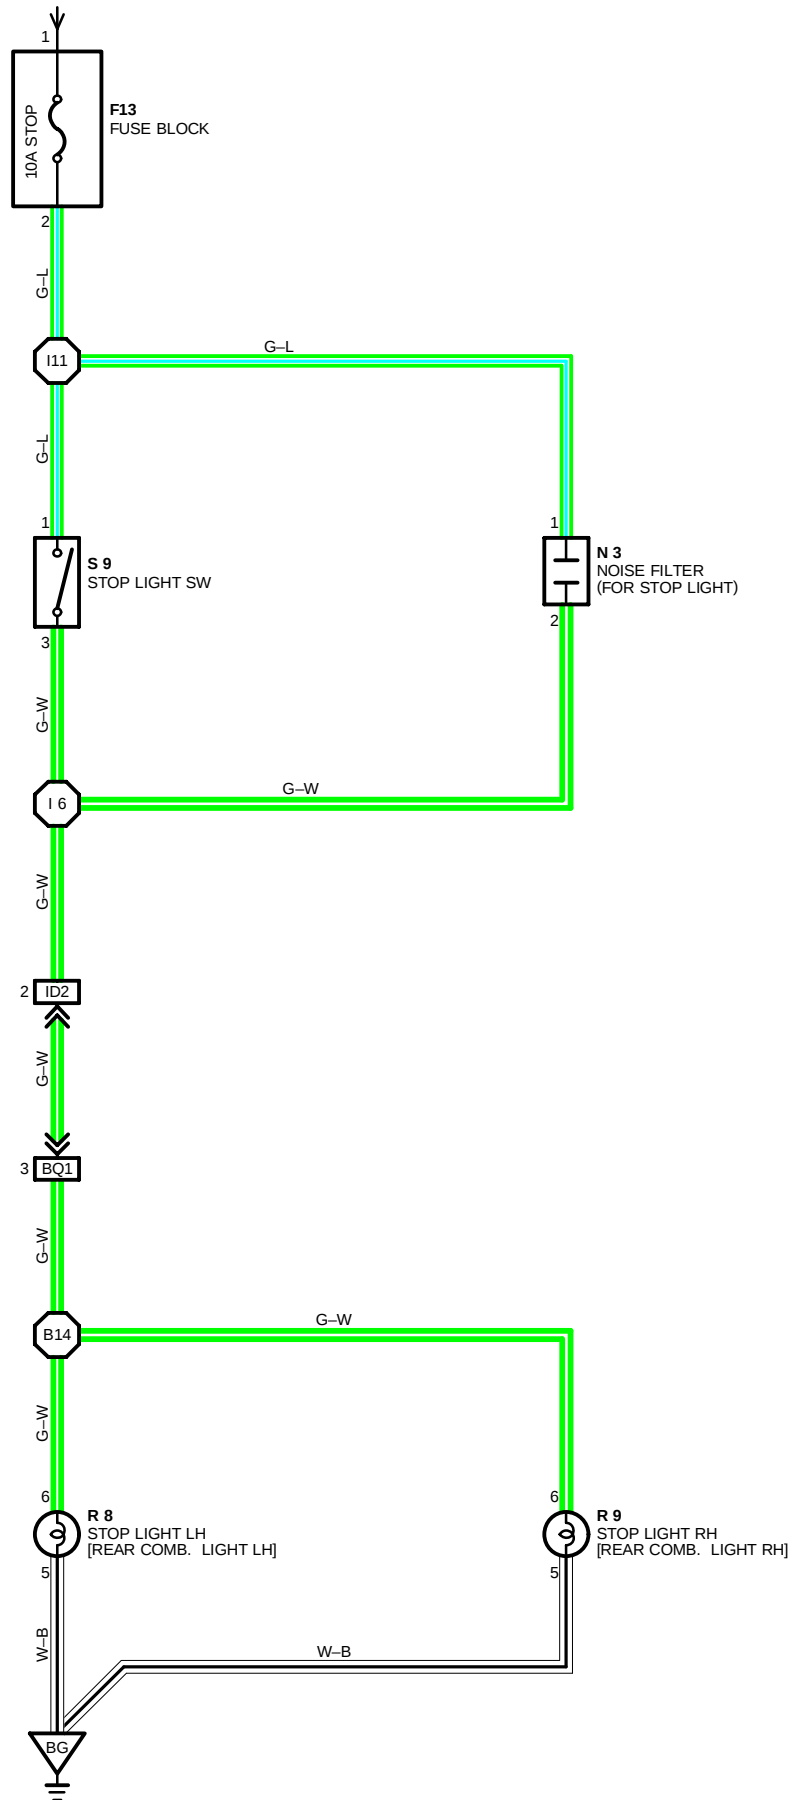

SERVICE HINTS

S 9 STOP LIGHT SW

1-3: CLOSED WITH BRAKE PEDAL DEPRESSED

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F13	20	R 8	21	S 9	20
N 3	20	R 9	21		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	24	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BQ1	26	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	26	LOWER BACK PANEL CENTER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 6	24	COWL WIRE	B14	28	FLOOR NO. 3 WIRE
I11					

F13

(SEE PAGE 18)

 N 3 BLACK



R 8, R 9



S 9

