


HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

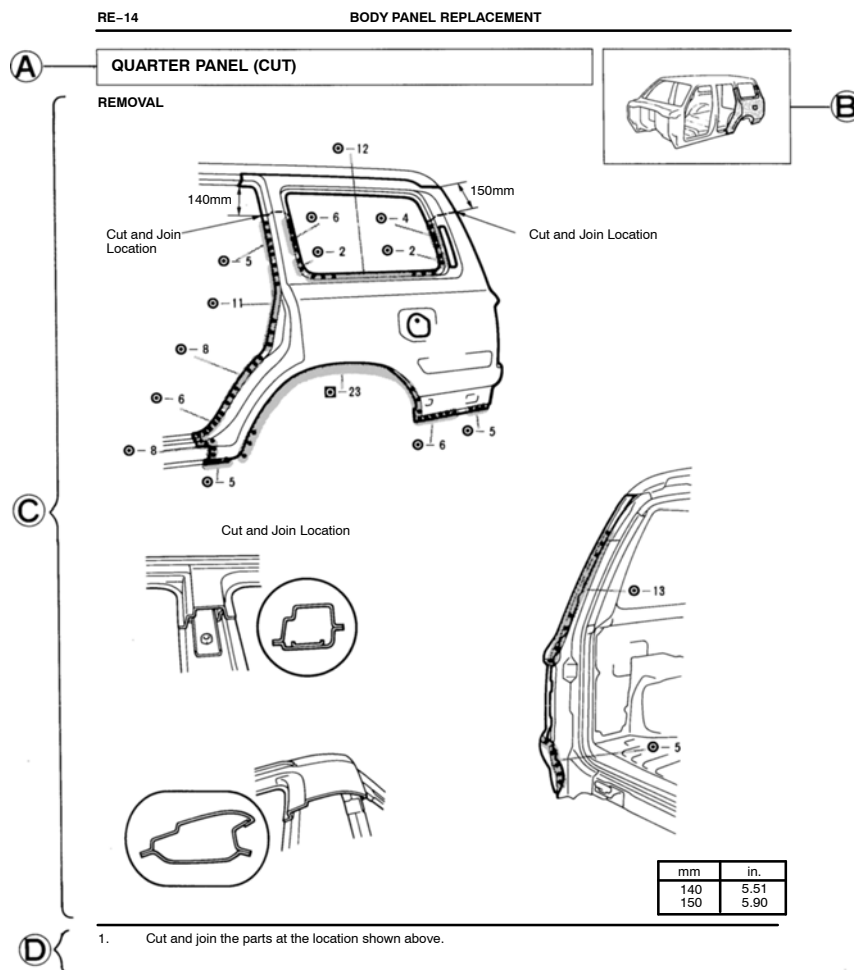

A : REPLACEMENT PARTS AND METHOD

QUARTER PANEL (CUT)

Replacement method
 (ASSY) Assembly replacement
 (CUT) Major cutting (less than 1/2 of parts used)
 (CUT-H) Half cutting (about 1/2 of parts used)
 (CUT-P) Partial cutting (most of parts used)
 Replacement Parts


B : PARTS LOCATION

C : REMOVAL DIAGRAM

Describes in detail removal of the damaged parts involving repair by cutting.

D : REMOVAL GUIDE

Provides additional information to more efficiently help you perform the removal.

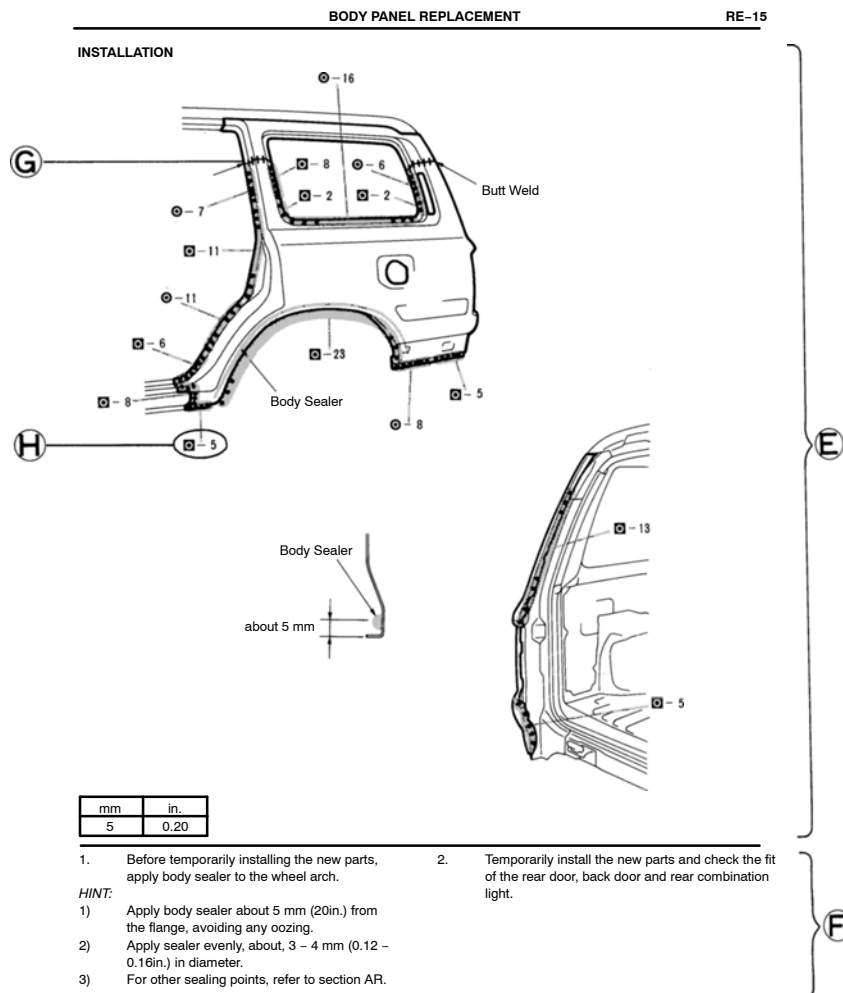

- E : INSTALLATION DIAGRAM**
Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.
- F : INSTALLATION GUIDE**
Provides additional information to more efficiently help you perform the installation.
- G : SYMBOLS**
See page [IN-4](#).
- H : ILLUSTRATION OF WELD POINTS**
Weld method and panel position symbols.
See page [IN-5](#).