

DESCRIPTION

The alternator is a small, high speed, high performance type with an IC regulator incorporated. CH043-01
The IC regulator uses integrated circuits and controls the voltage produced by the alternator.

PRECAUTIONS

1. Check that the battery cables are connected to the correct terminals. CH00J-04
2. Disconnect the battery cables when the battery is given a quick charge.
3. Do not perform tests with a high voltage insulation resistance tester.
4. Never disconnect the battery while the engine is running.