


# KNOCK SENSOR


EG0TU-03

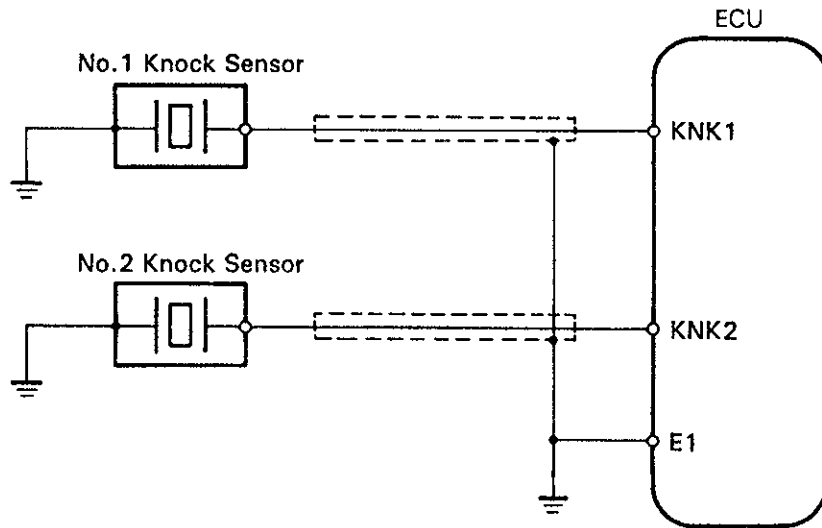

P02762

Z06703

EG

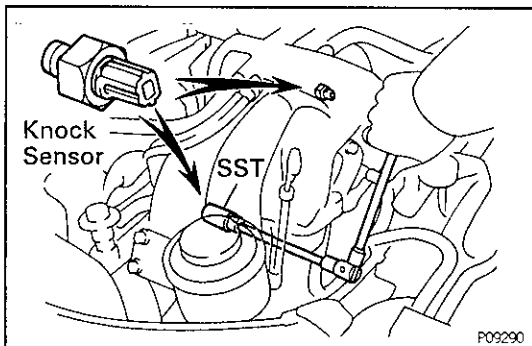


P09290

## KNOCK SENSORS INSPECTION

EG0TV-02

### 1. REMOVE KNOCK SENSOR


- (a) Disconnect the knock sensor connector.
- (b) Using SST, remove the knock sensor.  
SST 09816-30010

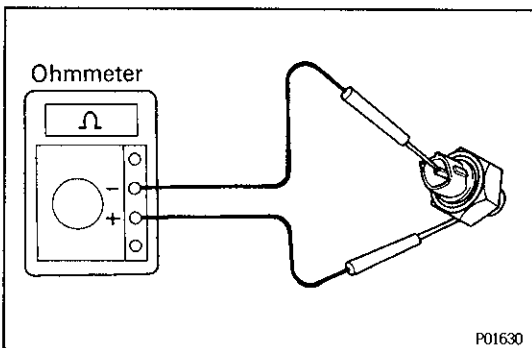

P01630

### 2. INSPECT KNOCK SENSOR

Using an ohmmeter, check that there is no continuity between the terminal and body.  
If there is continuity, replace the sensor.

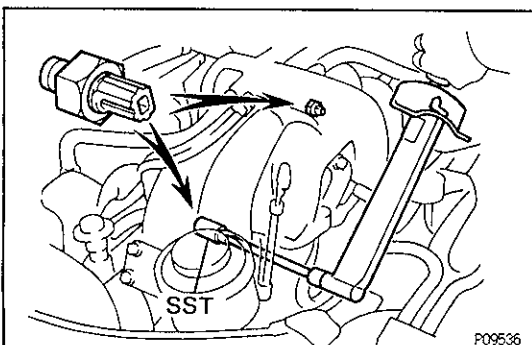

P09536

### 3. REINSTALL KNOCK SENSOR

- (a) Using SST, install the knock sensor.  
SST 09816-30010  
Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)
- (b) Connect the knock sensor connector.