
 



A C CONTROL ASSEMBLY

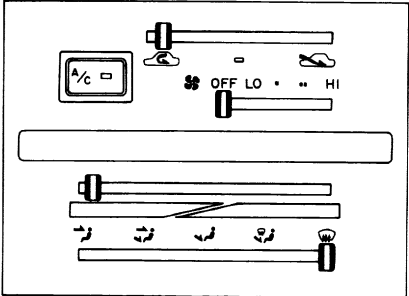

Blower Switch



 A/C Switch



Temperature Control Resistor



AC2716
S-6-2
AC2752 GA-2-2-C


Blower Switch

INSPECTION OF SWITCH

INSPECT SWITCH CONTINUITY

Terminal Switch position	1	8	9	11	12	Illumination	
						6	7
OFF							
LO							
• (M1)							
• (M2)							
HI							

If continuity is not as specified, replace the switch.

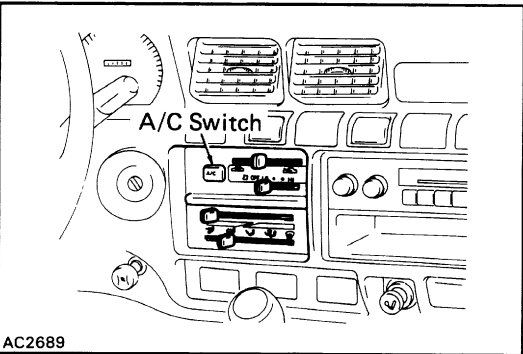


A/C Switch

REMOVAL OF SWITCH

1. DISCONNECT NEGATIVE CABLE FROM BATTERY
2. REMOVE A/C SWITCH

INSPECTION OF SWITCH

 INSPECT SWITCH CONTINUITY

	Terminal		
	Switch position	2	3
	OFF		
	ON		


S-6-2

If continuity is not as specified, replace the switch.

INSTALLATION OF SWITCH

1. INSTALL A/C SWITCH

2. CONNECT NEGATIVE CABLE TO BATTERY

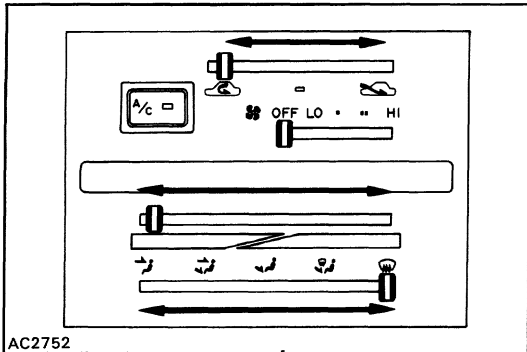


AC2752

A/C Control Levers

INSPECTION OF A/C CONTROL LEVERS

INSPECT A/C CONTROL LEVERS OPERATION

Move the control levers left and right, and check for stiffness and binding through the full range of the levers.

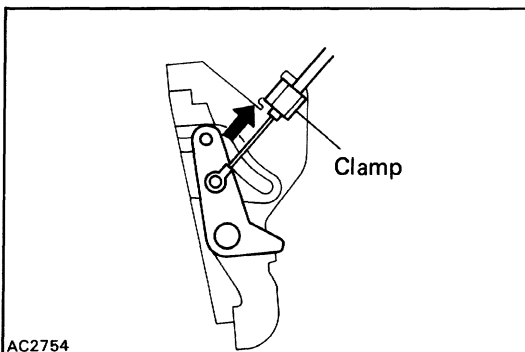


AC2754

ADJUSTMENT OF A/C CONTROL CABLES

1. ADJUST AIR INLET DAMPER CONTROL CABLE

Set the air inlet damper and the control lever to "FRESH" position, install the control cable and lock the clamp.

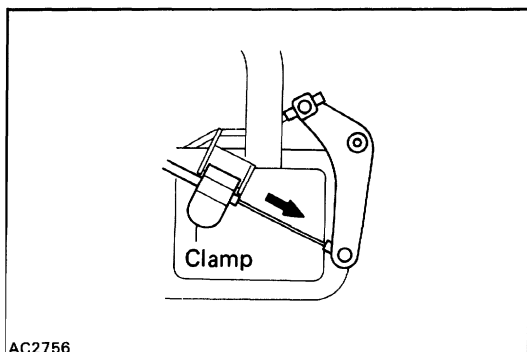

AC2756

2. ADJUST AIR MIX DAMPER CONTROL CABLE

Set the air mix damper and the control lever to "COOL" position, install the control cable and lock the clamp.