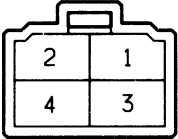


BLOWER RESISTORS

Front A/C Blower Resistor

INSPECTION OF BLOWER RESISTOR

INSPECT BLOWER RESISTOR CONTINUITY

 
 
 H-4-2	Terminal Condition	1	3	2	4
	Constant				

If continuity is not as specified, replace the blower resistor.

Rear Heater Blower Resistor

INSPECTION OF BLOWER RESISTOR

INSPECT BLOWER RESISTOR CONTINUITY

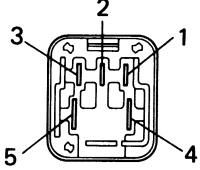
 H-3-2 H-2-2		Terminal Condition	A-1	A-2	A-3	B-1	B-2
		Constant					

If continuity is not as specified, replace the blower resistor.

HEATER RELAY

INSPECTION OF RELAY

INSPECT RELAY CONTINUITY

 BE1850 BE1844	Terminal Condition	1	2	3	4	5
	Constant					
	Apply battery voltage to terminals 1 and 3.					

If continuity is not as specified, replace the relay.

REAR HEATER RELAY

INSPECTION OF RELAY

Check the relay the same way as for the heater relay on page [AC-36](#).