

9. IF EVAPORATOR WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR

Add 40 – 50 cc (1.4 – 1.7 fl.oz.)

Compressor oil: ND OIL 6,

SUNISO No.5GS or equivalent

10. INSTALL CHARCOAL CANISTER WITH BRACKET**11. CONNECT NEGATIVE CABLE TO BATTERY****12. EVACUATE AIR FROM AIR CONDITIONING SYSTEM****13. CHARGE AIR CONDITIONING SYSTEM WITH**

REFRIGERANT AND CHECK FOR GAS LEAKAGE

Specified amount: 900 ± 50 g (31.74 ± 1.76 oz)

EVAPORATOR

REMOVAL OF EVAPORATOR

See Disassembly of Cooling Unit on page [AC-27](#).

INSPECTION OF EVAPORATOR**1. INSPECT EVAPORATOR FINS FOR BLOCKAGE**

If the fins are clogged, clean them with compressed air.

NOTICE: Never use water to clean the evaporator.

2. INSPECT FITTINGS FOR CRACKS OR SCRATCHES

Repair as necessary.

INSTALLATION OF EVAPORATOR

See Assembly of Cooling Unit on page [AC-28](#).