


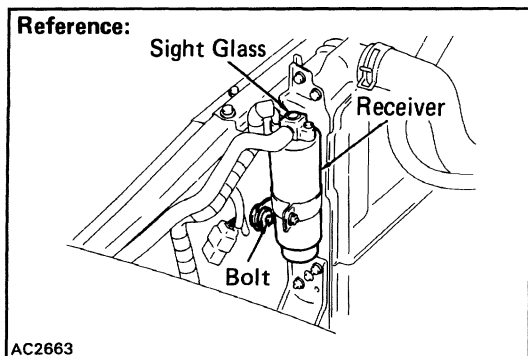

RECEIVER

ON-VEHICLE INSPECTION

INSPECT SIGHT GLASS, FUSIBLE PLUG AND FITTINGS FOR LEAKAGE

Use a gas leak tester. Repair as necessary.

REMOVAL OF RECEIVER


1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

2. REMOVE BATTERY

3. DISCONNECT TWO LIQUID TUBES FROM RECEIVER

HINT: Cap the open fittings immediately to keep moisture out of the system

4. REMOVE RECEIVER FROM RECEIVER HOLDER

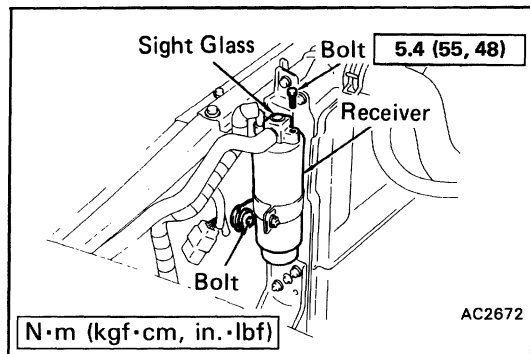

INSTALLATION OF RECEIVER

1. INSTALL RECEIVER IN RECEIVER HOLDER

HINT: Do not remove the blind plugs until ready for connection.

2. CONNECT TWO LIQUID TUBES TO RECEIVER

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

3. INSTALL BATTERY

4. IF RECEIVER WAS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR

Add 20 cc (0.7 fl.oz.)

Compressor oil: ND OIL 6,

SUNISO No.5GS or equivalent

5. EVACUATE AIR FROM REFRIGERATION SYSTEM

6. CHARGE SYSTEM WITH REFRIGERANT AND INSPECT FOR LEAKAGE OF REFRIGERANT

Specified amount: 900 ± 50 g (31.74 ± 1.76 oz)