

TROUBLESHOOTING

You will find the cause of trouble more easily by properly using the table shown below. In this table, the numbers indicate the order of priority of the causes of trouble. Check each part in the order shown. If necessary, replace the part.

[illegible]

AC-25	Condenser										
AC-29	Evaporator								4		
AC-30	Expansion valve									6	
AC-17	Magnetic clutch						7				
AC-24	Receiver										
AC-34	Water valve						9				
—	Heater radiator							4			
AC-5	Wiring or wiring connection		7	3					5	5	13
										7	
		4									
		4	11	12	7	5	6				
							1				
							1				3