


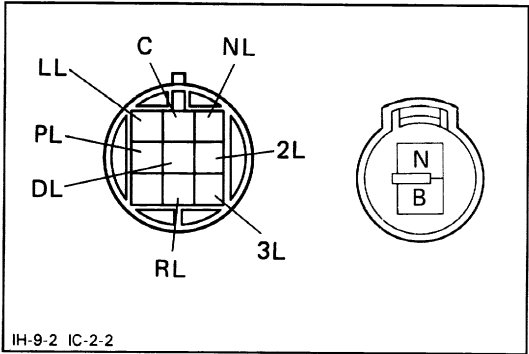


Neutral Start Switch

INSPECT NEUTRAL START SWITCH

Using an ohmmeter, check the continuity of the terminals for each switch position shown in the table below.

Terminal Switch position	B	N	C	PL	RL	NL	DL	3L	2L	LL
P range										
R range										
N range										
D range										
3 range										
2 range										
L range										

If continuity between terminals is not as specified, re-
place the switch.

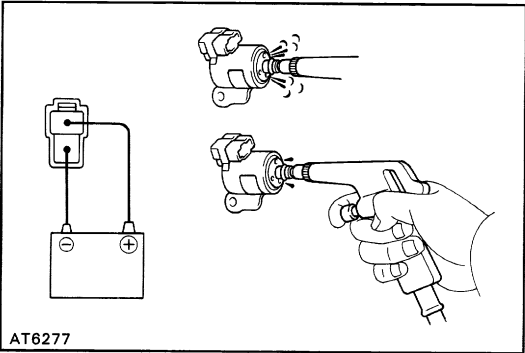

O/D Solenoid (w/ Cruise Control System)

CHECK SOLENOID SEAL

If there is foreign material in the solenoid valve, there will be no fluid control even with solenoid operation.

- (a) Applying compressed air, check that the solenoid valve opens.
- (b) When supply battery voltage to the solenoid, check that the solenoid valve does not leak the air.

If operation is not as specified, replace the solenoid.