



IGNITION SWITCH

Parts Location

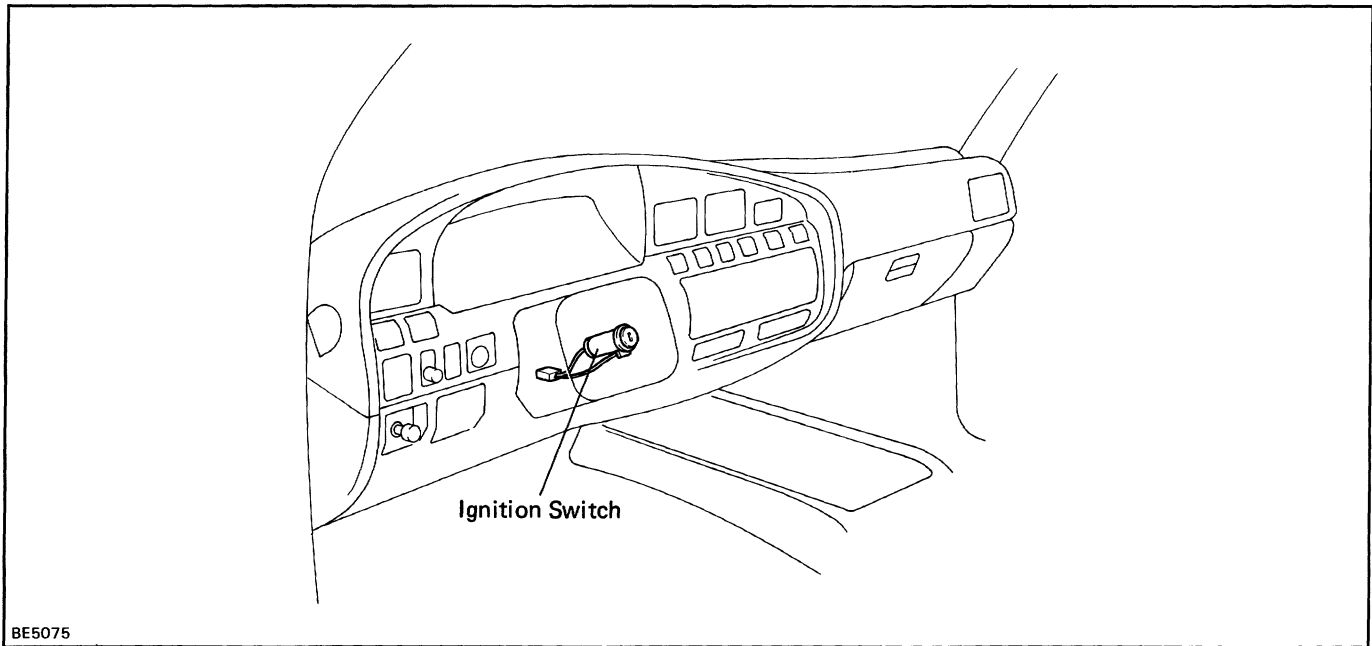

Wiring and Connector Diagrams

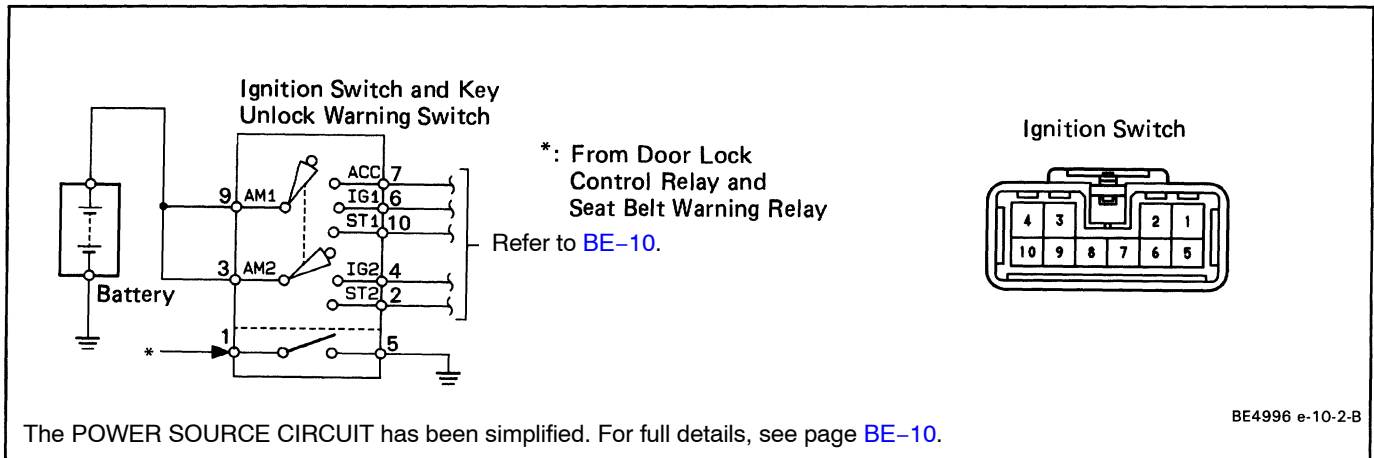

Parts Inspection

Ignition System

INSPECT SWITCH

(Ignition Switch/Continuity)

Terminal	2	3	4	6	7	9	10
Switch position							
LOCK							
ACC							
ON							
START							


Diagram illustrating the Ignition Switch and its connector terminals (1 through 10).


BE3582 e-10-2-B

If continuity is not as specified, replace the switch.

Key Confine Prevention System
1. INSPECT SWITCHES
(Key Unlock Warning Switch/Continuity)

OFF
ON

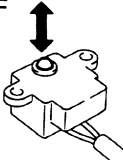

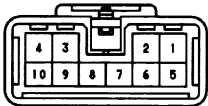

Terminal	1	5
Switch position		
OFF (Ignition Key removed)		
ON (Ignition Key set)		

BE2193 e-10-2B

(Door Courtesy Switch/Continuity)
See Step 2 on page [BE-44](#).
If continuity is not as specified, replace the switch.

2. INSPECT RELAY
See seat belt warning relay on page [BE-44](#).