
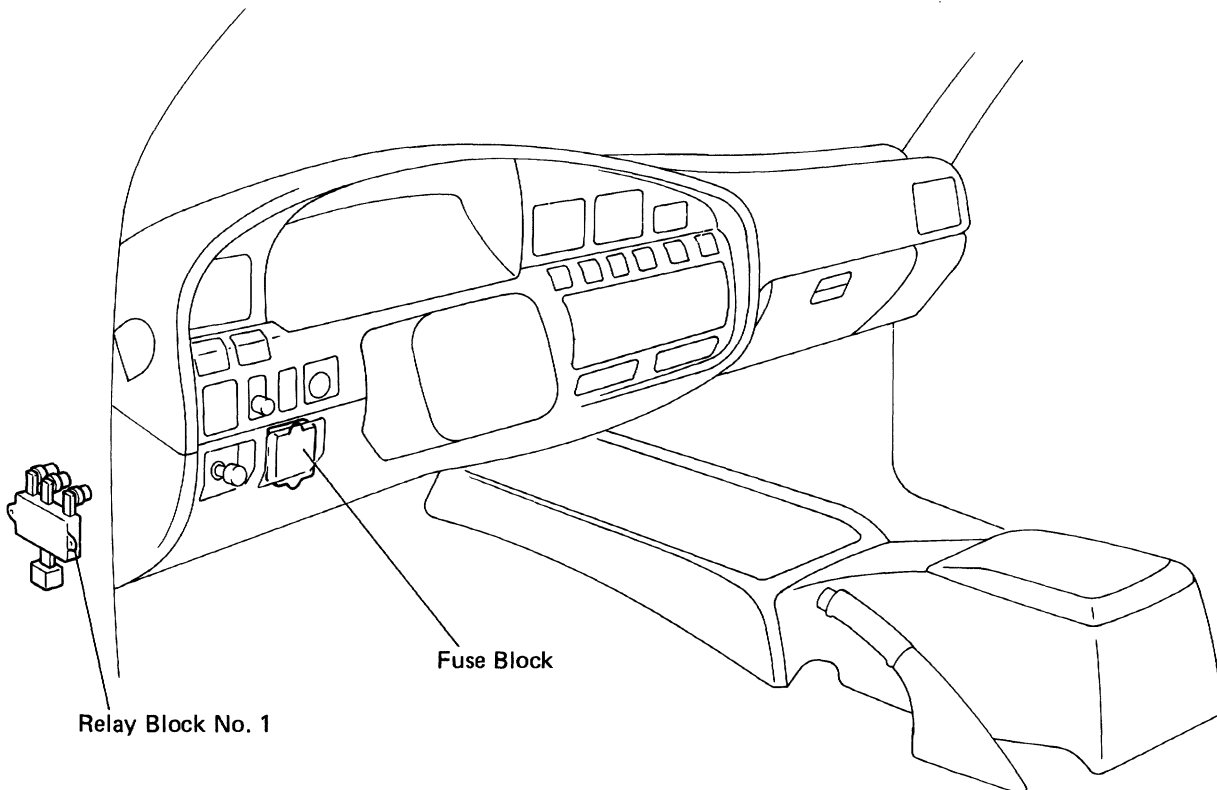



POWER SOURCE

Parts Location

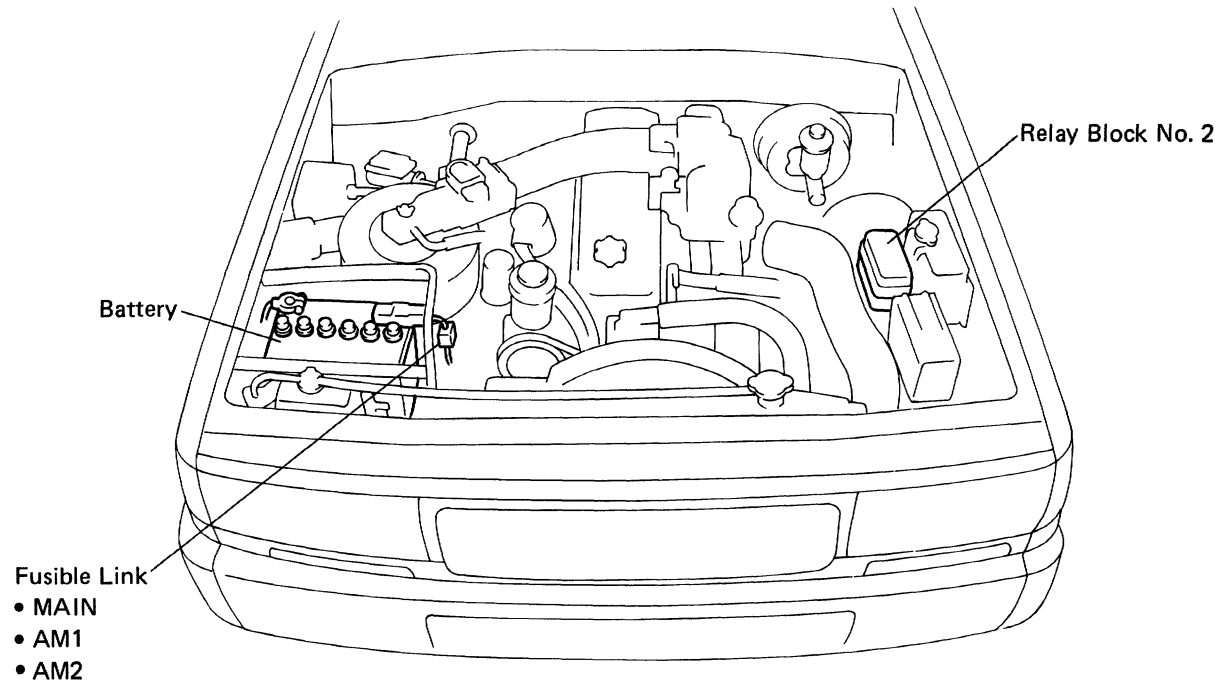

Parts Location (Cont'd)

Relay Block No. 2 (Engine Roomy

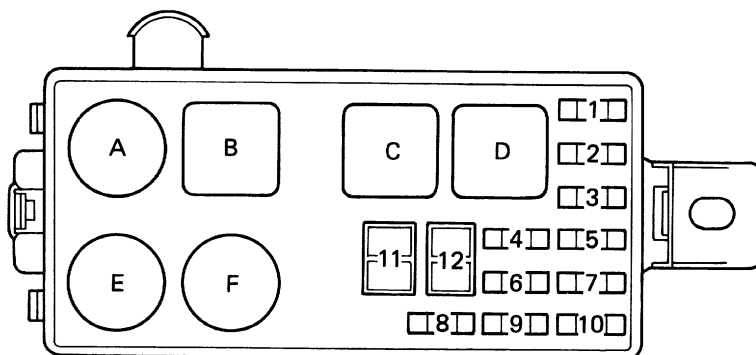


Fuse and High Current Fuses

1. HEAD (RH)	15A	7. HAZ-HORN	15A
2. HEAD (LH)	15A	8. —	
3. —		9. —	
4. CHARGE	7.5A	10. DOME	10A
5. —		11. AM1	50A
6. EFI	15A	12. —	

Relays

A. EFI Main Relay
B. Charge Light Relay
C. Headlight Control Relay
D. —
E. Horn Relay
F. —

Fuse Block (Instrument Panel)

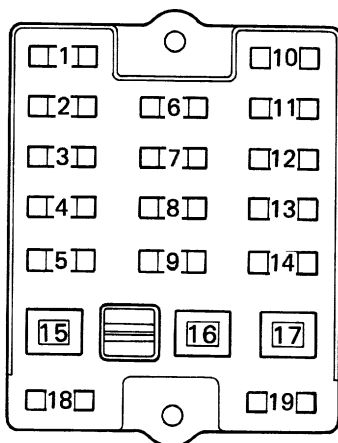


Fuse and Medium Current Fuse

1. CIG	15A	10. ECU-B	10A
2. TAIL	15A	11. REAR-HTR	20A
3. —		12. IGN	7.5A
4. STOP	10A	13. A/C	10A
5. DEFOG	20A	14. DIFF	20A
6. WIPER	20A	15. —	
7. GAUGE	10A	16. HEATER	30A
8. TURN	7.5A	17. POWER	30A
9. ECU-IG	15A	18. Spear	
		19. Spear	

Parts Location (Cont'd)

Relay Block No. 1 (Cowl Side)

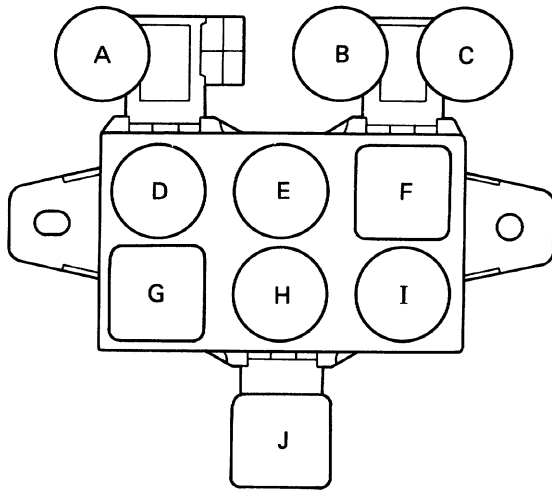

Relay

- A. Cooling Fan Relay
- B. Blower Hi Relay
- C. —
- D. Defogger Relay
- E. Power Main Relay
- F. Turn Signal Flasher
- G. Heater Relay
- H. Taillight Control Relay
- I. —
- J. Circuit Opening Relay

Wiring Diagram

