



# POWER MIRROR CONTROL SYSTEM

## Parts Location

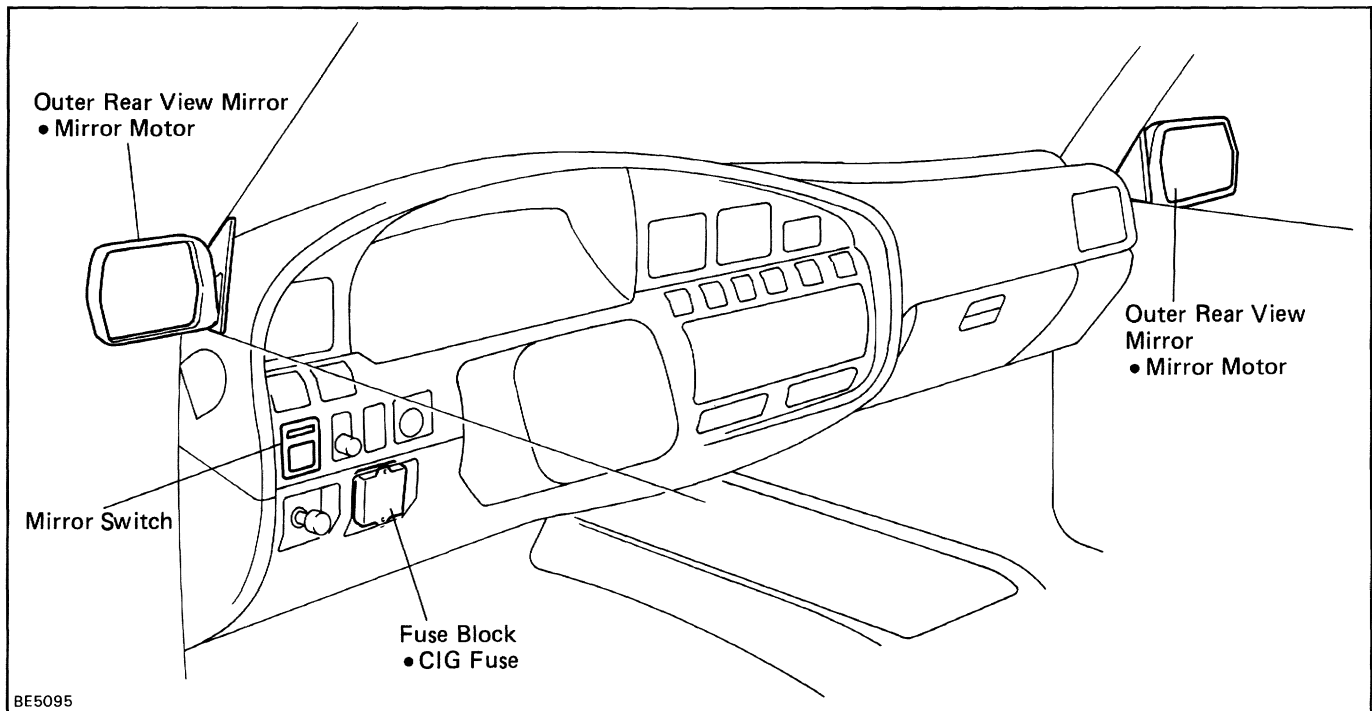

## Wiring and Connector Diagrams

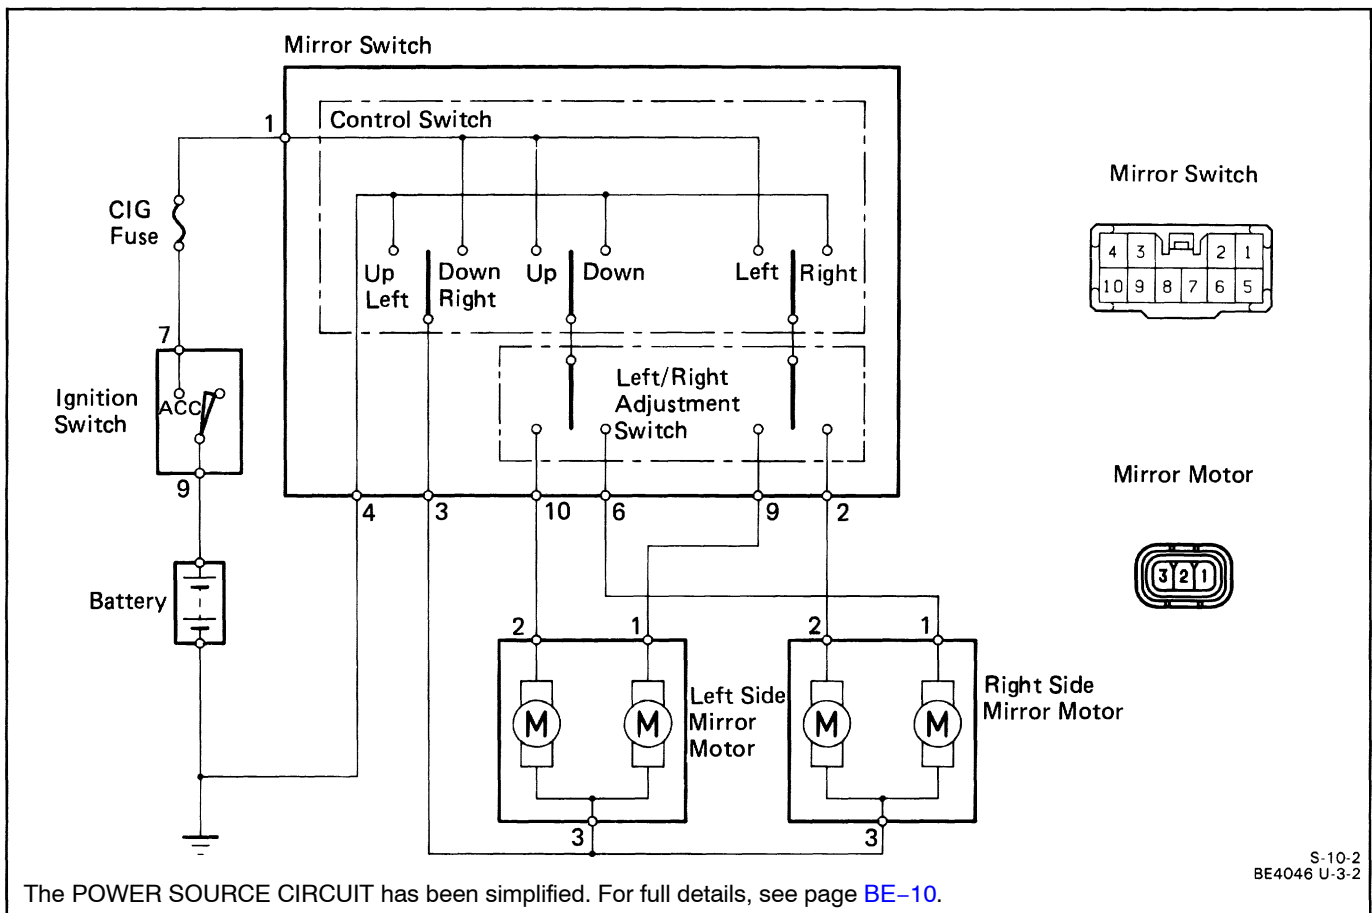


## Troubleshooting

| Problem                                       | Possible cause                                                                           | Remedy                                                                                 | Page                         |
|-----------------------------------------------|------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|------------------------------|
| Remote control mirror system does not operate | CIG fuse faulty<br>Mirror switch faulty<br>Mirror motor faulty<br>Wiring or ground fault | Replace fuse and check for short<br>Check switch<br>Check motor<br>Repair as necessary | BE-4, BE-6<br>BE-69<br>BE-69 |

## Parts Inspection

### 1. INSPECT MIRROR SWITCH (Continuity)

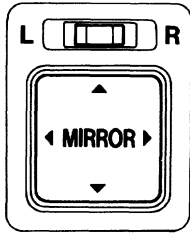


LEFT SIDE ↔ RIGHT SIDE

UP

LEFT ◀ OFF ▶ RIGHT

 DOWN




BE2357 S-10-2

| Left/Right adjustment switch position | LEFT SIDE |   |   |   |    | OFF |   |   | RIGHT SIDE |   |   |   |   |
|---------------------------------------|-----------|---|---|---|----|-----|---|---|------------|---|---|---|---|
| Terminal                              | 1         | 3 | 4 | 9 | 10 | 1   | 3 | 4 | 1          | 2 | 3 | 4 | 6 |
| Control switch position               |           |   |   |   |    |     |   |   |            |   |   |   |   |
| OFF                                   |           |   |   |   |    |     |   |   |            |   |   |   |   |
| UP                                    | ○         | ○ | ○ | ○ | ○  |     | ○ | ○ | ○          |   | ○ | ○ | ○ |
| DOWN                                  | ○         | ○ | ○ | ○ | ○  | ○   | ○ |   | ○          |   | ○ | ○ | ○ |
| LEFT                                  | ○         | ○ | ○ | ○ |    |     | ○ | ○ | ○          | ○ | ○ | ○ |   |
| RIGHT                                 | ○         | ○ | ○ | ○ |    | ○   | ○ |   | ○          | ○ | ○ | ○ |   |

If continuity is not as specified, replace switch.

### 2. INSPECT MIRROR MOTOR

Connect the positive (+) lead from the battery to terminal in column "A" and the negative (-) lead to terminal in column "B", check that the mirror operates in column "C".

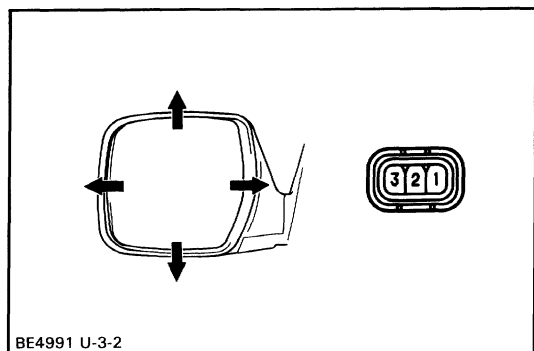

| A (+) | B (-) | C (Operation)                    |
|-------|-------|----------------------------------|
| 2     | 3     | Mirror turns upward ( ↑ )        |
| 3     | 2     | Mirror turns downward ( ↓ )      |
| 1     | 3     | Mirror turns to left side ( ← )  |
| 3     | 1     | Mirror turns to right side ( → ) |

If operation is not as specified, replace the mirror assembly.