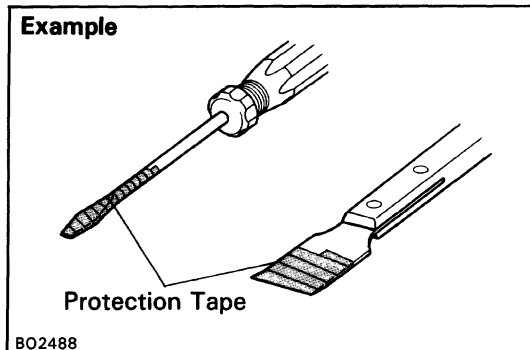

BODY

GENERAL INFORMATION

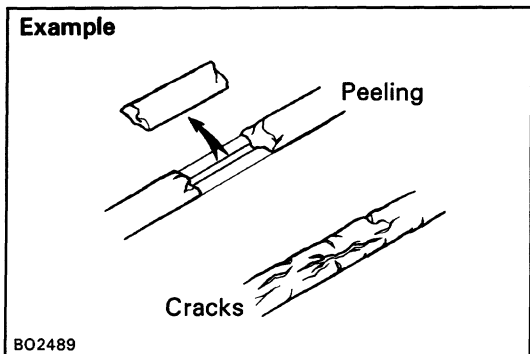
If there is a possibility that the body and/ or parts may be damaged, first remove the danger before performing repair operations.

Example:

1. Apply protection tape to the body adjacent to the body part when removed and installing.



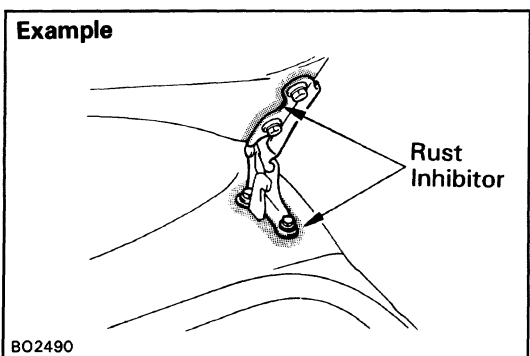
2. When prying off the body parts with a screwdriver or scraper etc., be sure to apply protection tape to the tip or blade to prevent damage to the paint film or body part.



If anti-rust agents are damaged while repairing other parts, be sure to repair the anti-rust agent.

Example:

1. If body sealer, paint film or undercoat are damaged by peeling, cracks, etc., be sure to repair each with an anti-rust agent.

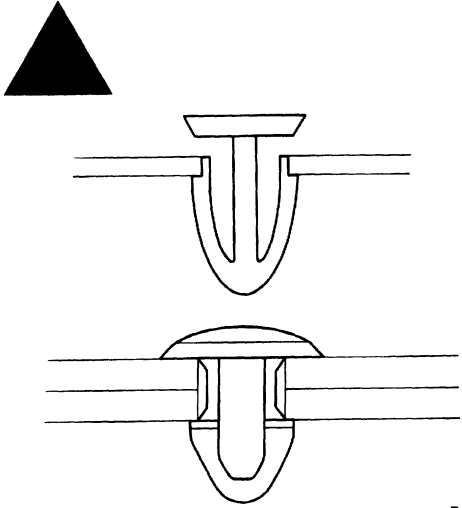
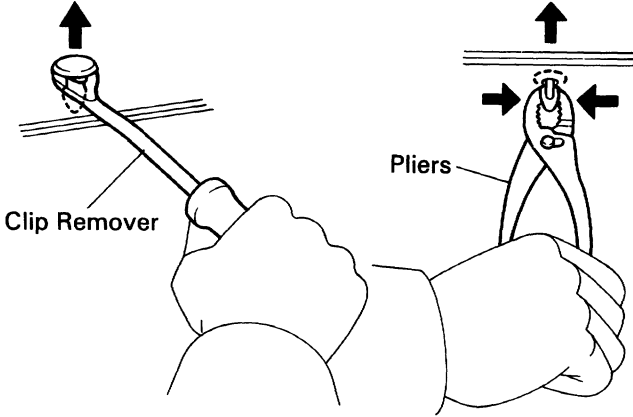
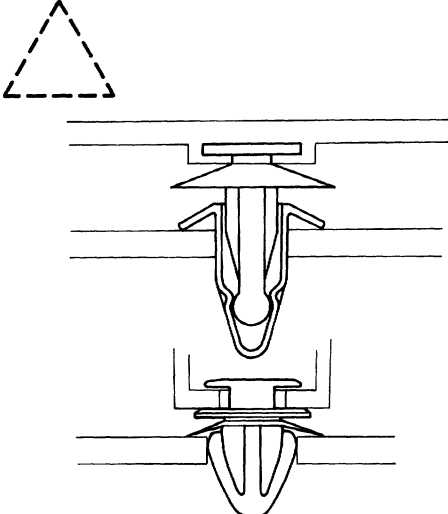
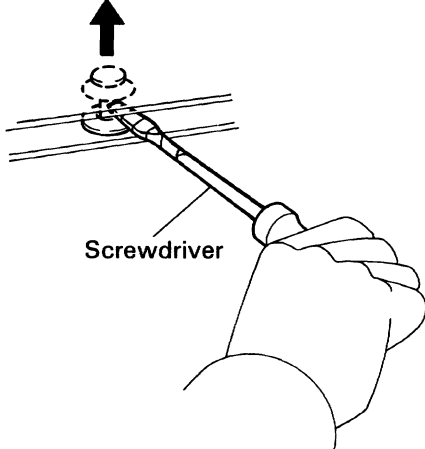
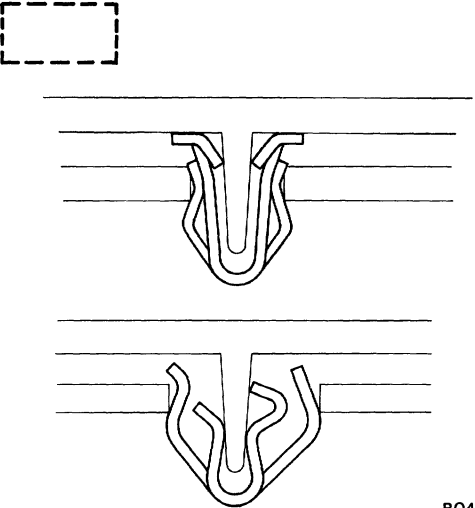
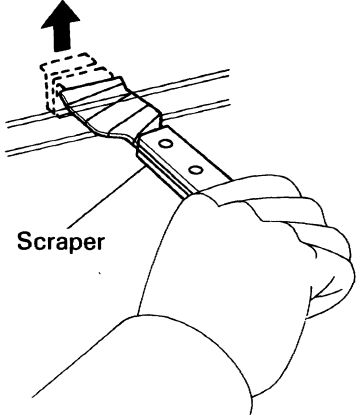


2. If a hinge or exterior body panel is loosened or removed, be sure to apply rust inhibitor after repairs.

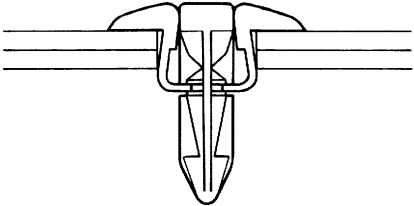
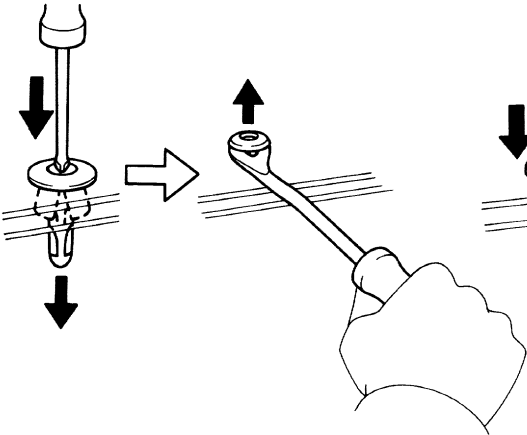
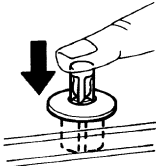
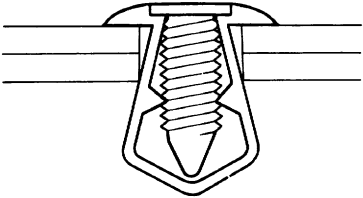
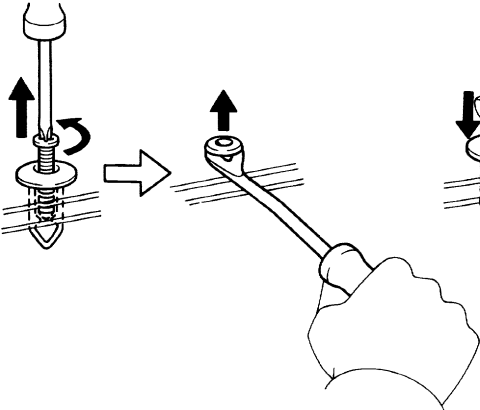
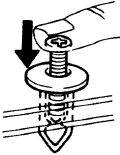
CLIPS

The removal and installation methods of typical clips used in body parts are shown in the table below.

HINT: If the clip is damaged during the operation, always replace it with a new clip.

Shape (Example)	Removal/installation
 BO4116	 Clip Remover Pliers BO4117
 BO4118	 Screwdriver BO4119
 BO4120	 Scraper BO4121

CLIPS (Cont'd)

Shape (Example)	Removal /installation	
	Removal 	Installation 
BO4122	BO4123	
	Removal 	Installation 
BO4124	BO4125	