



SEAT BELTS COMPONENTS

Front Seat Belt

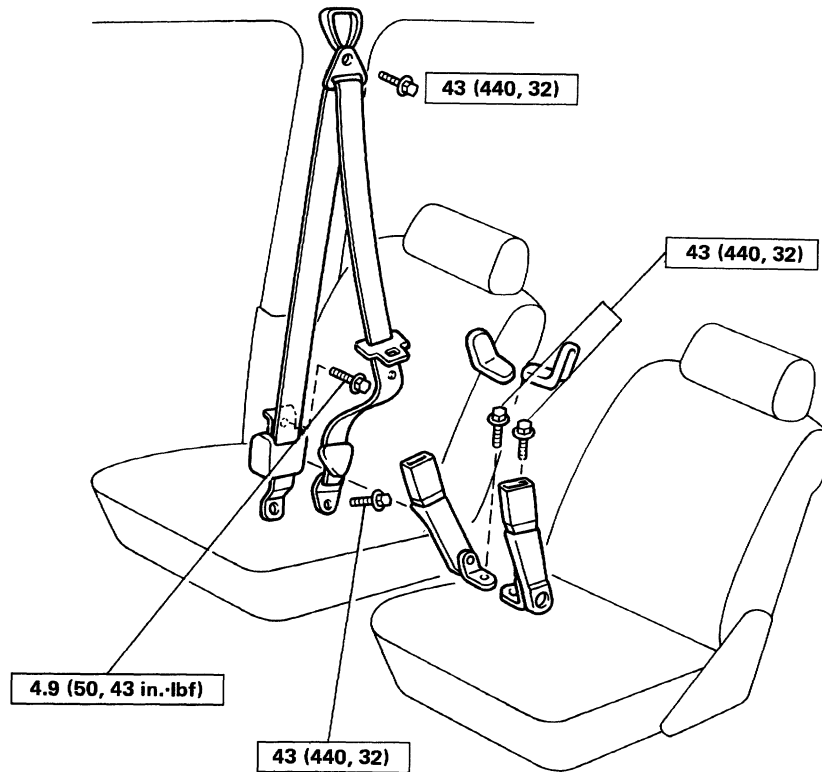


Second Seat Belt

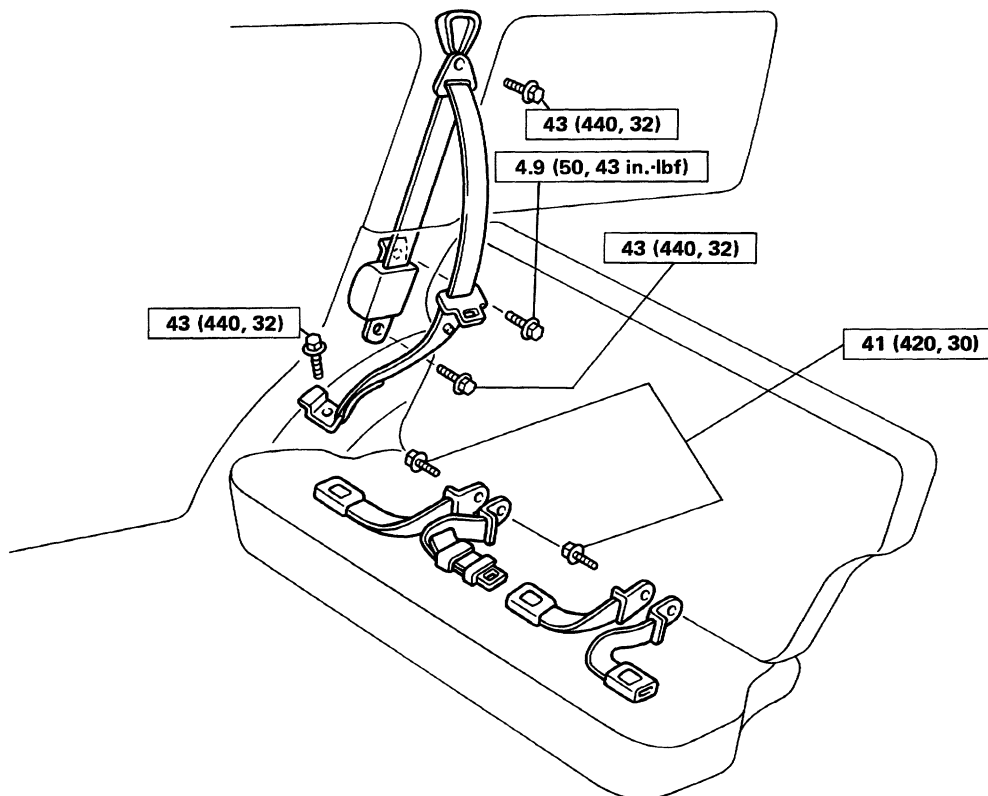

N·m (kgf·cm, ft·lbf) : Specified torque


COMPONENTS (Cont'd)

Third Seat Belt

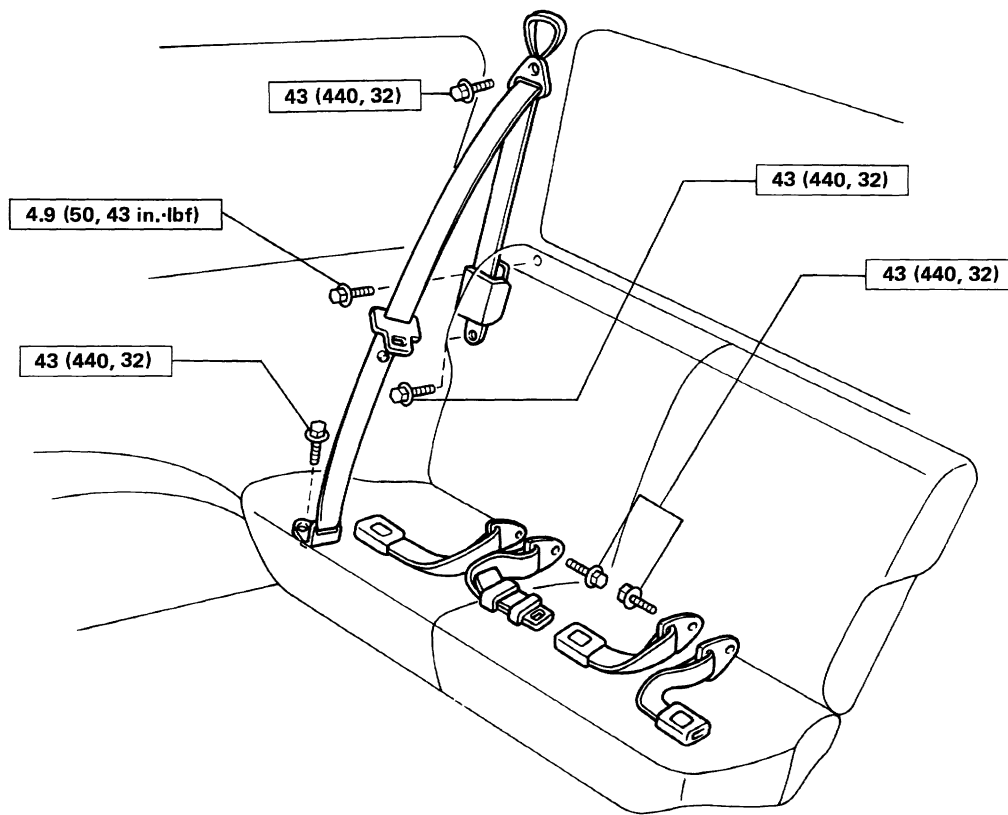

N03130

N·m (kgf·cm, ft·lbf) : Specified torque

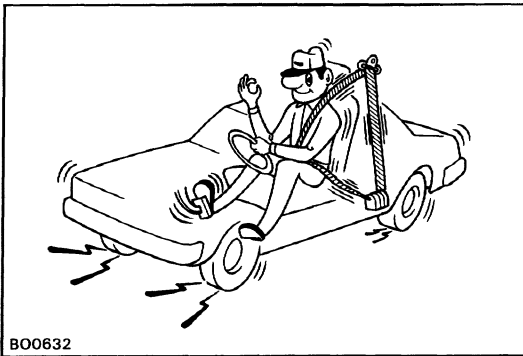


SEAT BELT

[Emergency Locking Retractor (ELR) Type]

1. RUNNING TEST (IN SAFETY AREA)

- Fasten the seat belt.
- Drive the car at 10 mph (16 km/h) and make a very hard stop.
- Check that the seat belt is locked and cannot be extended at this time.

HINT: Conduct this test in safe area. If the belt does not lock, remove the belt mechanism assembly and conduct the following static check. Also, whenever installing a new belt assembly, verify the proper operation before installation.

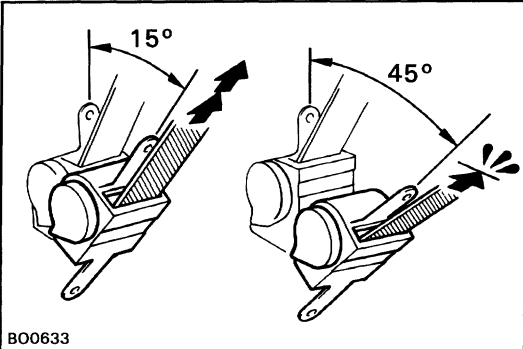

2. STATIC TEST

- Remove the locking retractor assembly.
- Tilt the retractor slowly.
- Verify that the belt can be pulled out at a tilt of 15 degrees or less, and cannot be pulled out at over 45 degrees of tilt.

If a problem is found, replace the assembly.

(Manual Type)

TESTING

- Adjust the belt to the proper length.
- Apply a firm load to the belt.
- Verify that the belt does not extend.

