


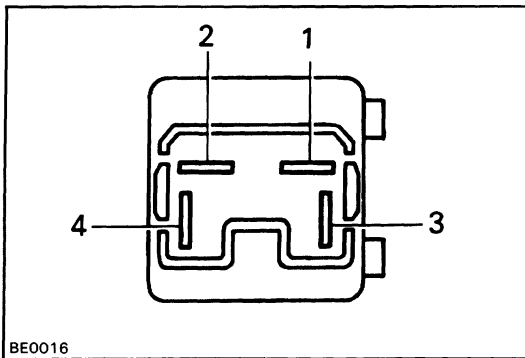


CHARGE LIGHT RELAY

INSPECTION OF CHARGE LIGHT RELAY

LOCATION: In the engine room relay block.


1. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is no continuity between terminals 1 and 2.

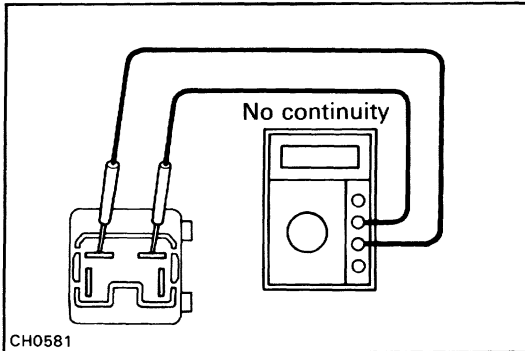

- (b) Connect the one test probe to terminal 3 and the other to terminal 4.
 (c) Reverse the polarity of test probes, and repeat step (b).
 (d) Check that one shows continuity and other shows no continuity.

If continuity is not as specified, replace the relay.

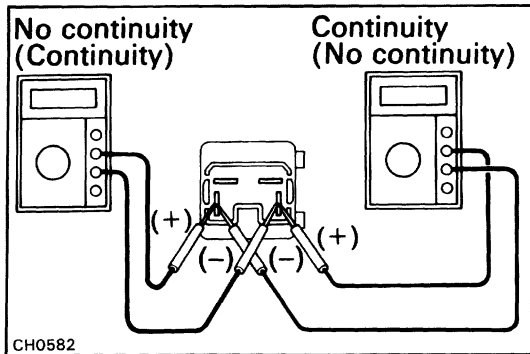

2. INSPECT RELAY OPERATION

- (a) Connect a positive (+) lead from the battery to terminal 3.
 (b) Connect a negative (-) lead from the battery to terminal 4.
 (c) Using an ohmmeter, check for continuity between terminals 1 and 2.

If operation is not as specified, replace the relay.

