

CHARGING SYSTEM

PRECAUTIONS

1. Check that the battery cables are connected to the correct terminals.
2. Disconnect the battery cables when the battery is given a quick charge.
3. Do not perform tests with a high voltage insulation resistance tester.
4. Never disconnect the battery while the engine is running.

TROUBLESHOOTING

Problem	Possible cause	Remedy	Page
Discharge warning light does not light with ignition ON and engine not running	Fuse blown Light burned out Wiring connections loose IC regulator faulty Charge light relay faulty	Check "CHARGE" and "IGN" fuses Replace light Tighten loose connections Replace IC regulator Replace charge light relay	CH-6 CH-15
Discharge warning light does not go out with engine running (battery requires frequent recharging)	Drive belt loose or worn Battery cables loose, corroded or worn Fuse blown Fusible link blown IC regulator or alternator faulty Wiring faulty Charge light relay faulty	Adjust or replace drive belt Repair or replace cables Check "CHARGE" fuse Replace fusible link Check charging system Repair wiring Replace charge light relay	CH-3 CH-4 CH-15