



Circuit Opening Relay

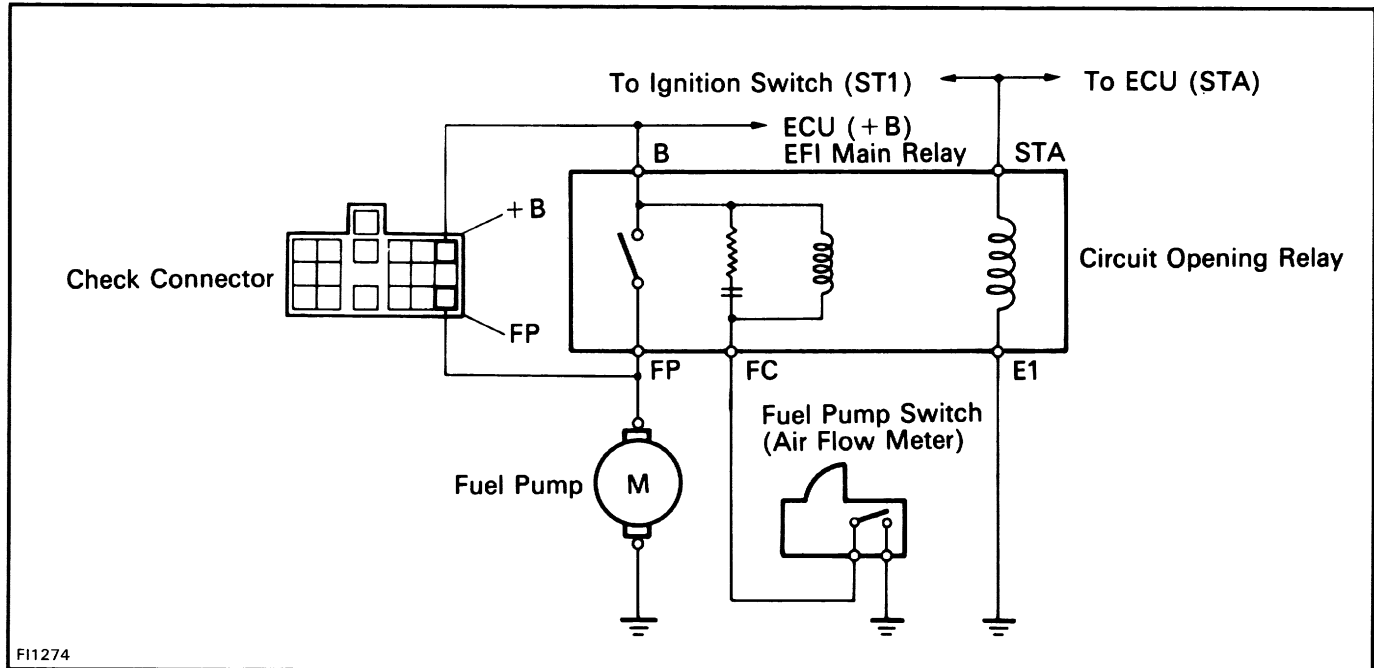

FI1274

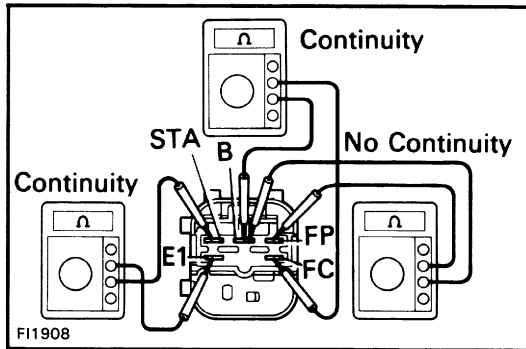

FI1908

INSPECTION OF CIRCUIT OPENING RELAY


1. INSPECT RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals STA and E1.
- Check that there is continuity between terminals B and FC.
- Check that there is no continuity between terminals B and FP.


If continuity is not as specified, replace the relay.

2. INSPECT RELAY OPERATION

- Apply battery voltage across terminals STA and E1.
- Using an ohmmeter, check that there is continuity between terminals B and FP.

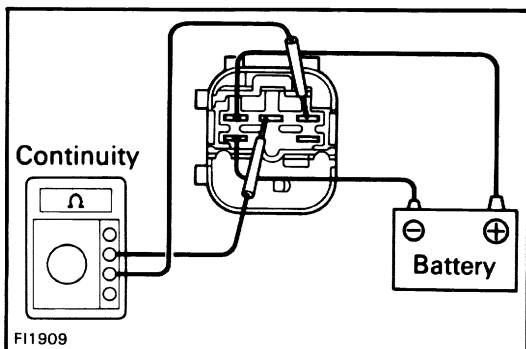

FI1909

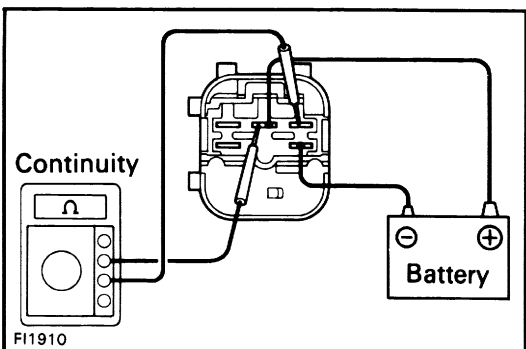

FI1910

- Apply battery voltage across terminals B and FC.
- Check that there is continuity between terminals B and FP.

If operation is not as specified, replace the relay.