

ABBREVIATIONS USED IN THIS MANUAL

IN009-01

A/C	Air Conditioner	LH	Left-Hand
AI	Air Injection	LHD	Left-Hand Drive
ASV	Air Switching Valve	LSP & BV	Load Sensing Proportioning and By-Pass Valve
A/T	Automatic Transmission	Max.	Maximum
ATF	Automatic Transmission Fluid	Min.	Minimum
A.T.P.	Automatic Transmission Parking	MP	Multipurpose
BTDC	Before Top Dead Center	OC	Oxidation Catalyst
BVSV	Bimetal Vacuum Switching Valve	O/D	Overdrive
CALIF.	Vehicles Sold in California	OHC	Over Head Camshaft
CB	Circuit Breaker	O/S	Oversized
CCS	Cruise Control System	OVCV	Outer Vent Control Valve
CD	Compact Disc	PCV	Positive Crankcase Ventilation
CRS	Child Restraint System	PS	Power Steering
CVJ	Constant Velocity Joint	RH	Right-Hand
DP	Dash Pot	RHD	Right-Hand Drive
ECU	Electronic Control Unit	SC	Spark Control
EFI	Electronic Fuel Injection	SSM	Special Service Materials
EGR	Exhaust Gas Recirculation	SST	Special Service Tools
ELR	Emergency Locking Retractor	STD	Standard
ESA	Electronic Spark Advance	SW	Switch
EVAP	Evaporative (Emission Control)	TCCS	Toyota Computer Controlled System
EX	Exhaust (manifold, valve)	TDC	Top Dead Center
Ex.	Except	T/M	Transmission
FED	Vehicles Sold in USA Except California	TP	Throttle Positioner
FIPG	Formed in Place Gasket	TWC	Three-Way Catalyst
FL	Fusible Link	U/S	Undersize
HAC	High Altitude Compensation	VCV	Vacuum Control Valve
IG	Ignition	VSV	Vacuum Switching Valve
IN	Intake (manifold, valve)	VTV	Vacuum Transmitting Valve
ISC	Idle Speed Control	w/	With
LCD	Liquid Crystal Display	w/o	Without
LED	Light Emitting Diode	4WD	Four Wheel Drive Vehicles (4 x4)