
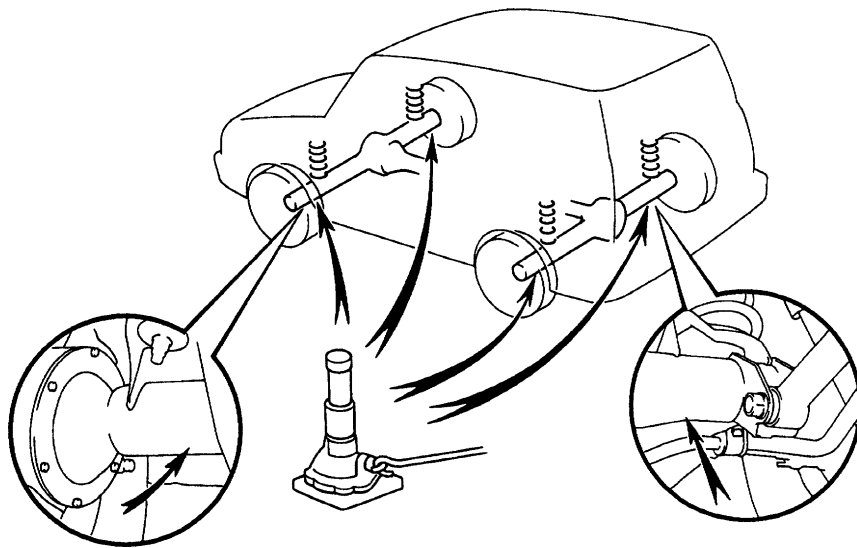


VEHICLE LIFT AND SUPPORT LOCATIONS

IN007-01

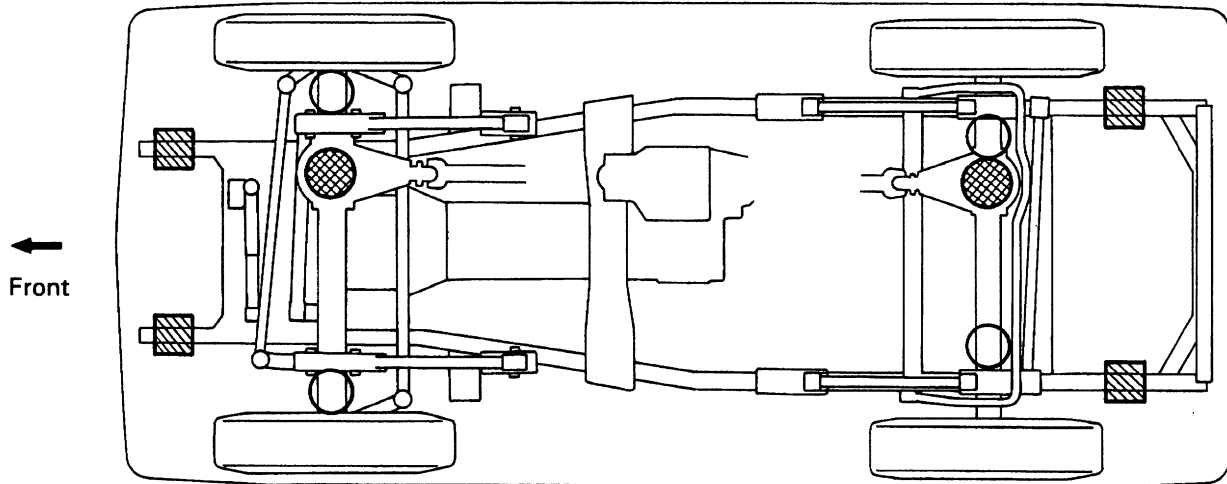

JACK POSITION ———— ●

Front Under the front differential

Rear Under the rear differential

SCREW TYPE JACK POSITION ———— ○

SUPPORT POSITION

Safety stand ▨