


# STEERING COLUMN


## REMOVAL AND INSTALLATION OF STEERING COLUMN

Remove and install the parts as shown.

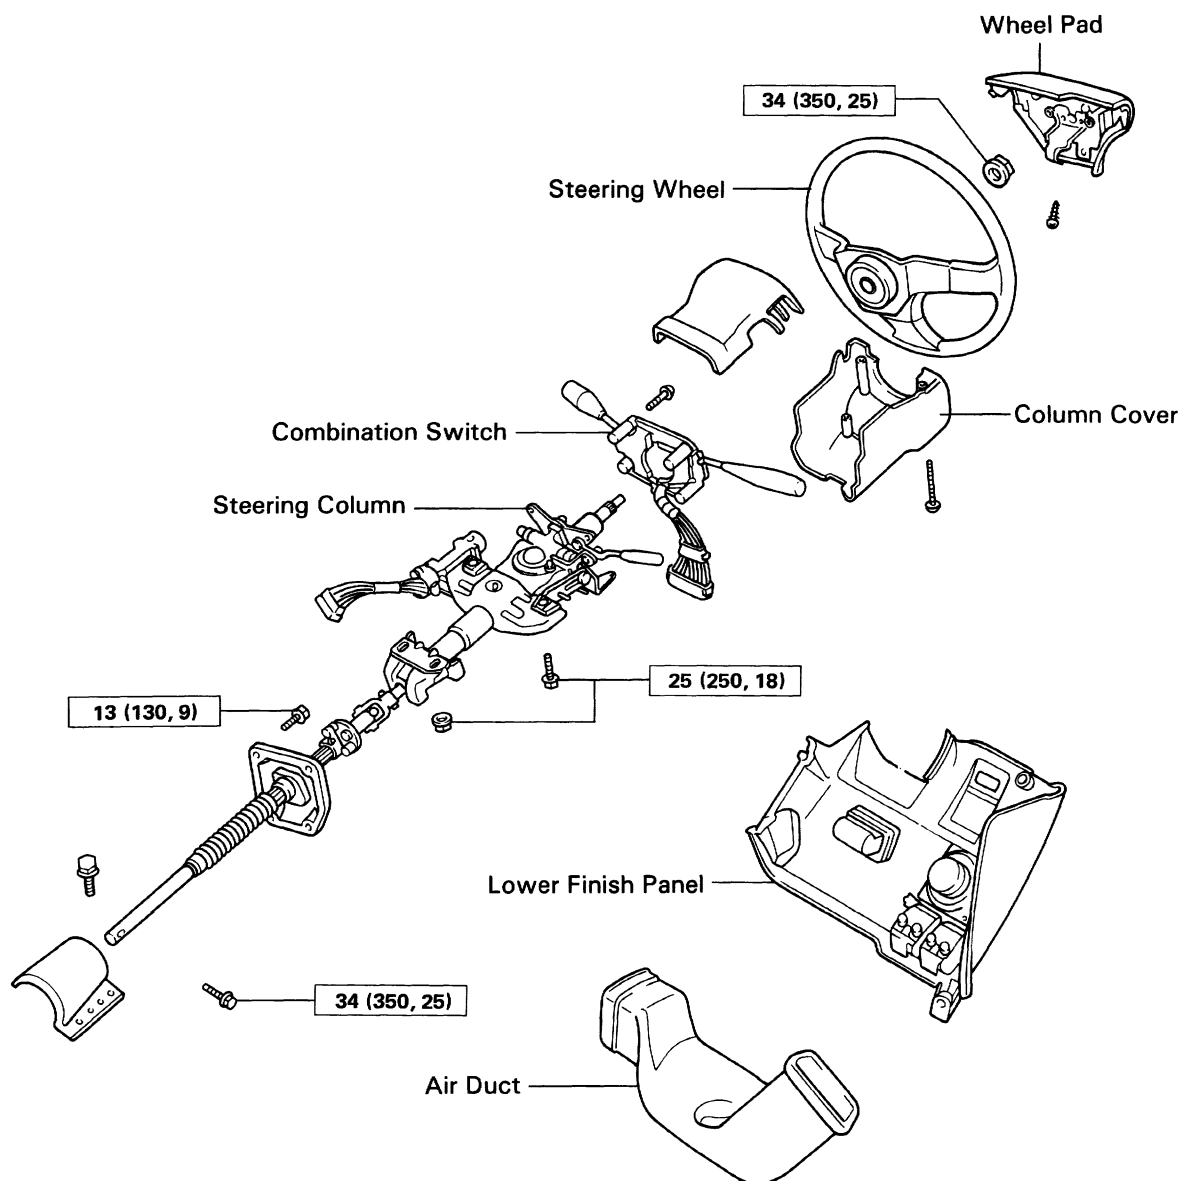

SR3928

N·m (kgf·cm, ft·lbf) : Specified torque

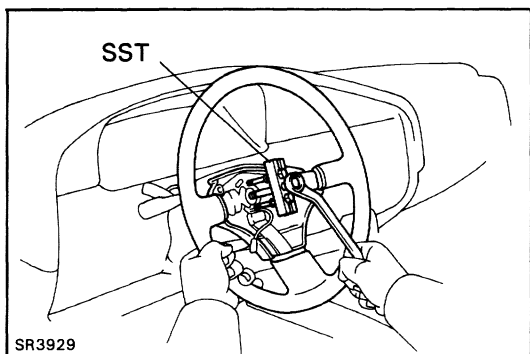


SR3929

### (MAIN POINT OF REMOVAL)

#### 1. REMOVE STEERING WHEEL

Using SST, remove the steering wheel.

SST 09609-20011

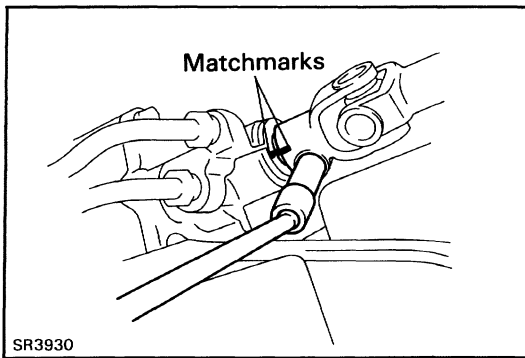

## 2. DISCONNECT MAIN SHAFT

- (a) Place matchmarks on the worm shaft and main shaft.
- (b) Disconnect the main shaft from the worm shaft.