

STARTING SYSTEM

TROUBLESHOOTING

Problem	Possible cause	Remedy	Page
Engine will not crank	Battery charge low	Check battery specific gravity Charge or replace battery	CH-3
	Battery cables loose, corroded or worn Neutral start switch faulty Fusible link blown Starter faulty Ignition switch faulty	Repair or replace cable Replace switch Replace fusible link Repair starter Replace ignition switch	ST-3
Engine cranks slowly	Battery charge low	Check battery specific gravity Charge or replace battery	CH-3
	Battery cables loose, corroded or worn Starter faulty	Repair or replace cables Repair starter	ST-3
Starter keeps running	Starter faulty Ignition switch faulty Short in wiring	Repair starter Replace ignition switch Repair wiring	ST-3
	Pinion gear teeth broken or faulty starter Drive plate teeth broken	Repair starter Replace Drive plate	ST-3