


COMPONENT PARTS


Input Shaft Assembly

COMPONENTS

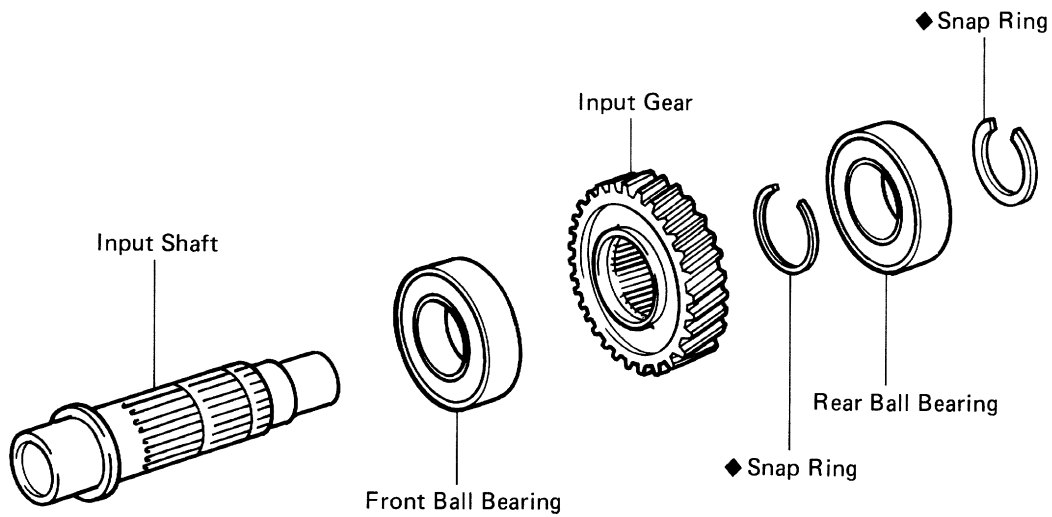

◆ Non-reusable part


TF1005

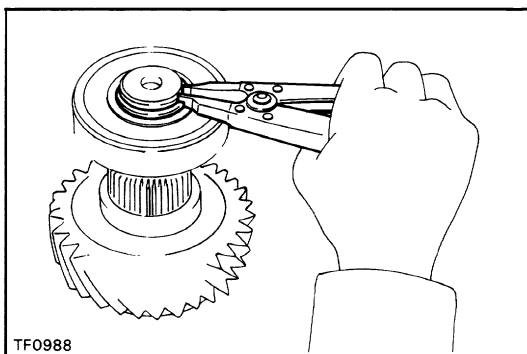


DISASSEMBLY OF INPUT SHAFT ASSEMBLY

1. REMOVE REAR BALL BEARING

(a) Using snap ring pliers, remove the snap ring.

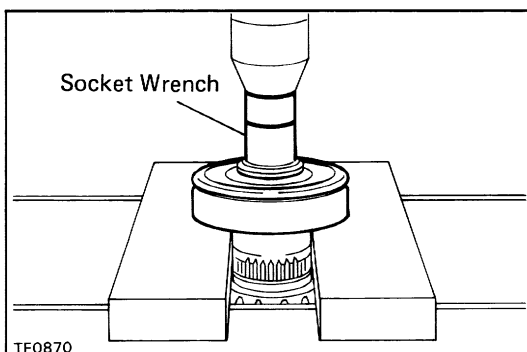


(b) Using a press and socket wrench, remove the rear ball bearing.

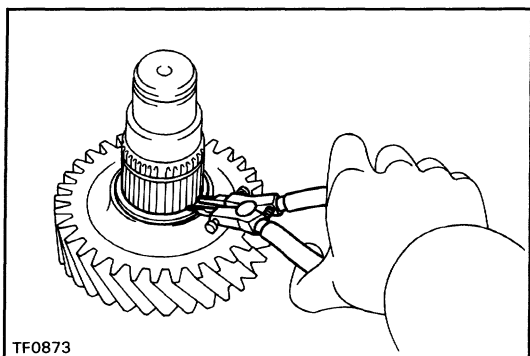


2. REMOVE INPUT GEAR

(a) Using snap ring pliers, remove the snap ring.

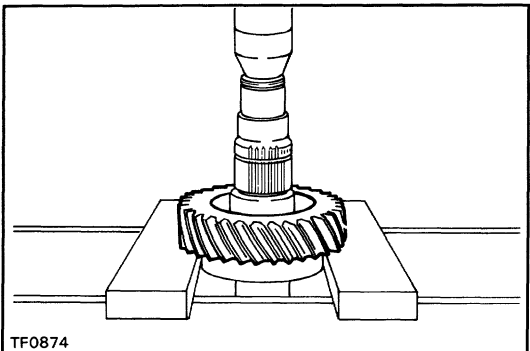


(b) Using a press, remove the input gear.

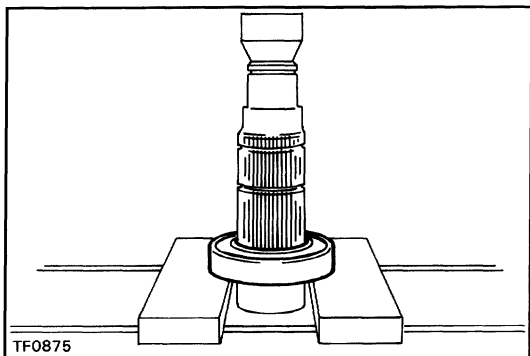

3. REMOVE FRONT BALL BEARING


Using a press, remove the front ball bearing.

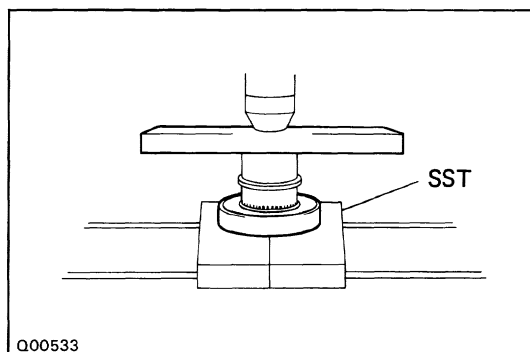

ASSEMBLY OF INPUT SHAFT ASSEMBLY


1. INSTALL FRONT BALL BEARING

Using SST and a press, install the front ball bearing.
SST 09527-30010

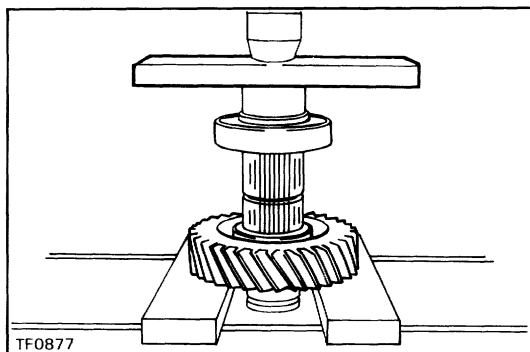


2. INSTALL INPUT GEAR

(a) Using a press, install the input gear.

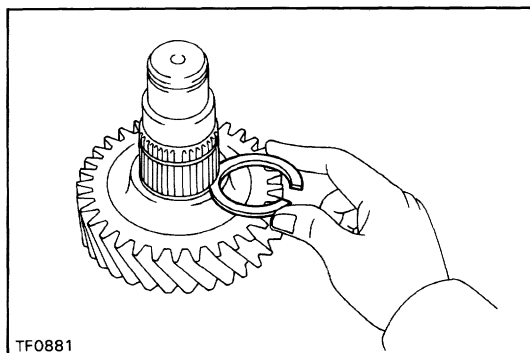


(b) Select a snap ring that will allow minimum axial play and install it on the shaft.


Mark	Thickness mm (in.)
A	2.0 (0.0787)
B	2.1 (0.0827)
C	2.2 (0.0866)
D	2.3 (0.0906)
E	2.4 (0.0945)
F	2.5 (0.0984)
G	2.6 (0.1024)
H	2.7 (0.1063)
J	2.8 (0.1102)

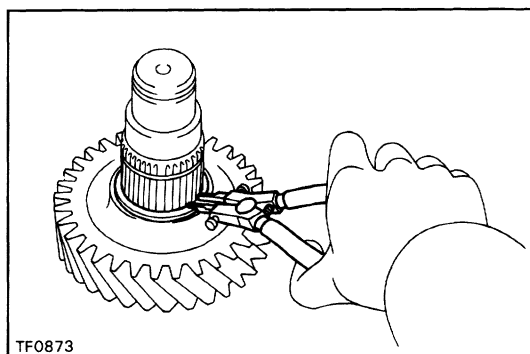

3. INSTALL REAR BALL BEARING


(a) Using SST and a press, install the rear ball bearing.
SST 09316-60010 (09316-00030)

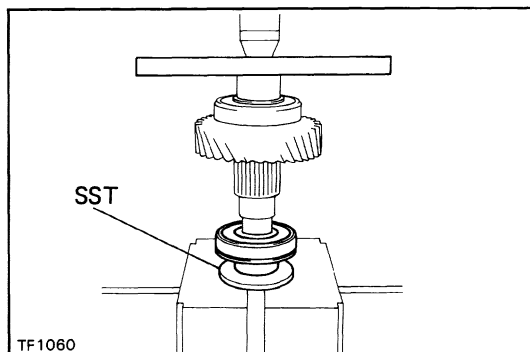

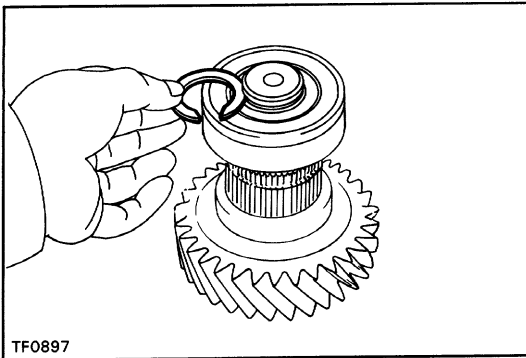

(b) Select a snap ring that will allow minimum axial play.

Mark	Thickness mm (in.)
A	2.0 (0.0787)
B	2.1 (0.0827)
C	2.2 (0.0866)
D	2.3 (0.0906)
E	2.4 (0.0945)

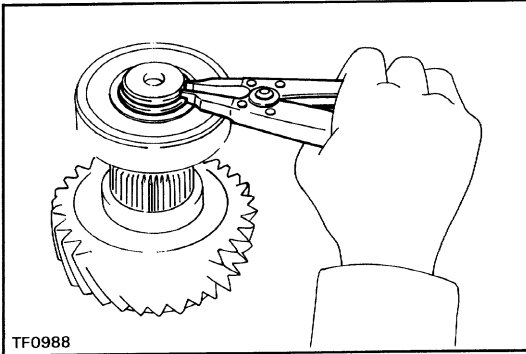

(c) Using snap ring pliers, install the snap ring.