



MOTOR SHIFT CONTROL SYSTEM PARTS LOCATION

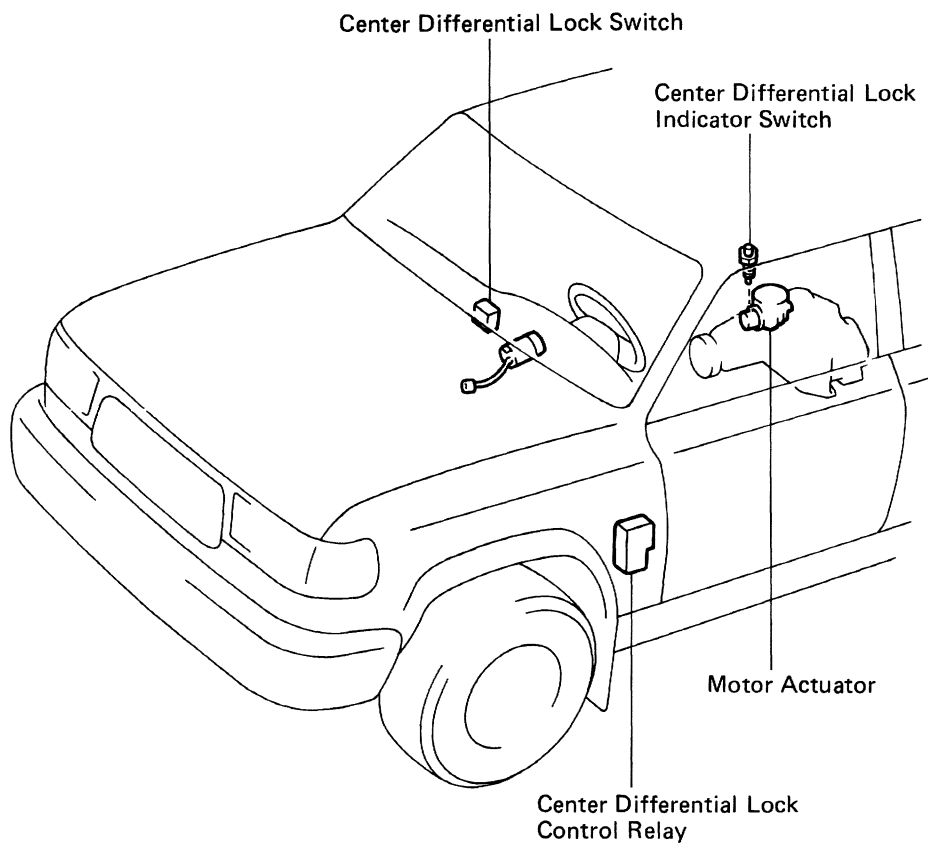

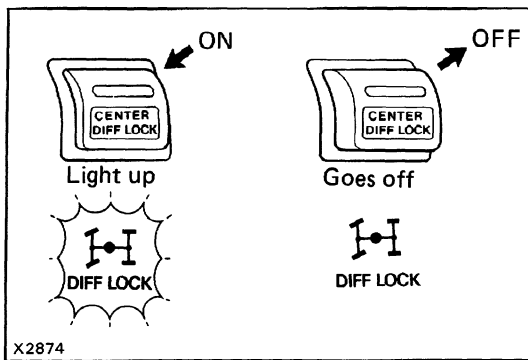


SYSTEM INSPECTION

1. INSPECT CENTER DIFFERENTIAL LOCK SWITCH

- Start the engine and shift the transfer shift lever in H position.
- Check that the center differential lock indicator light comes on when the center differential lock switch is turned ON.

Check that the light goes off when the switch OFF.

HINT: There are times when the light will not go off unless the steering is straight ahead and acceleration and deceleration are performed slowly.

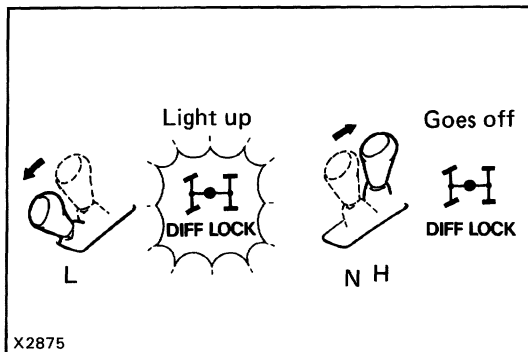

2. INSPECT SHIFT LEVER POSITION

- Start the engine, and center differential lock switch turned to OFF.
- Check that the center differential indicator light comes on when the transfer shift lever shifted to L position. Check that the light goes off when the lever is shifted to N or H position.