



Position of Parts in Engine Compartment

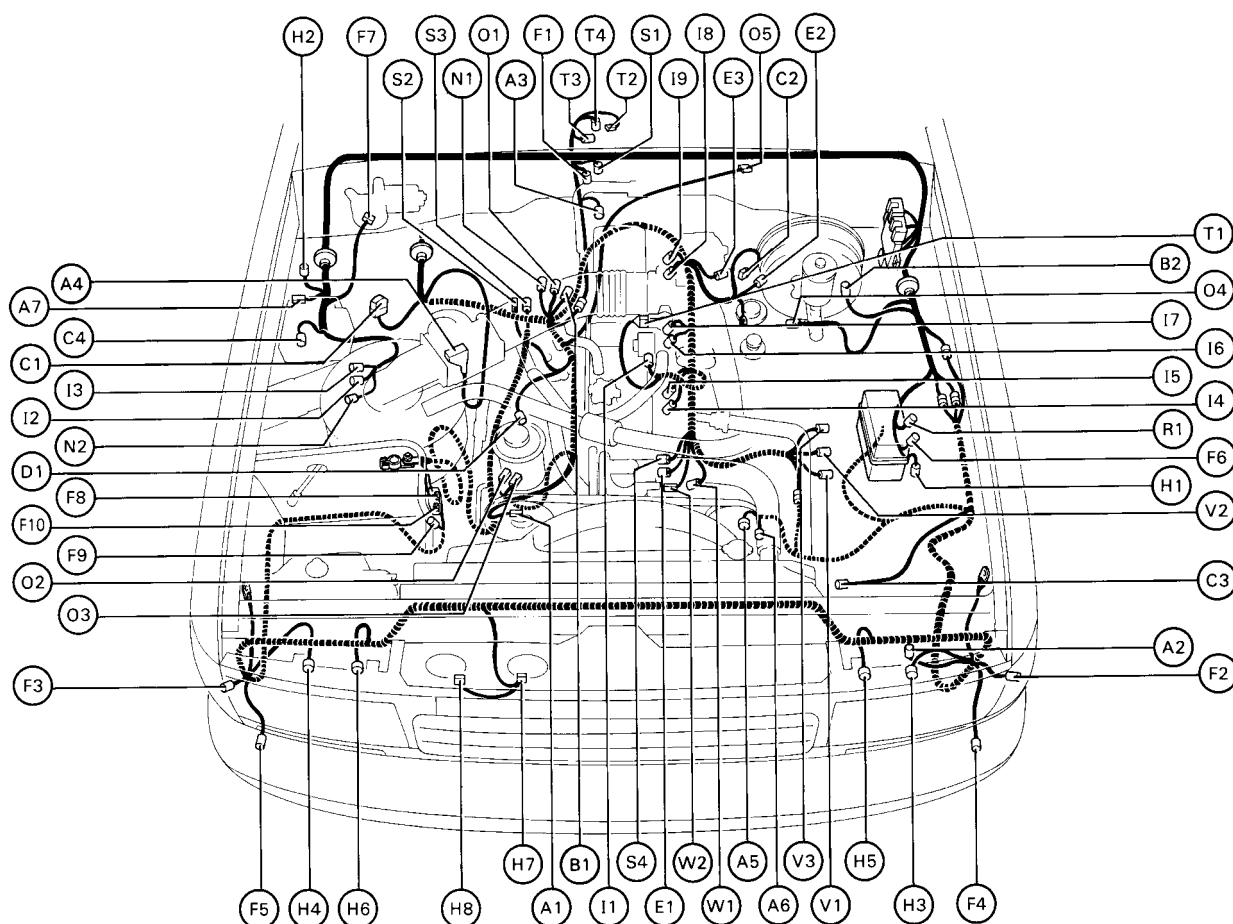

A 1 A/C Magnetic Clutch	F 3 Front Clearance Light RH	N 2 Noise Filter (for Ignition System)
A 2 A/C Pressure SW	F 4 Front Turn Signal Light LH	O 1 O/D Solenoid
A 3 A/T Fluid Temp. Sensor	F 5 Front Turn Signal Light RH	O 2 Oil Pressure Sender Gauge
A 4 Air Flow Meter	F 6 Front Washer Motor	O 3 Oil Pressure Sender Gauge
A 5 Alternator	F 7 Front Wiper Control Motor	O 4 Oxygen Sensor (Main)
A 6 Alternator	F 8 Fusible Link (AM1)	O 5 Oxygen Sensor (Sub)
A 7 Auto Antenna Control Motor	F 9 Fusible Link (AM2)	R 1 Rear Washer Motor
	F 10 Fusible Link (Main)	S 1 Speed Sensor
B 1 Back-Up Light and A/T Indicator SW	H 11 Headlight Cleaner Motor	S 2 Starter
B 2 Brake Fluid Level SW	H 0 Headlight Cleaner Relay	S 3 Starter
C 1 Check Connector	H 3 Headlight No. 1 LH	S 4 Start Injector Time SW
C 2 Cold Start Injector	H 4 Headlight No. 1 RH	T 1 Throttle Position Sensor
C 3 Cooling Fan Motor (for Engine Compartment)	H 5 Headlight No. 2 LH	T 2 Transfer 2-4 Control Motor Actuator
C 4 Cruise Control Actuator	H 6 Headlight No. 2 RH	T 3 Transfer L4 Position SW
D 1 Distributor	H 7 Horn	T 4 Transfer Neutral Position SW
E 1 EFI Water Temp. Sensor	H 8 Horn	V 1 VSV (for Air Injection System)
E 2 EGR Gas Temp. Sensor (for California) or Short Pin (Ex. For California)	I 1 ISC Valve	V 2 VSV (for EGR Control System)
E 3 Exhaust Manifold Temp. Sensor (for Cooling Fan System)	I 2 Igniter	V 3 VSV (for Fuel Pressure Control System)
F 1 4WD Indicator SW	I 3 Ignition Coil	W 1 Water Temp. SW (for Fuel Pressure Control)
F 2 Front Clearance Light LH	I 4 Injector No. 1	W 2 Water Temp. Sender
	I 5 Injector No. 2	
	I 6 Injector No. 3	
	I 7 Injector No. 4	
	I 8 Injector No. 5	
	I 9 Injector No. 6	
	N 1 Neutral Start SW	

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

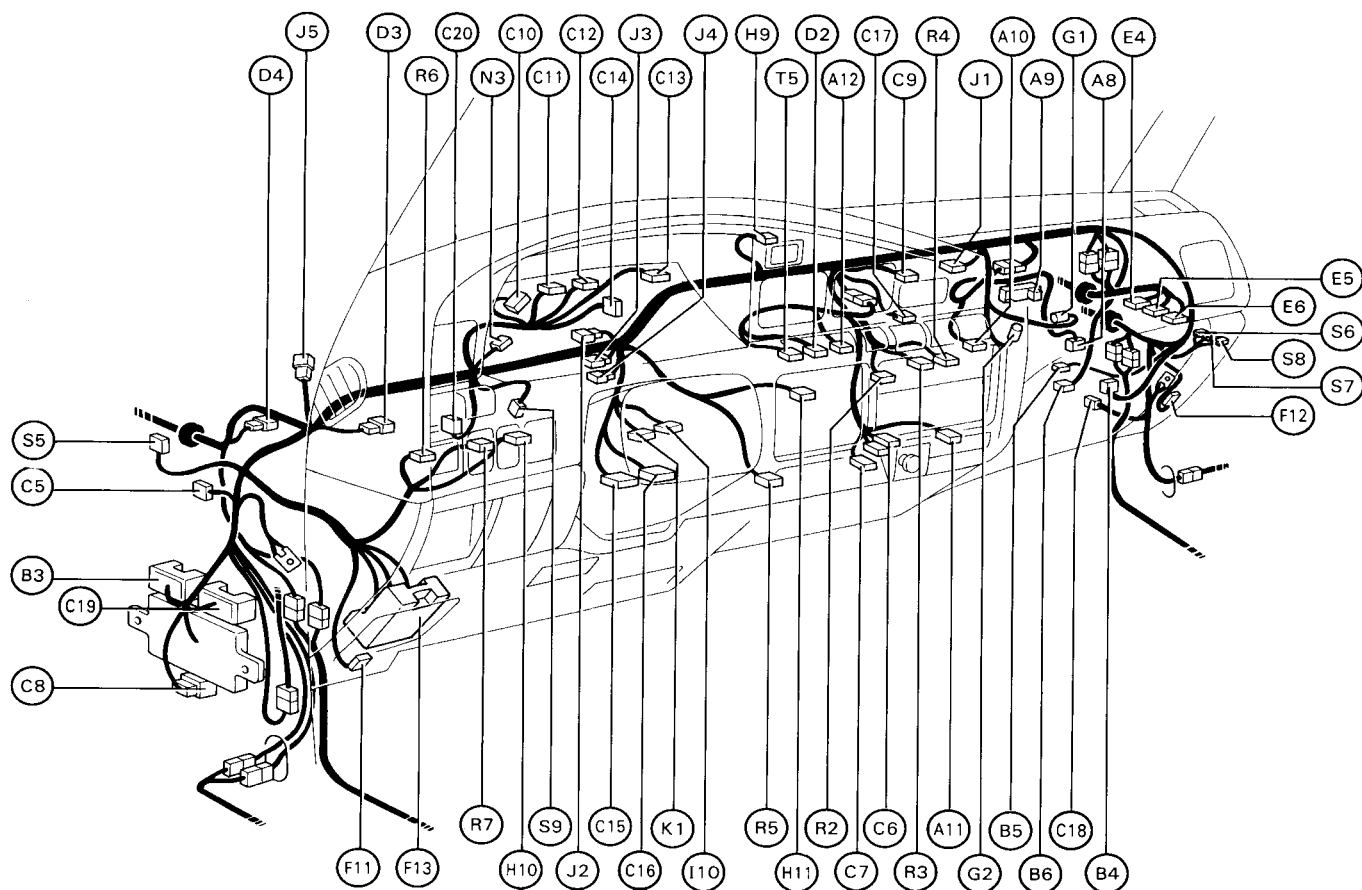

A 8 A/C Amplifier
A 9 A/C Cut Relay
A 10 A/C Thermistor
A 11 Ashtray
A 12 Auto Antenna Control SW

B 3 Blower High Relay
B 4 Blower Motor (for A/C)
B 5 Blower Motor (for Heater)
B 6 Blower Resistor

C 5 Center Diff. Lock Control Relay
C 6 Cigarette Lighter
C 7 Cigarette Lighter Illumination
C 8 Circuit Opening Relay
C 9 Clock
C 10 Combination Meter
C 11 Combination Meter
C 12 Combination Meter
C 13 Combination Meter
C 14 Combination Meter (A/T Indicator)
C 15 Combination SW
C 16 Combination SW
C 17 Cooling Fan
(for Radio and Tape Player)

C 18 Cooling Fan Control ECU
(for Engine Compartment)
C 19 Cooling Fan Relay
(for Engine Compartment)
C 20 Cruise Control ECU

D 2 Defogger SW
D 3 Diode
D 4 Diode

E 4 Engine ECU
E 5 Engine ECU
E 6 Engine ECU

F 11 Front Speaker LH
F 12 Front Speaker RH
F 13 Fuse Block

G 1 Glove Box Light
G 1 Glove Box Light SW

H 9 Hazard SW
H 10 Headlight Cleaner SW
H 11 Heater Blower and A/C SW

I 10 Ignition and Unlock Warning SW

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector


K 1 Key Interlock Solenoid
N 3 Noise Filter (for Stop Light)

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Rear Heater SW
R 6 Remote Control Mirror SW
R 7 Rheostat

S 5 Seat Belt Warning Relay
S 6 Stereo Component Amplifier
S 7 Stereo Component Amplifier
S 8 Stereo Component Amplifier
S 9 Stop Light and Cruise Control Stop SW

T 5 Transfer Control SW

Position of Parts in Body

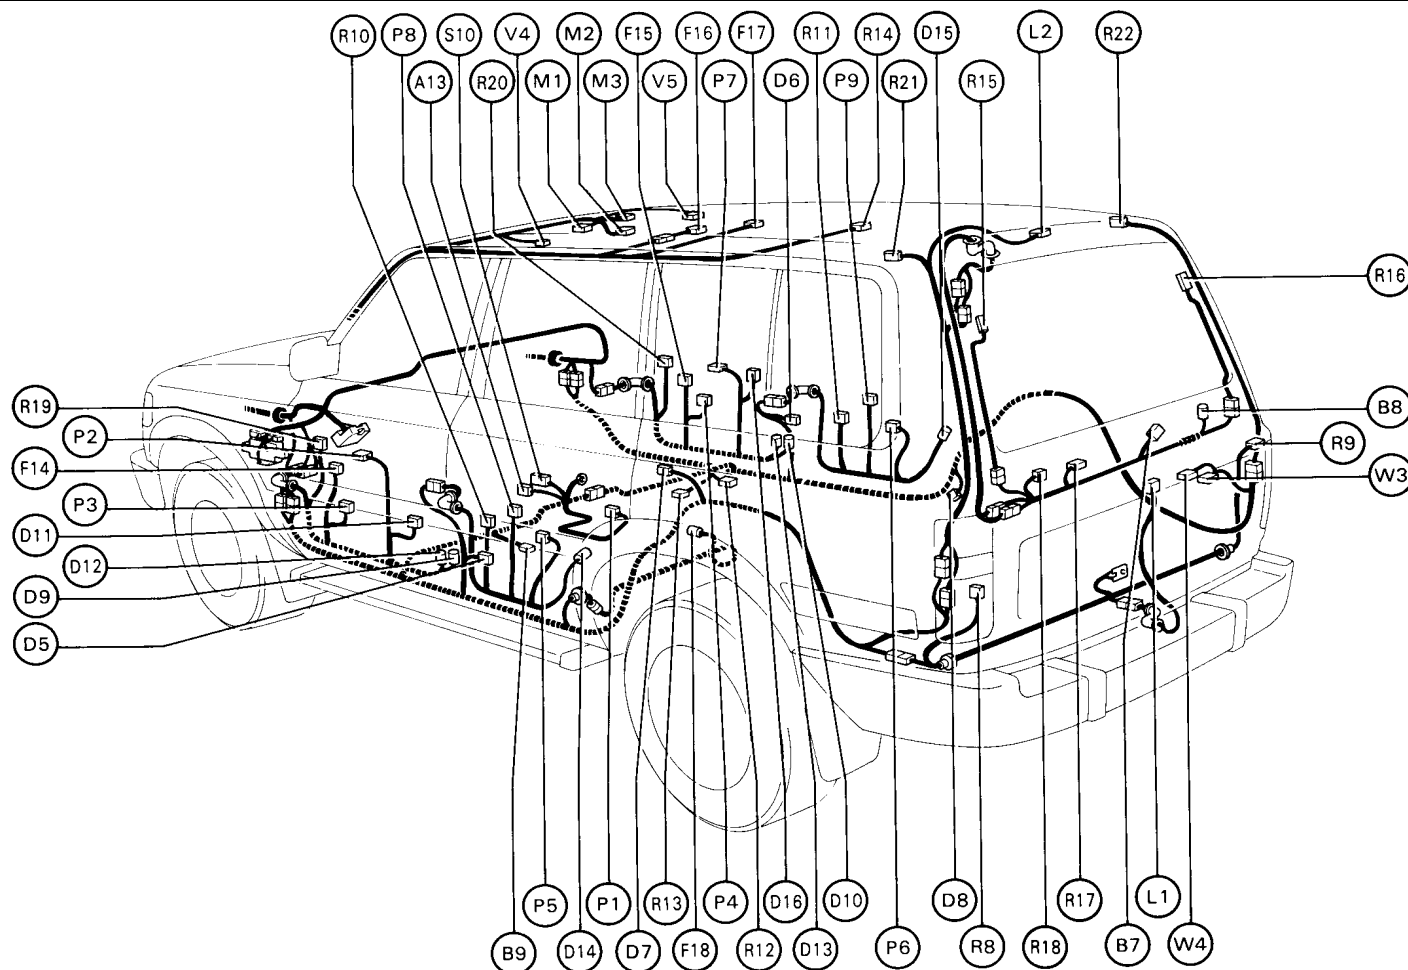

A 13	A/T Shift Lever Illumination	L 1	Licence Plate Light	R 13	Rear Heater Relay
B 7	Back Door Courtesy SW	L 2	Luggage Compartment Light	R 14	Rear Interior Light
B 8	Back Door Lock Control Motor	M 1	Moon Roof Control Relay	R 15	Rear Window Defogger (+)
B 9	Buckle SW	M 2	Moon Roof Control SW and Personal Light or, Personal Light (w/o Moon Roof)	R 16	Rear Window Defogger (-)
D 5	Door Courtesy SW Front LH	M 3	Moon Roof Limit SW and Motor	R 17	Rear Wiper Control Motor
D 6	Door Courtesy SW Front RH	P 1	Parking Brake SW	R 18	Rear Wiper Control Relay
D 7	Door Courtesy SW Rear LH	P 2	Power Window Master SW	R 19	Remote Control Mirror LH
D 8	Door Courtesy SW Rear RH	P 3	Power Window Motor Front LH	R 20	Remote Control Mirror RH
D 9	Door Key Lock and Unlock SW LH	P 4	Power Window Motor Front RH	R 21	Roof Speaker LH
D 10	Door Key Lock and Unlock SW RH	P 5	Power Window Motor Rear LH	R 22	Roof Speaker RH
D 11	Door Lock Control Relay	P 6	Power Window Motor Rear RH	S 10	Shift Lock ECU
D 12	Door Lock Motor Front LH	P 7	Power Window SW Front RH	V 4	Vanity Light LH
D 13	Door Lock Motor Front RH	P 8	Power Window SW Rear LH	V 5	Vanity Light RH
D 14	Door Lock Motor Rear LH	P 9	Power Window SW Rear RH	W 3	Woofer Speaker
D 15	Door Lock Motor Rear RH	R 8	Rear Combination Light LH	W 4	Woofer Speaker Amplifier
D 16	Door Lock Control SW RH	R 9	Rear Combination Light RH		
F 14	Front Door Speaker LH	R 10	Rear Door Speaker LH		
F 15	Front Door Speaker RH	R 11	Rear Door Speaker RH		
F 16	Front Interior Light (w/ Moon Roof)	R 12	Rear Heater		
F 17	Front Interior Light (w/o Moon Roof)				
F 18	Fuel Sender and Pump				