



ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

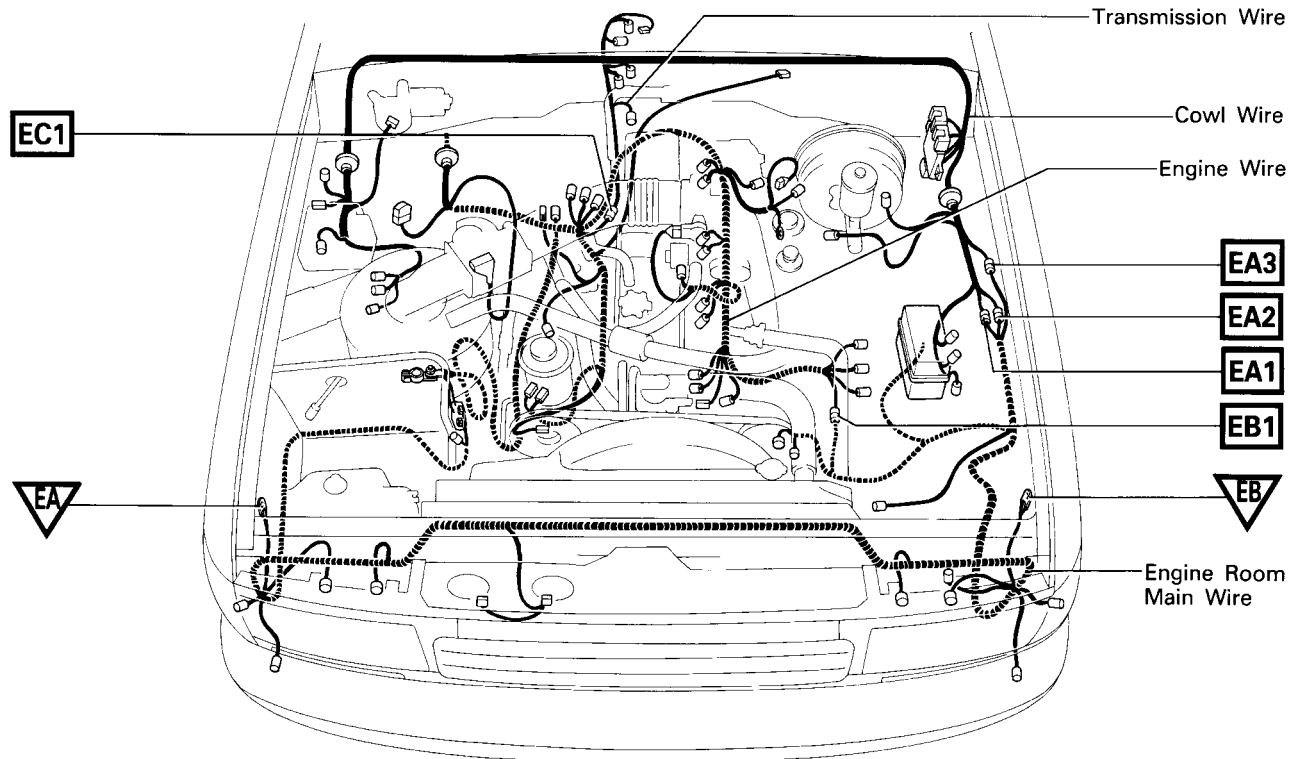

○ : Location of Splice Points

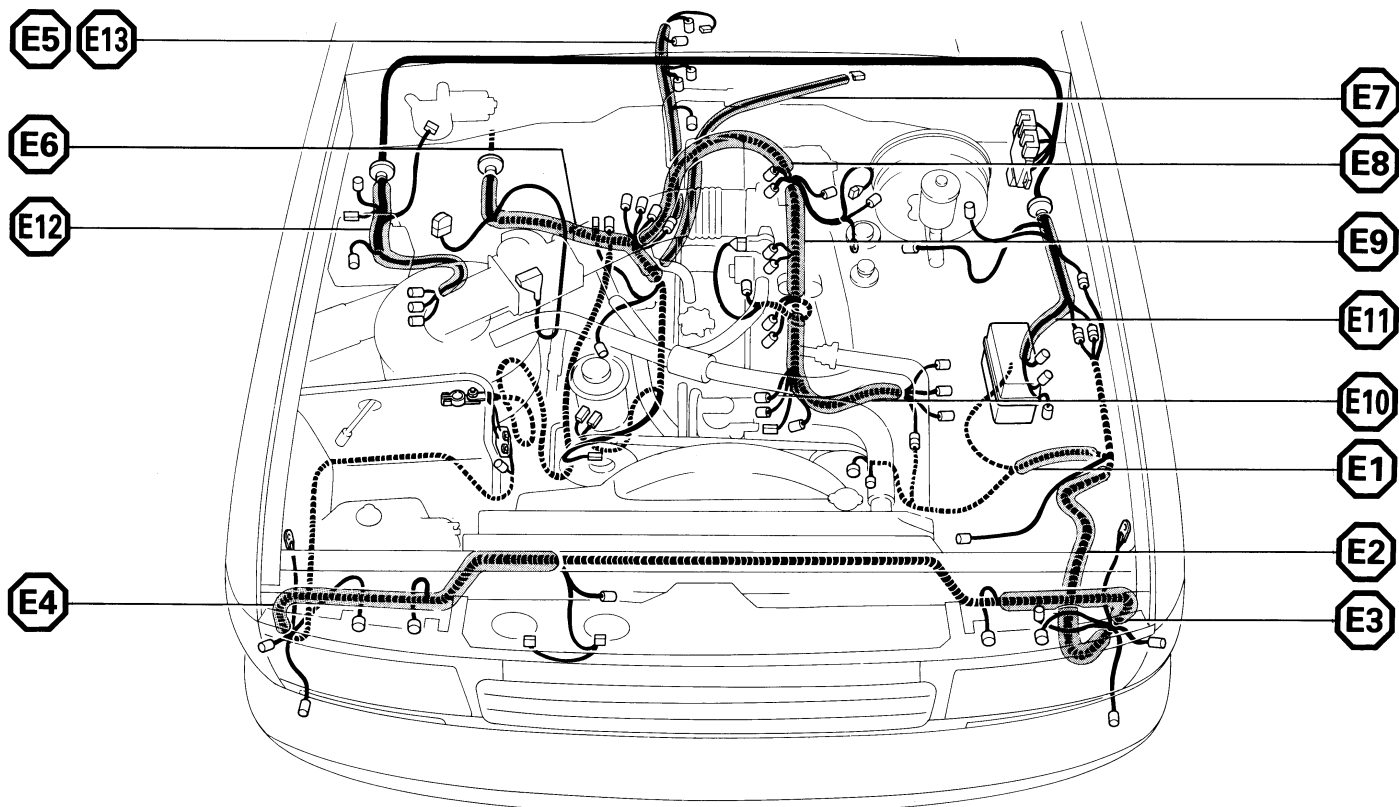

Connector Joining Wire Harness and Wire Harness

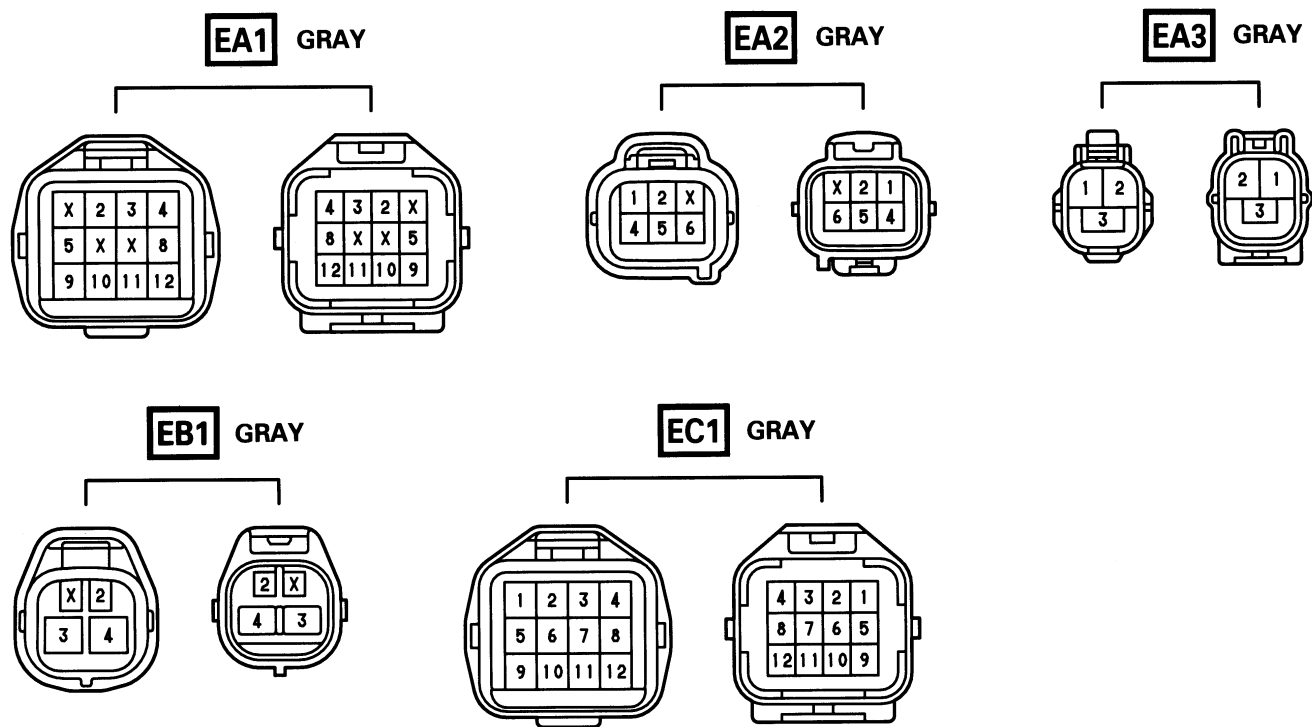


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2	
EA3	
EB1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE R/B NO.2)
EC1	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

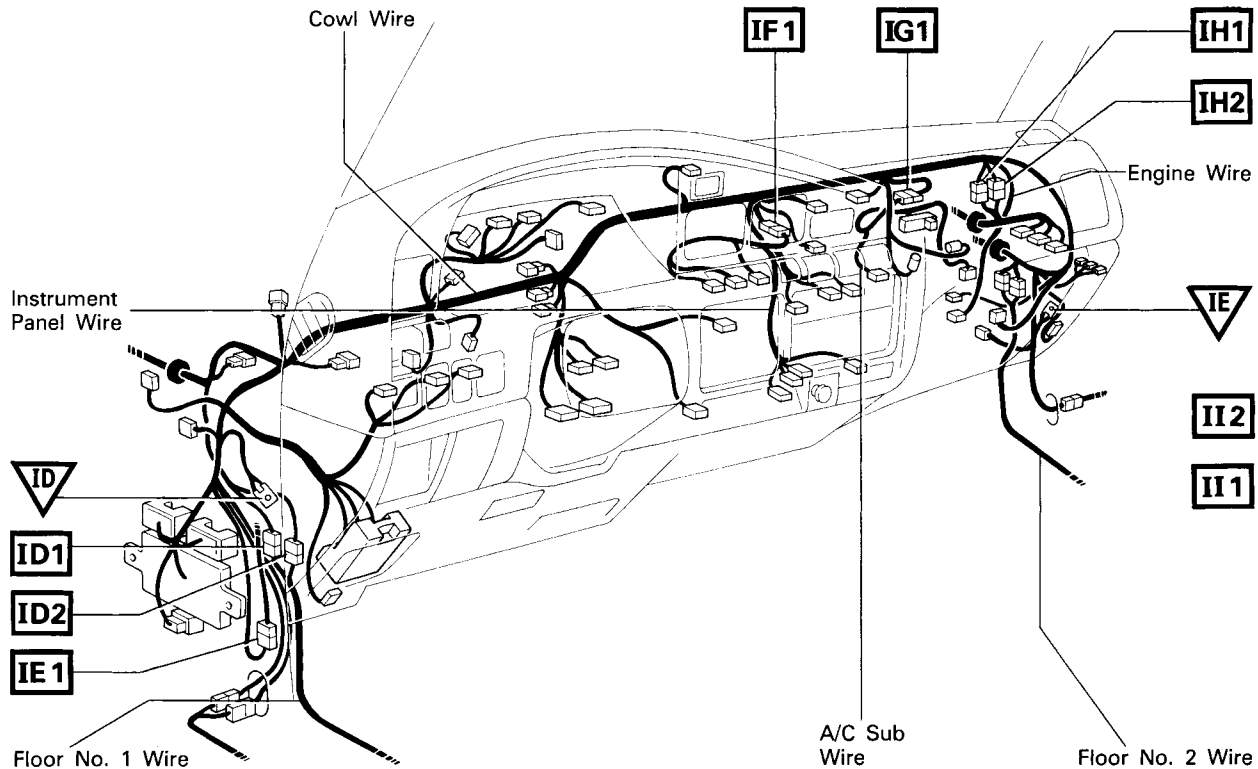

○ : Location of Splice Points

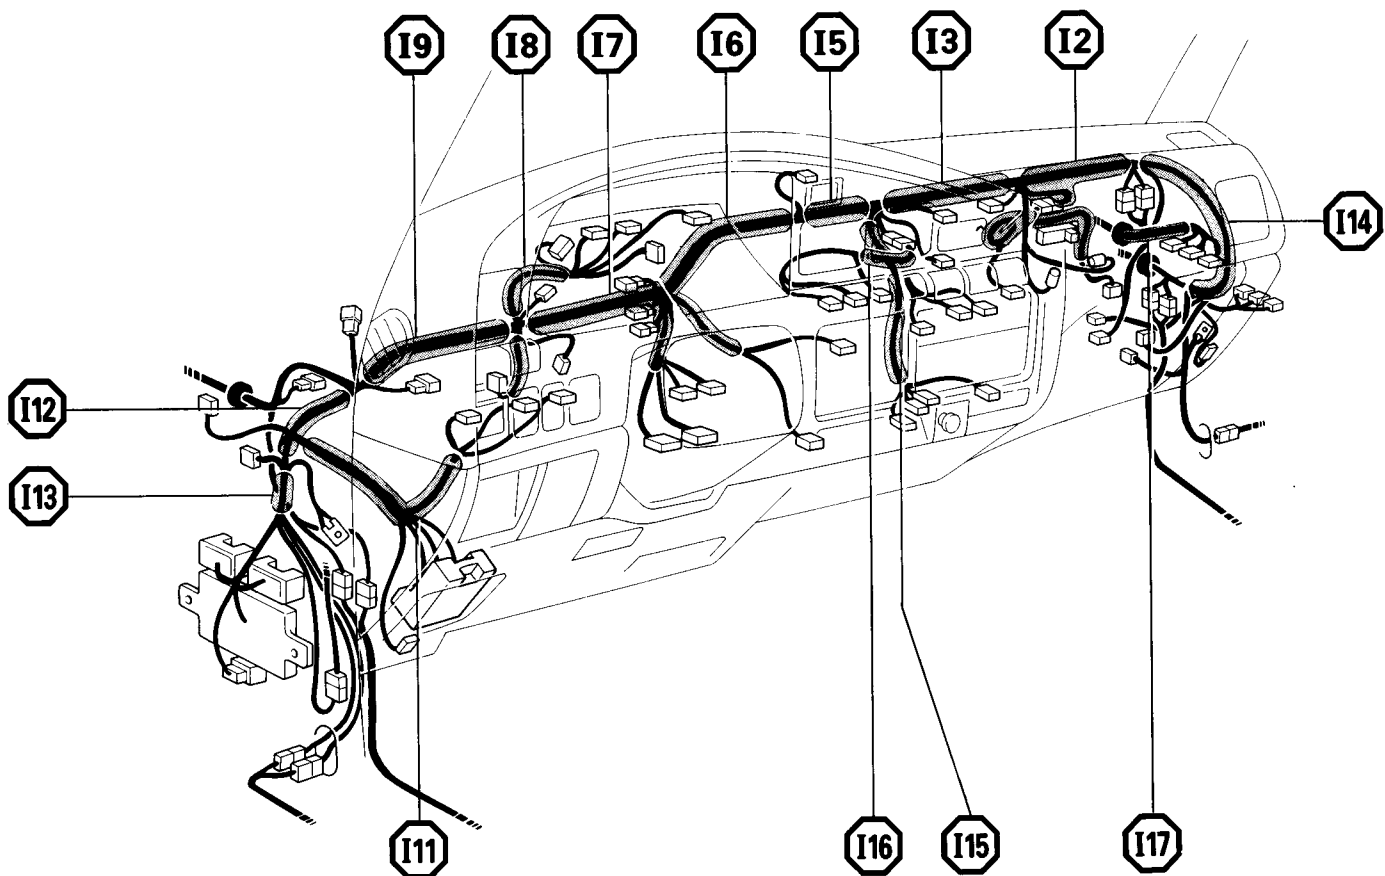


Connector Joining Wire Harness and Wire Harness

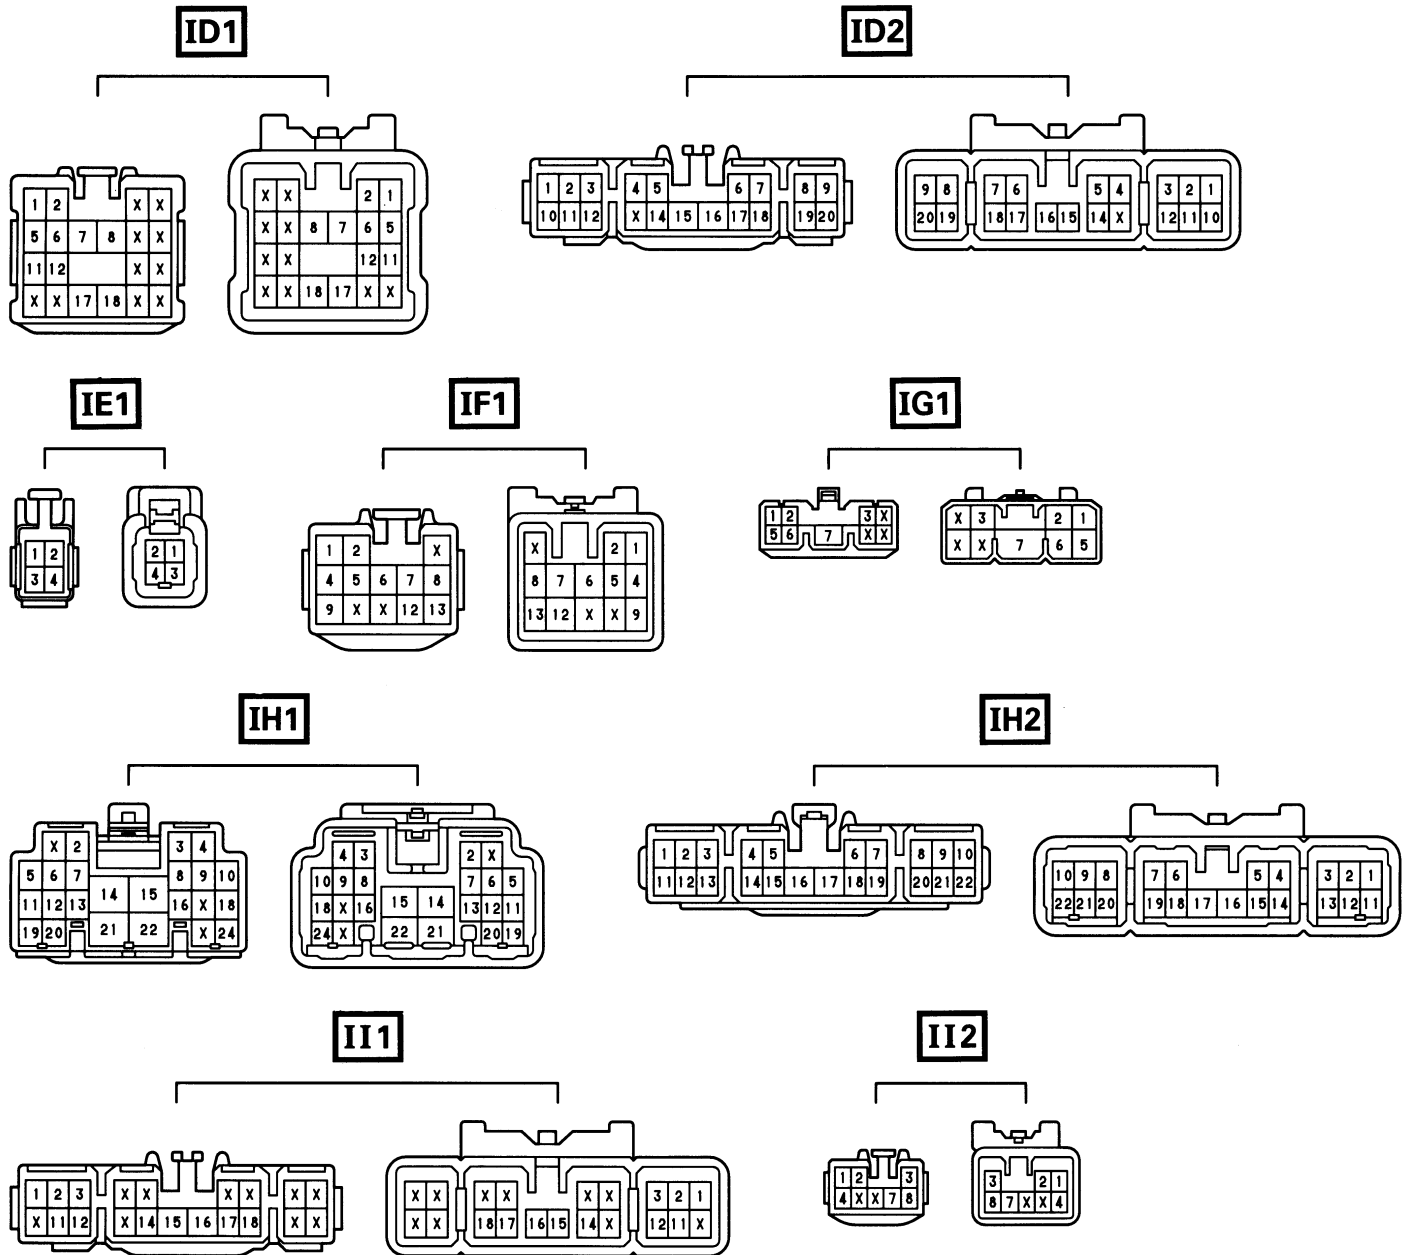


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	COWL WIRE AND FLOOR NO.1 WIRE (LEFT KICK PANEL)
ID2	
IE1	ROOF NO.1 WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)
IG1	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IH1	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IH2	
II1	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
II2	

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

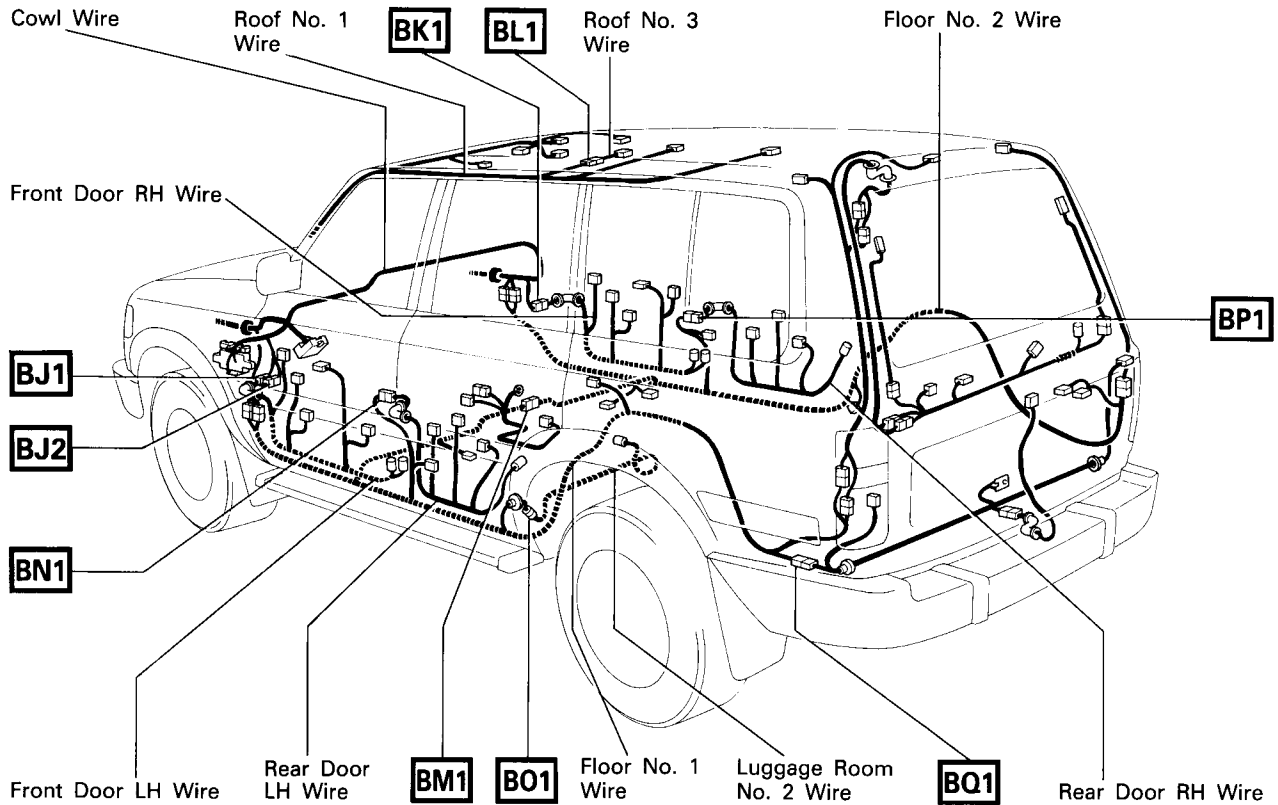

▽ : Location of Ground Points

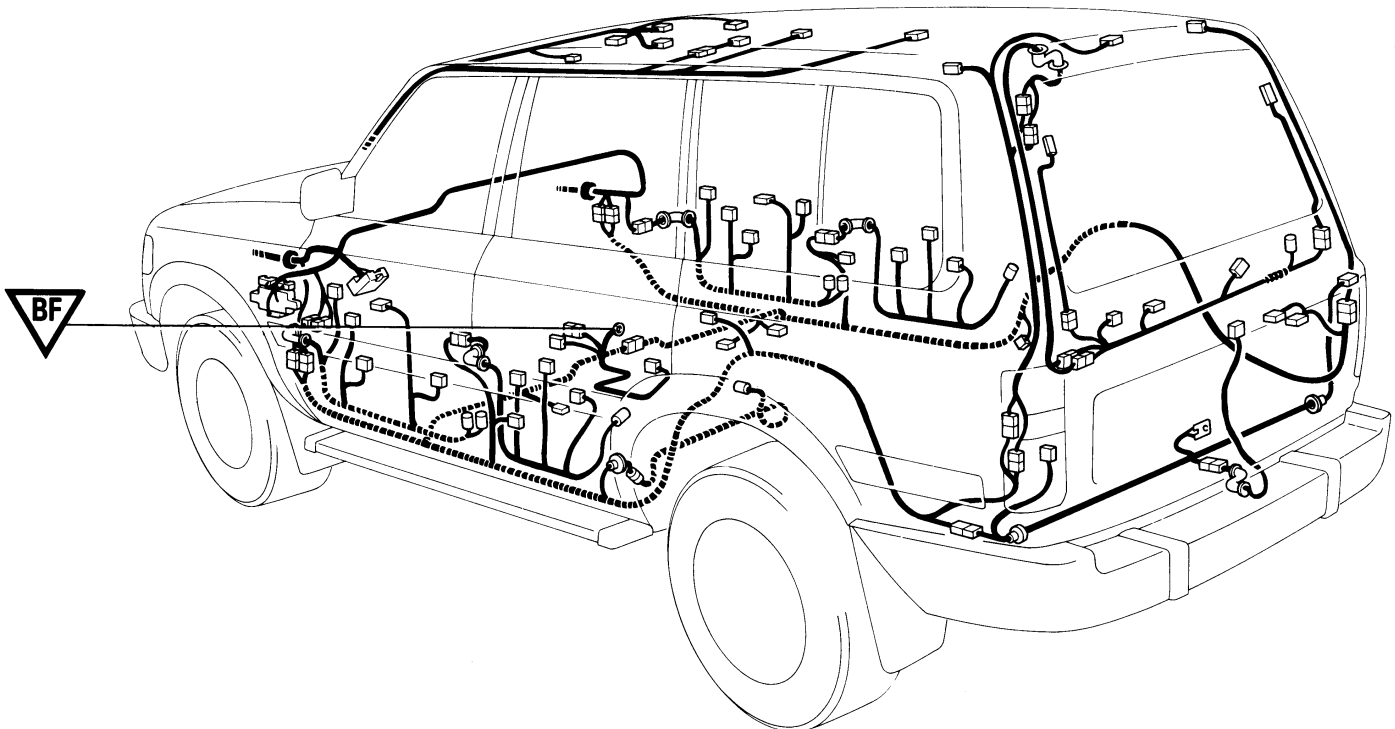


Connector Joining Wire Harness and Wire Harness

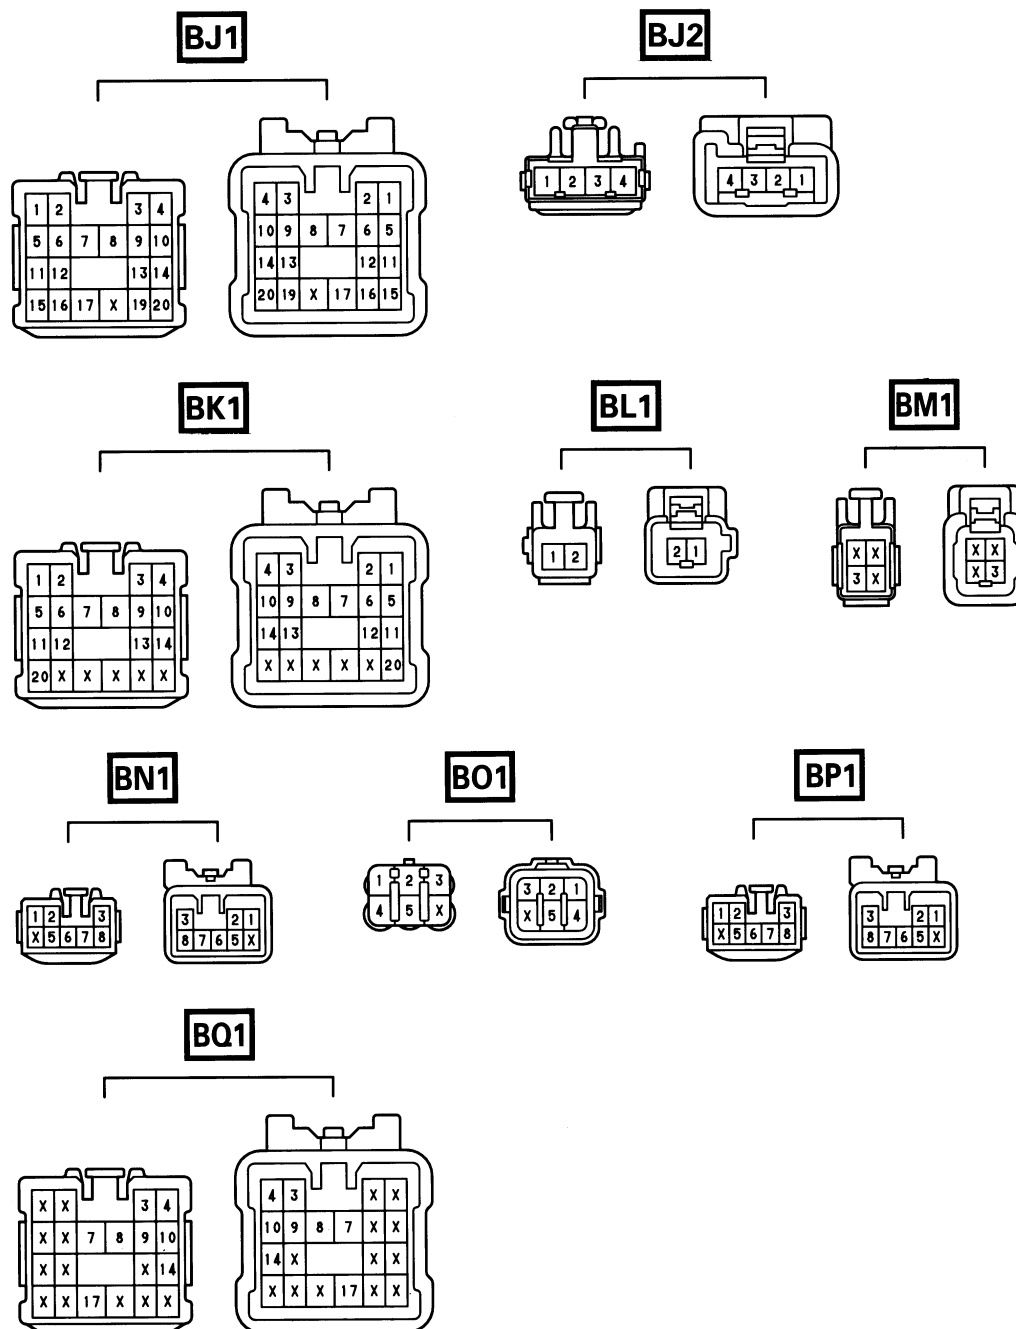


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BJ1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BJ2	
BK1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BL1	ROOF NO.1 WIRE AND ROOF NO.3 WIRE (ROOF LEFT)
BM1	FLOOR NO.2 WIRE AND FLOOR NO.1 WIRE (UNDER THE CENTER CONSOLE BOX)
BN1	REAR DOOR LH WIRE AND FLOOR NO.1 WIRE (LEFT CENTER PILLAR)
BO1	FLOOR NO.1 WIRE AND LUGGAGE ROOM NO.2 WIRE (BESIDE THE FUEL TANK)
BP1	REAR DOOR RH WIRE AND FLOOR NO.2 WIRE (RIGHT CENTER PILLAR)
BQ1	FLOOR NO.3 WIRE AND FLOOR NO.1 WIRE (LEFT QUARTER PANEL INNER)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

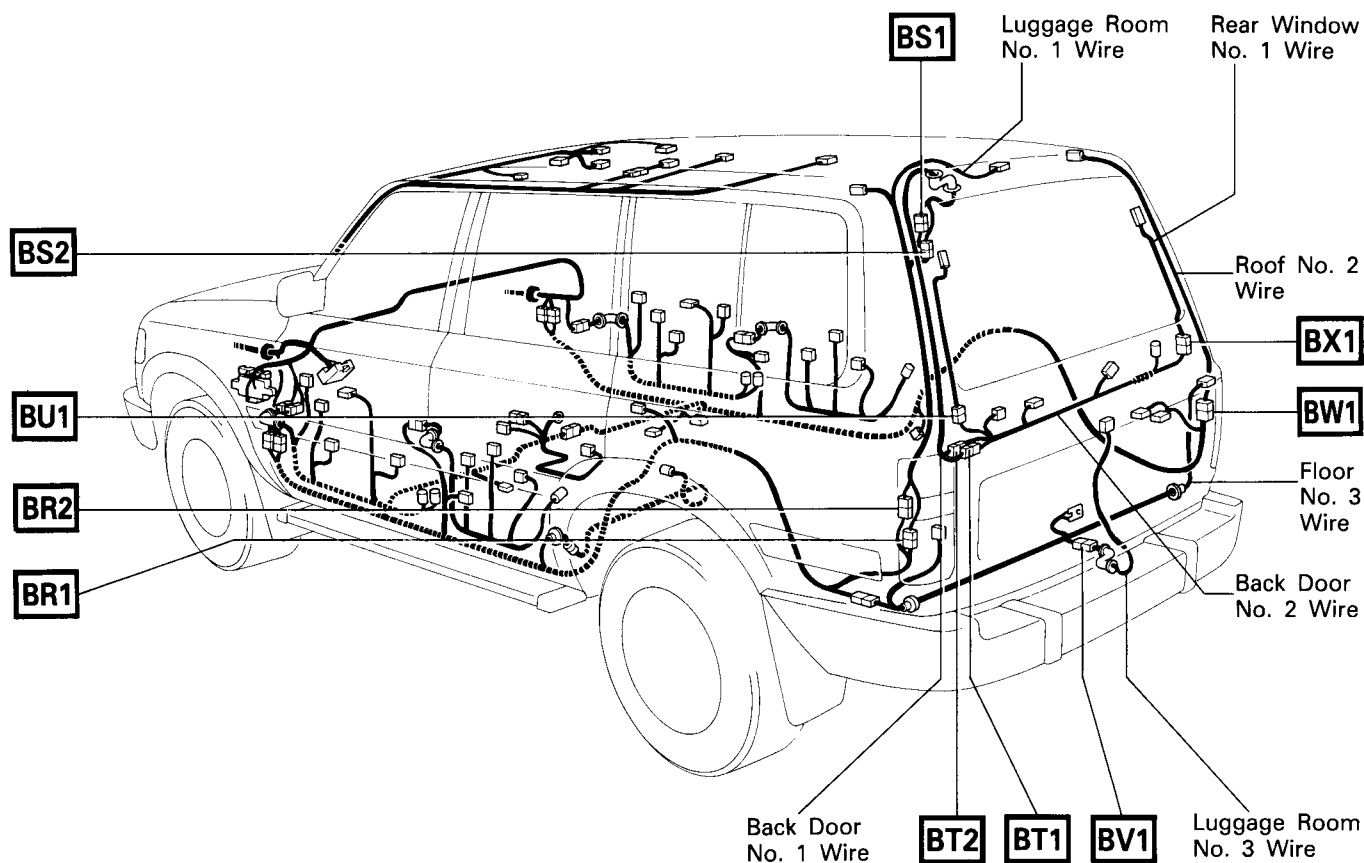

▽ : Location of Ground Points

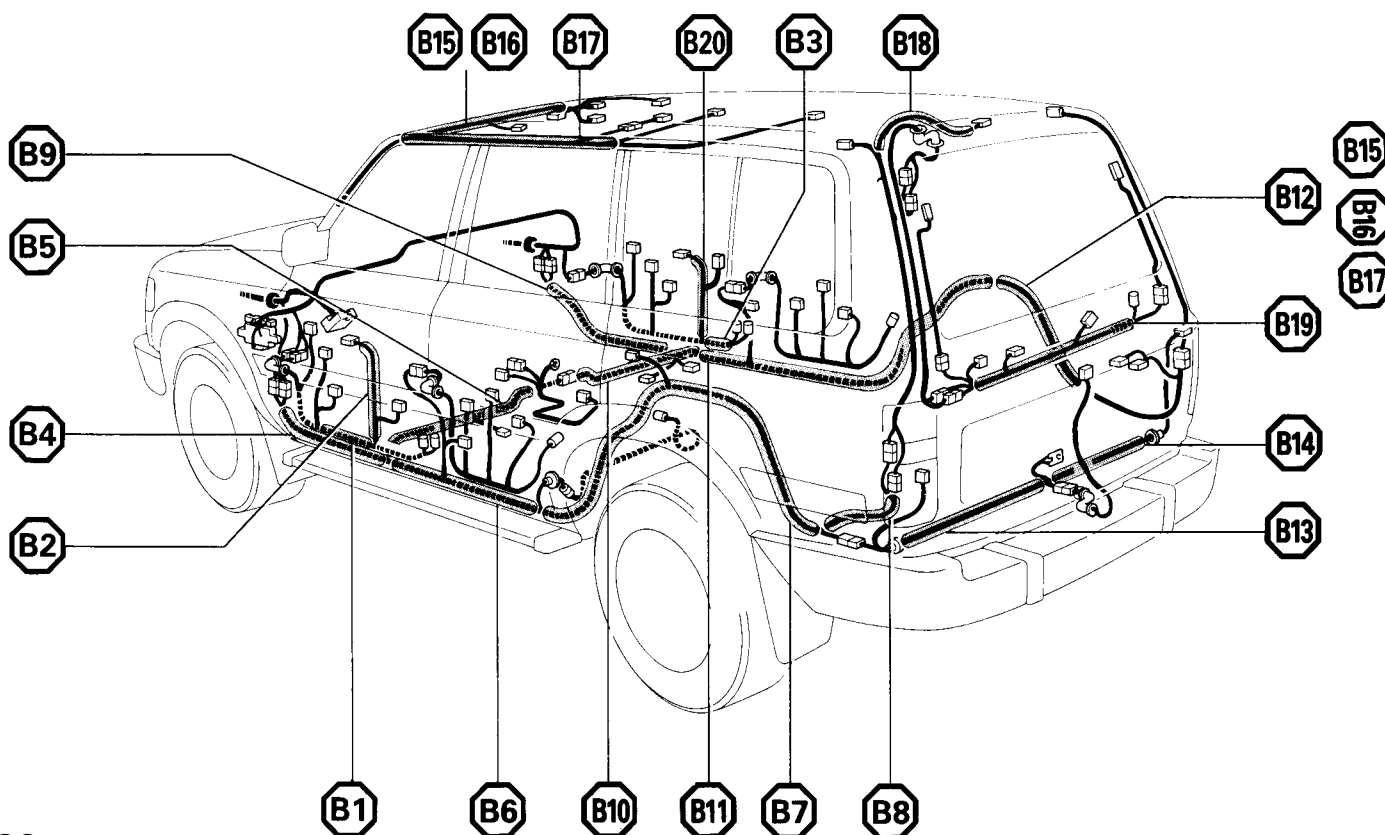

Connector Joining Wire Harness and Wire Harness

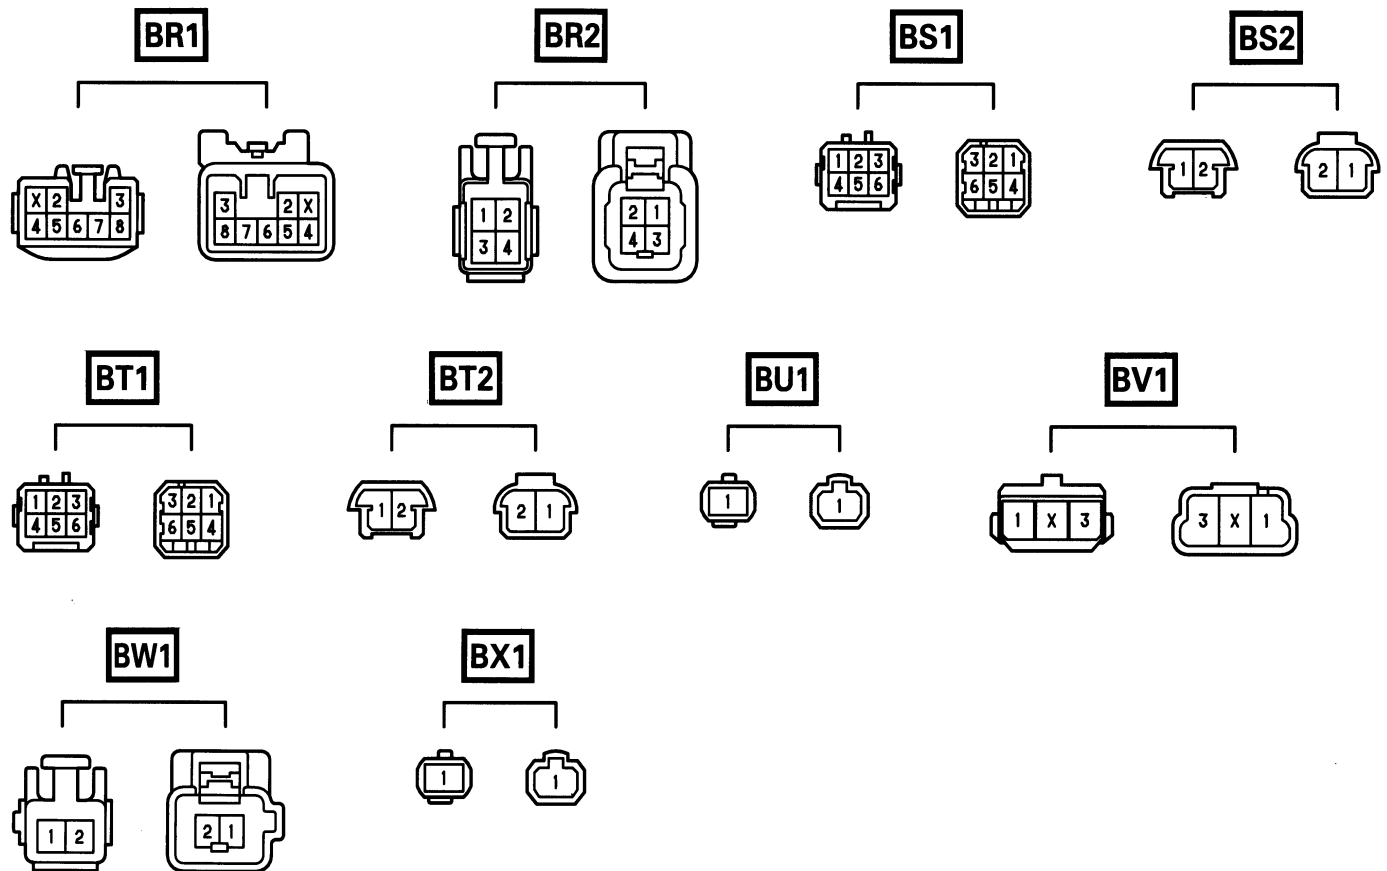

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BR1	LUGGAGE ROOM NO.1 WIRE AND FLOOR NO.1 WIRE (LEFT QUARTER PANEL INNER)
BR2	
BS1	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BS2	
BT1	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BT2	
BU1	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BV1	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)
BW1	ROOF NO. 2 WIRE AND FLOOR NO. 2 WIRE (RIGHT QUARTER PANEL INNER)
BX1	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)