
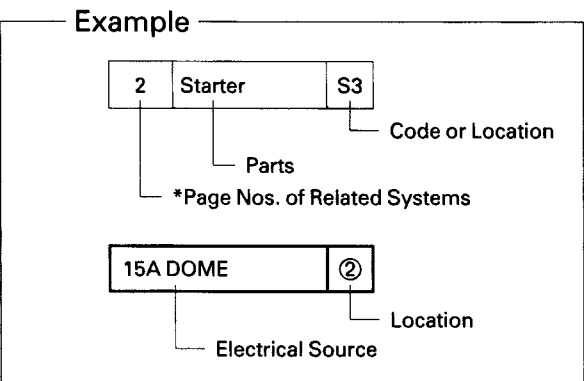


POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

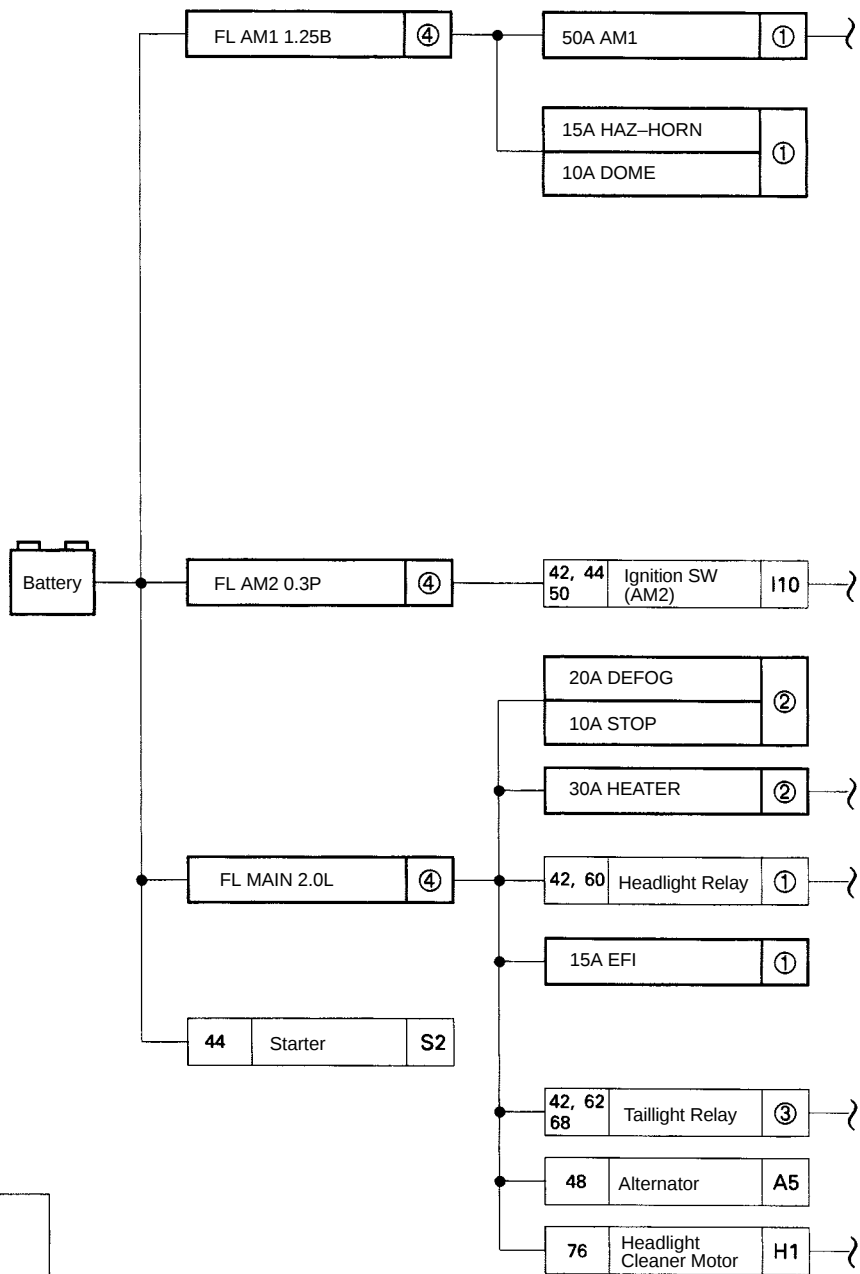

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18) (2) : Fuse Block (See page 20) (3) : R/B No. 1 (See page 20)

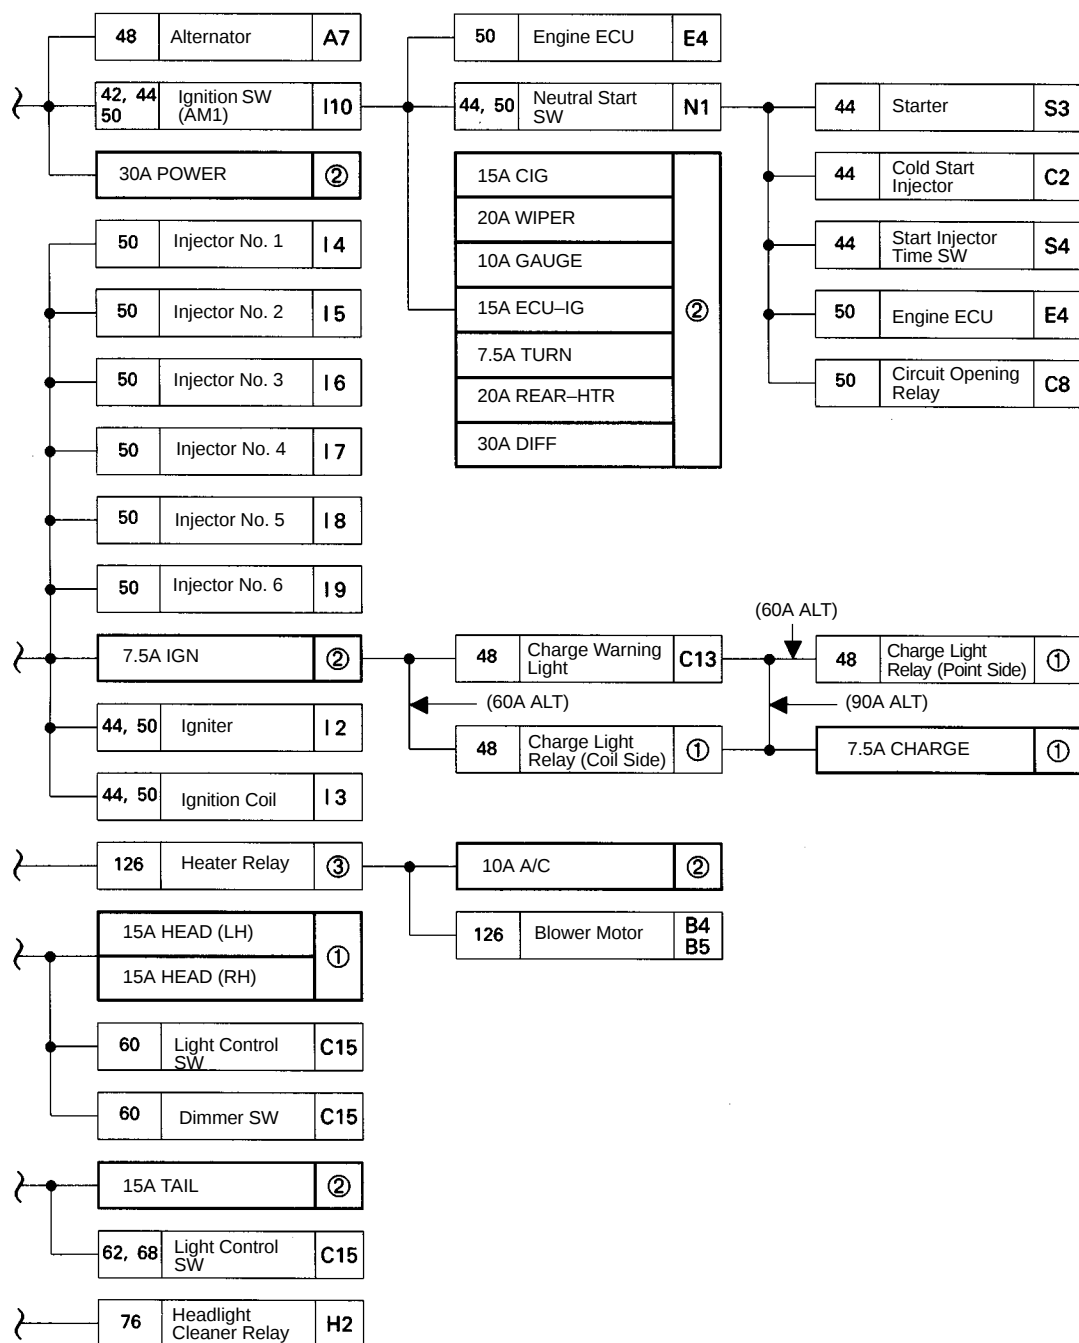

(4) : Fusible Link (F8, F9, F10 See on page 21)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	126	118	50	48	112	126	68	68 112	68	102 110	66	118	126					72	50	124	110	101	68
			Parts	A/C Pressure SW	A/T Fluid Temp. Sensor	Air Flow Meter	Alternator	Auto Antenna Control Motor	A/C Amplifier	Ashtray	Auto Antenna Control SW	A/T Shift Lever Illumination	A/T Indicator SW	Back-Up Light SW	Brake Fluid Level SW	Blower High Relay	Blower Motor (for A/C)	Blower Motor (for Heater)	Blower Resistor	Back Door Courtesy SW	Check Connector	Cooling Fan Motor (for Engine Compartment)	Center Diff. Lock Control Relay	Cigarette Lighter	Cigarette Lighter Illumination	
			Code or Location																							
			CB or Fuse	A2	A3	A4	A6	A7	A8	A11	A12	A13	B1	B2	B3	B4	B5	B6	B7	C1	C3	C5	C6	C7		
①	7.5A	CHARGE				●																				
	15A	EFI			●													●								
	15A	HEAD (LH)																								
	15A	HEAD (RH)																								
	15A	HAZ-HORN																								
	10A	DOME															●		●							
②	15A	CIG					●				●													●		
	15A	TAIL							●		●	●													●	
	10A	STOP																								
	20A	DEFOG																								
	20A	WIPER																								
	10A	GAUGE			●							●	●	●								●				
	7.5A	TURN																								
	15A	ECU-IG																								
	20A	REAR-HTR																								
	7.5A	IGN					●																			
	10A	A/C		●				●																		
	30A	DIFF																				●				
	30A	HEATER											●	●	●	●										
	30A	POWER																								

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18) (2) : Fuse Block (See page 20) (3) : R/B No. 1 (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		72	94	50		110	62		74		78		72		50		118	68		76		60			
					Door Courtesy SW Rear RH	Door Lock Control Relay	Engine ECU		4WD Indicator SW	Front Clearance Light LH		Front Clearance Light RH		Front Turn Signal Light LH	Front Turn Signal Light RH	Front Washer Motor	Front Wiper Control Motor	Front Interior Light (w/ Moon Roof)		Front Interior Light (w/o Moon Roof)		Fuel Pump	Fuel Sender	Glove Box Light	Glove Box Light SW	Headlight Cleaner Relay	Headlight No. 1 LH	Headlight No. 1 RH
			F2	F3						F4	F5	F6	F7					F16	F17	F18	G1							
			CB or Fuse			D8	D11	E4	E6	F1	F2	F3	F4	F5	F6	F7	F16	F17	F18					G1	G2	H2	H3	H4
①	7.5A	CHARGE																										
	15A	EFI			●	●										●												
	15A	HEAD (LH)																					●		●			
	15A	HEAD (RH)																						●		●		
	15A	HAZ-HORN								●	●																●	
	10A	DOME	●												●	●												
②	15A	CIG																										
	15A	TAIL						●	●												●	●						
	10A	STOP				●																						
	20A	DEFOG																										
	20A	WIPER										●	●										●					
	10A	GAUGE				●	●												●									
	7.5A	TURN								●	●																	
	15A	ECU-IG																										
	20A	REAR-HTR																										
	7.5A	IGN				●																						
	10A	A/C																										
	30A	DIFF																										
	30A	HEATER																										
	30A	POWER		●																								

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18) (2) : Fuse Block (See page 20) (3) : R/B No. 1 (See page 20)

POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18) (2) : Fuse Block (See page 20) (3) : R/B No. 1 (See page 20)

