


FROM POWER SOURCE SYSTEM (SEE PAGE 42)

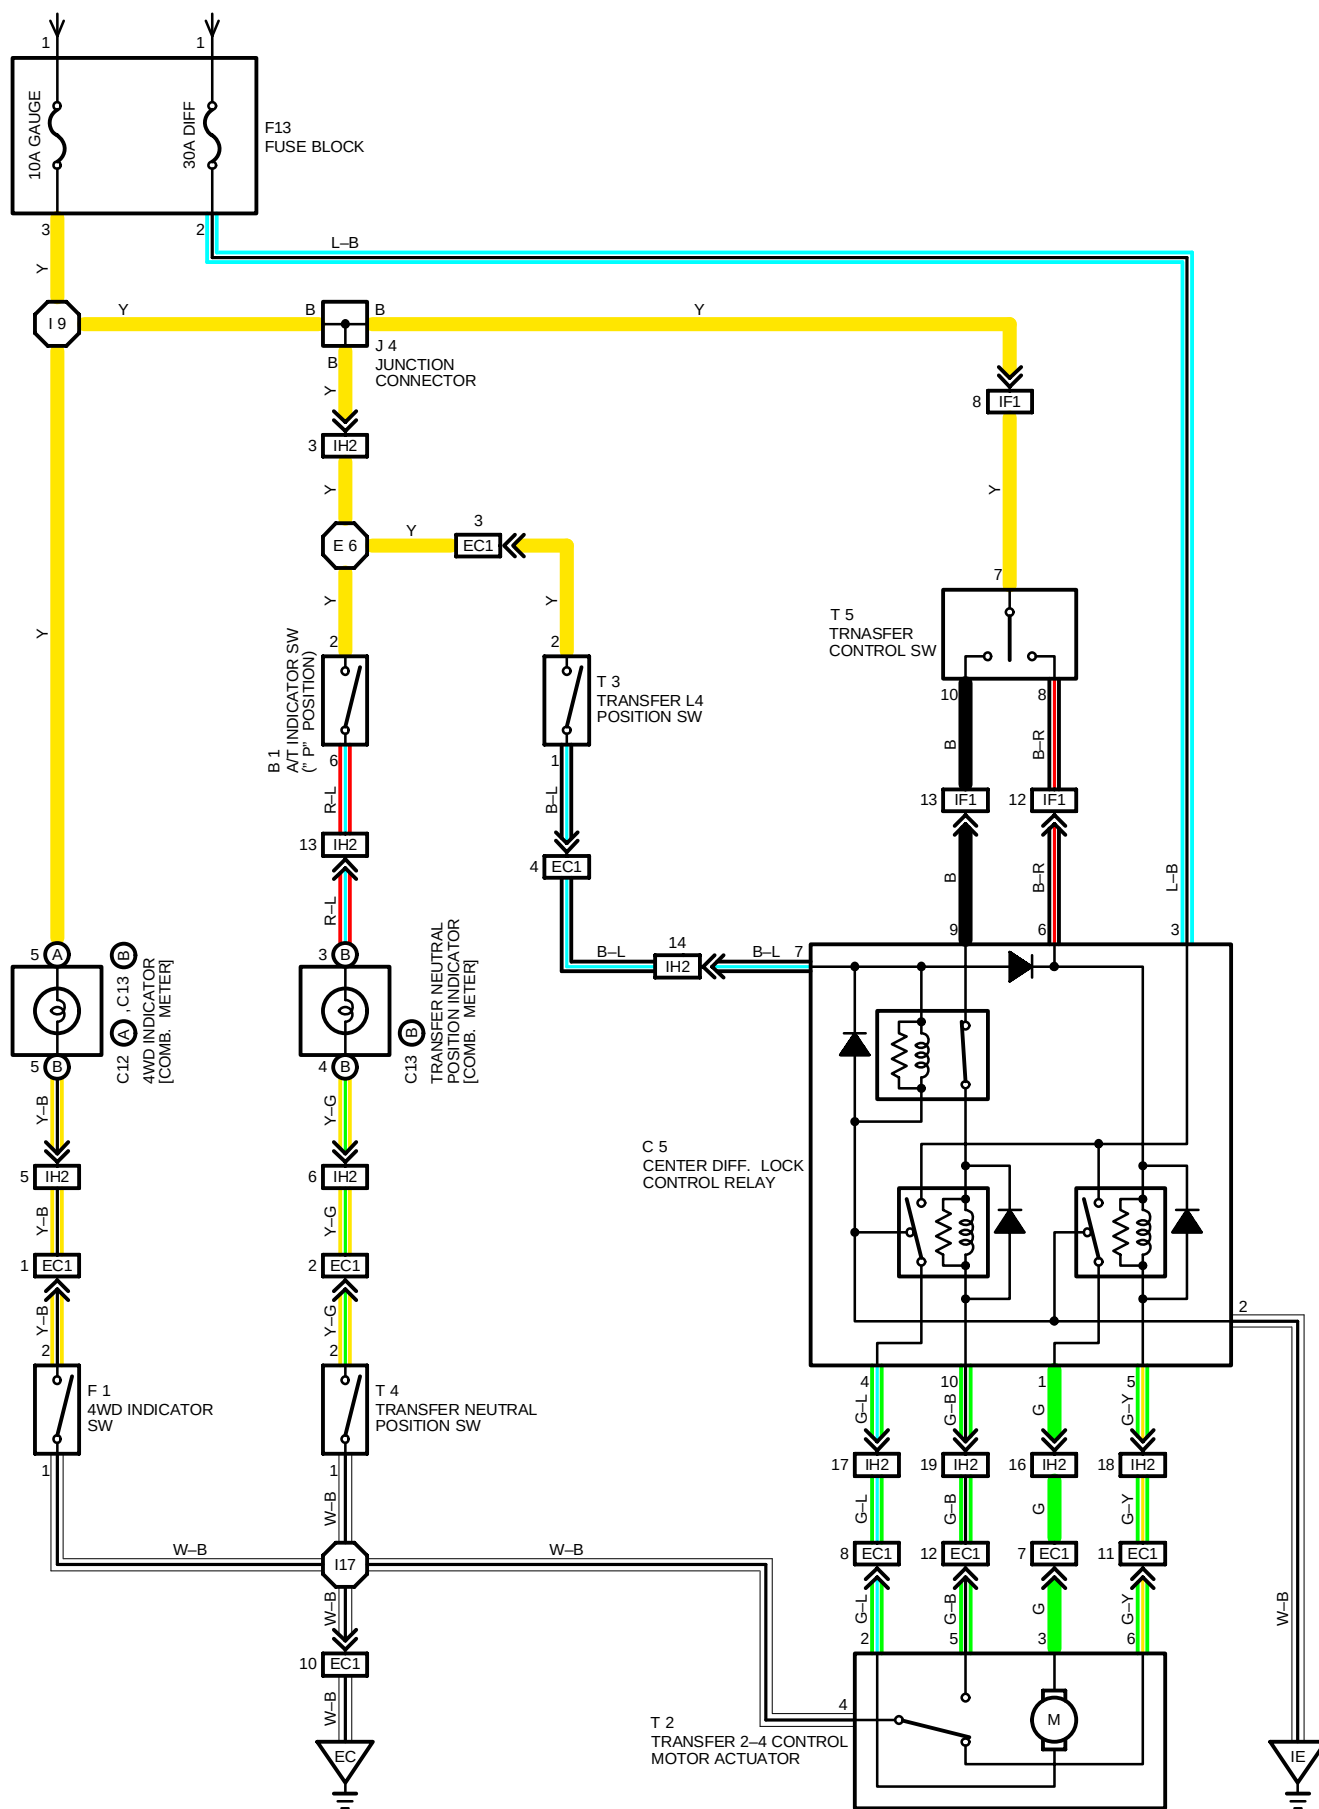

SERVICE HINTS

C 5 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : APPROX. 12VOLTS WITH IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	21	F 1	21	T 3	21
C 5	22	F13	22	T 4	21
C12	A 22	J 4	22	T 5	22
C13	B 22	T 2	21		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EC1	24	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
IF1	26	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)
IH2	26	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	24	AIR INTAKE CHAMBER
IE	26	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6	24	ENGINE WIRE	I17	26	ENGINE WIRE
I 9	26	COWL WIRE			


B 1

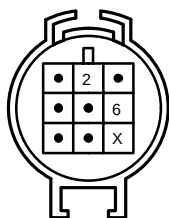


C 5

 

C12 (A) BROWN

 

C13 (B) BLUE

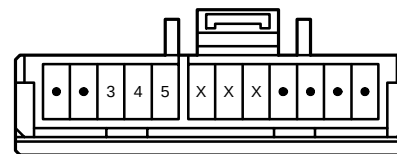


F 1



F13


(SEE PAGE 20)

 J 4 ORANGE



(HINT : SEE PAGE 7)

T 2

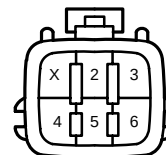

T 3



T 4 GRAY



T 5

