


A/T INDICATOR

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

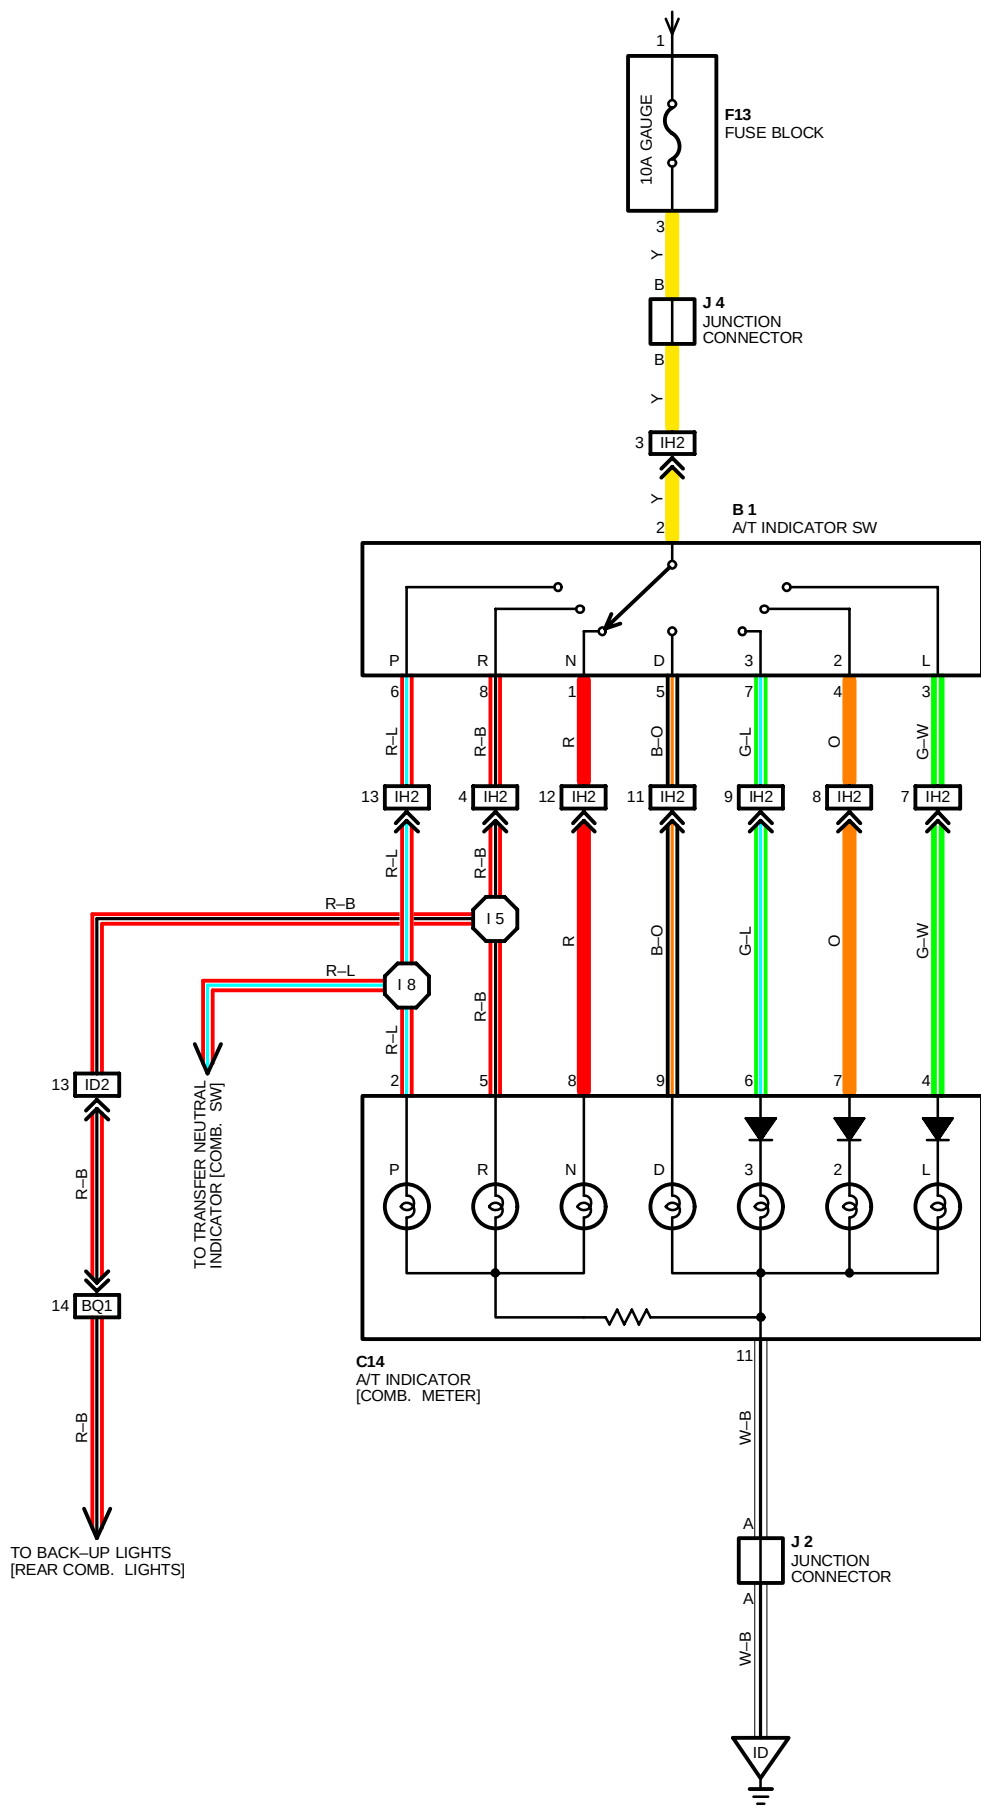

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	21	F13	22	J 4	22
C14	22	J 2	22		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	26	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IH2	26	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BQ1	28	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	26	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	26	COWL WIRE	I 8	26	COWL WIRE

B1



 C14



F13

 
(SEE PAGE 20)

J2



(HINT : SEE PAGE 7)

J4



(HINT : SEE PAGE 7)