


FROM POWER SOURCE SYSTEM (SEE PAGE 42)

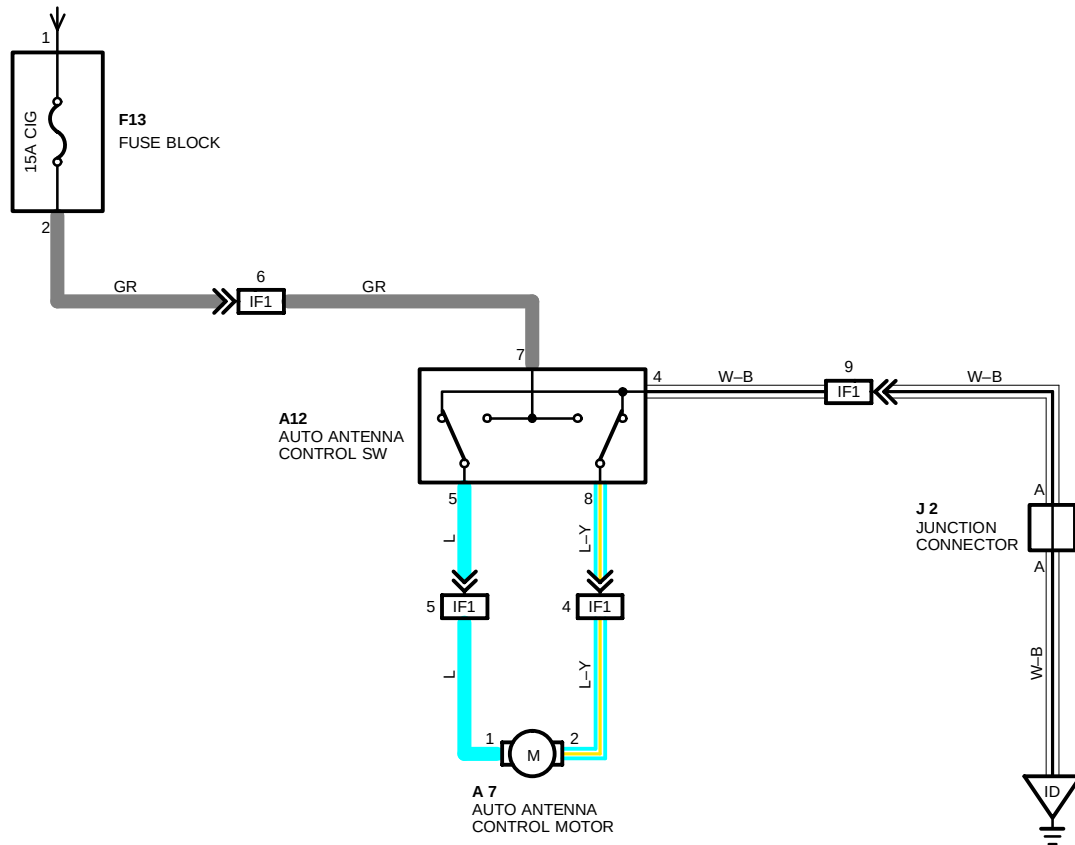

SERVICE HINTS

A12 AUTO ANTENNA CONTROL SW

7-GROUND : APPROX. 12VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

4-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 7	21	F13	22		
A12	22	J 2	22		


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	26	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	26	LEFT KICK PANEL

 A 7 BROWN



A12

 

F13

(SEE PAGE 20)

J 2



(HINT : SEE PAGE 7)