


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

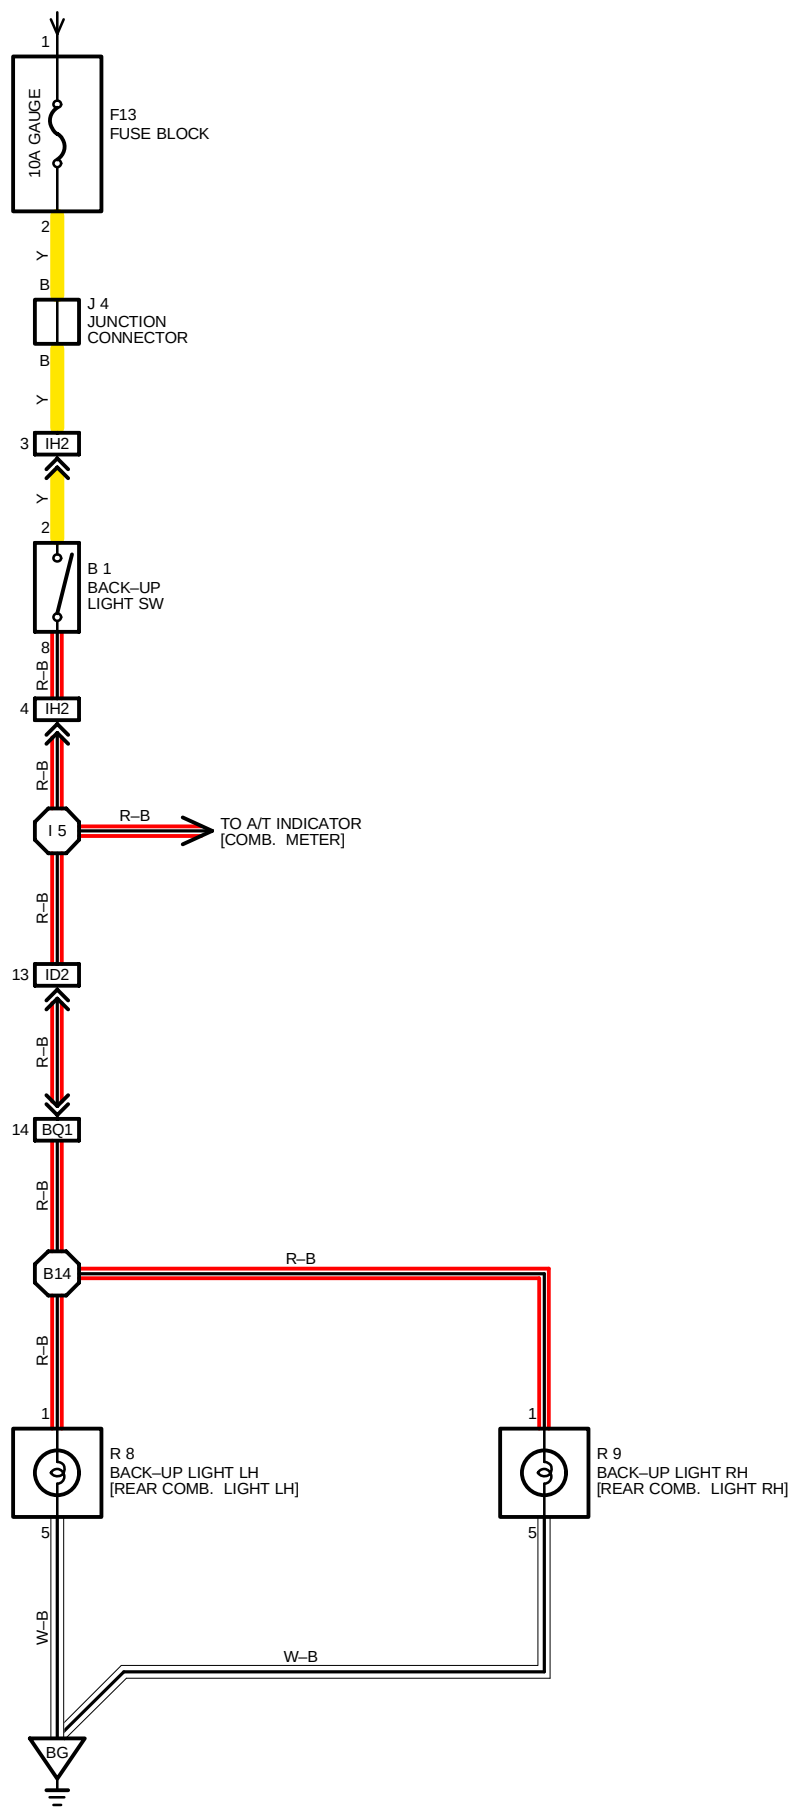

SERVICE HINTS

B 1 BACK-UP LIGHT SW

2-8 : CLOSED WITH SHIFT LEVER IN **R** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	21	J 4	22	R 9	23
F13	22	R 8	23		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	26	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IH2	26	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BQ1	28	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	28	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	26	COWL WIRE	B14	30	FLOOR NO. 3 WIRE


B 1

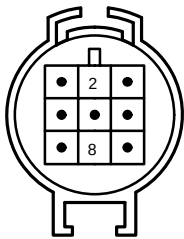

F13

(SEE PAGE 20)

 J 4 ORANGE



(HINT : SEE PAGE 7)

R 8, R 9

