

CHARGING



SERVICE HINTS

A 6 (B) ALTERNATOR

(B) 1-GROUND: 13.9-15.1 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 25° C (77° F)
13.5-14.3 VOLTS WITH ENGINE RUNNING AT 2000 RPM AND 115° C (239° F)
(B) 2-GROUND: 0-4 VOLTS WITH IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

CHARGE LIGHT RELAY (60A ALT)

(2) 1– (2) 2: CLOSED WITH IGNITION SW ON POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
A 5	A	21	C13	A	22	F13	22
A 6	B	21	F 8	B	21		
C12	B	22	F10	A	21		

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	24	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	24	FRONT SIDE OF LEFT FENDER

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	24	ENGINE ROOM MAIN WIRE	I 6	26	COWL WIRE

