


HEADLIGHT CLEANER

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

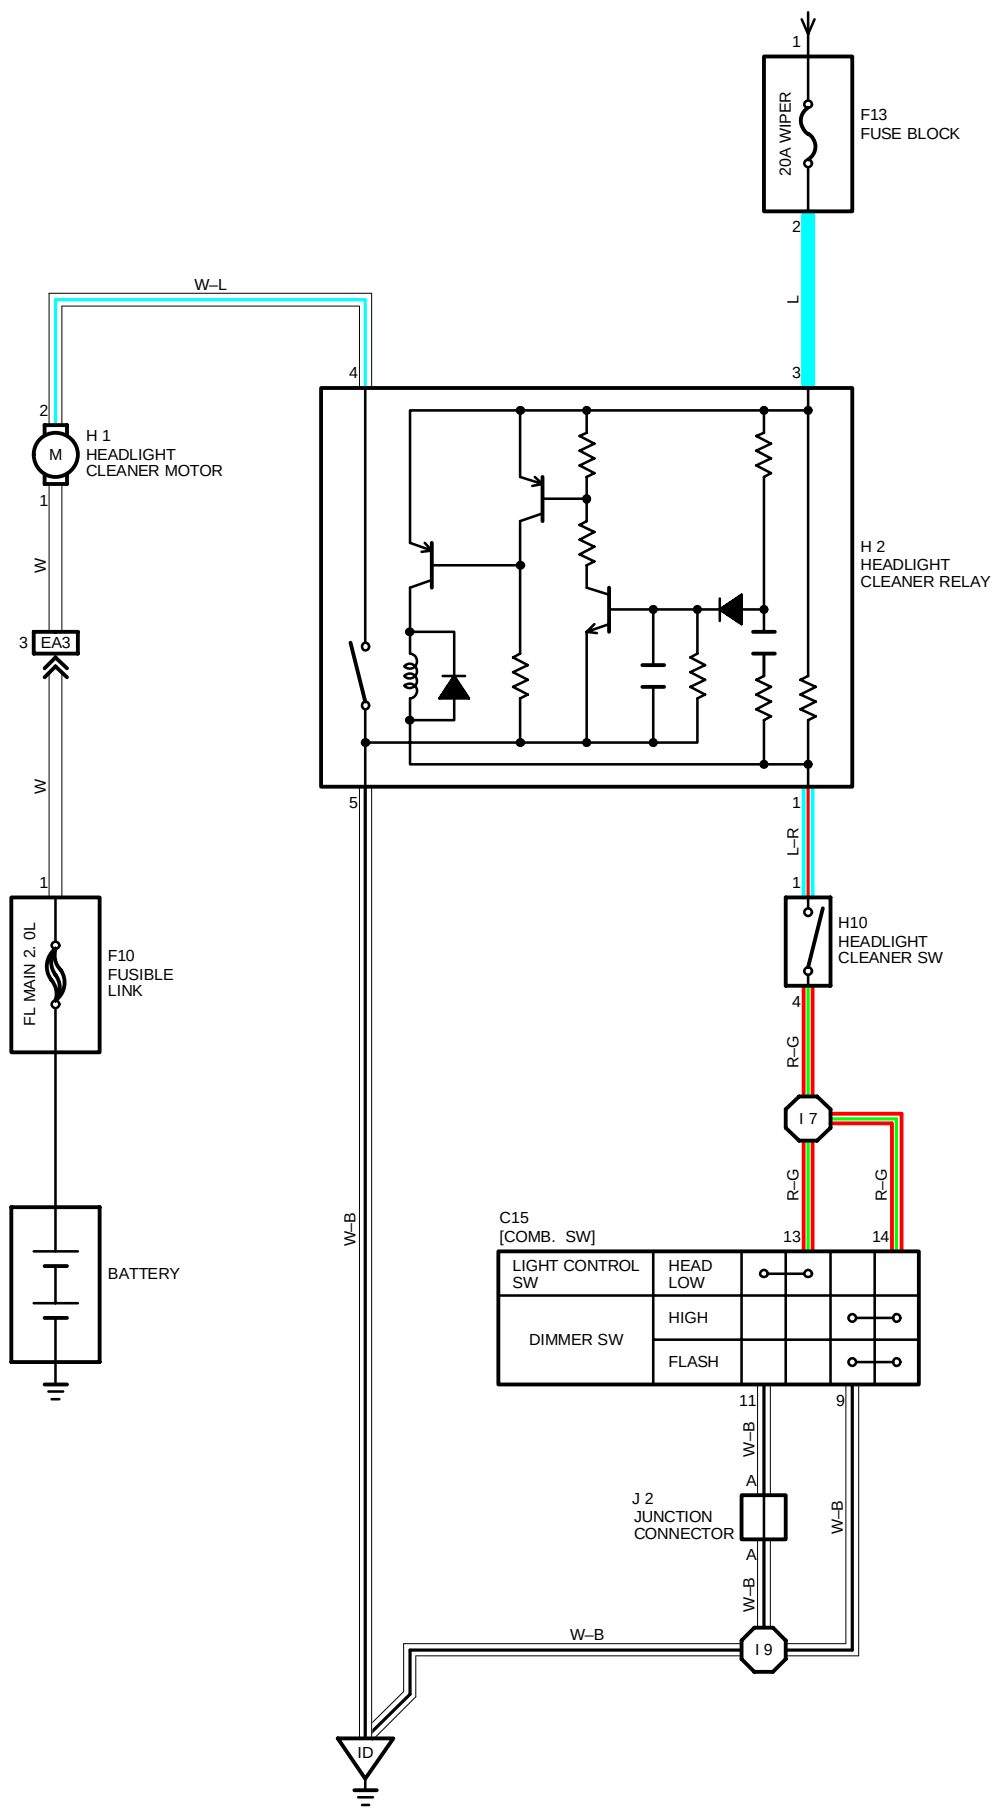

SERVICE HINTS

H 2 HEADLIGHT CLEANER RELAY

5-4: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION AND HEADLIGHT CLEANER SW ON
CLOSED WITH DIMMER SW AT **FLASH** POSITION AND HEADLIGHT CLEANER SW ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C15	22	H 1	21	J 2	22
F10	21	H 2	21		
F13	22	H10	22		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	24	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
I D	26	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 7	26	COWL WIRE	I 9	26	COWL WIRE

