


POWER SOURCE

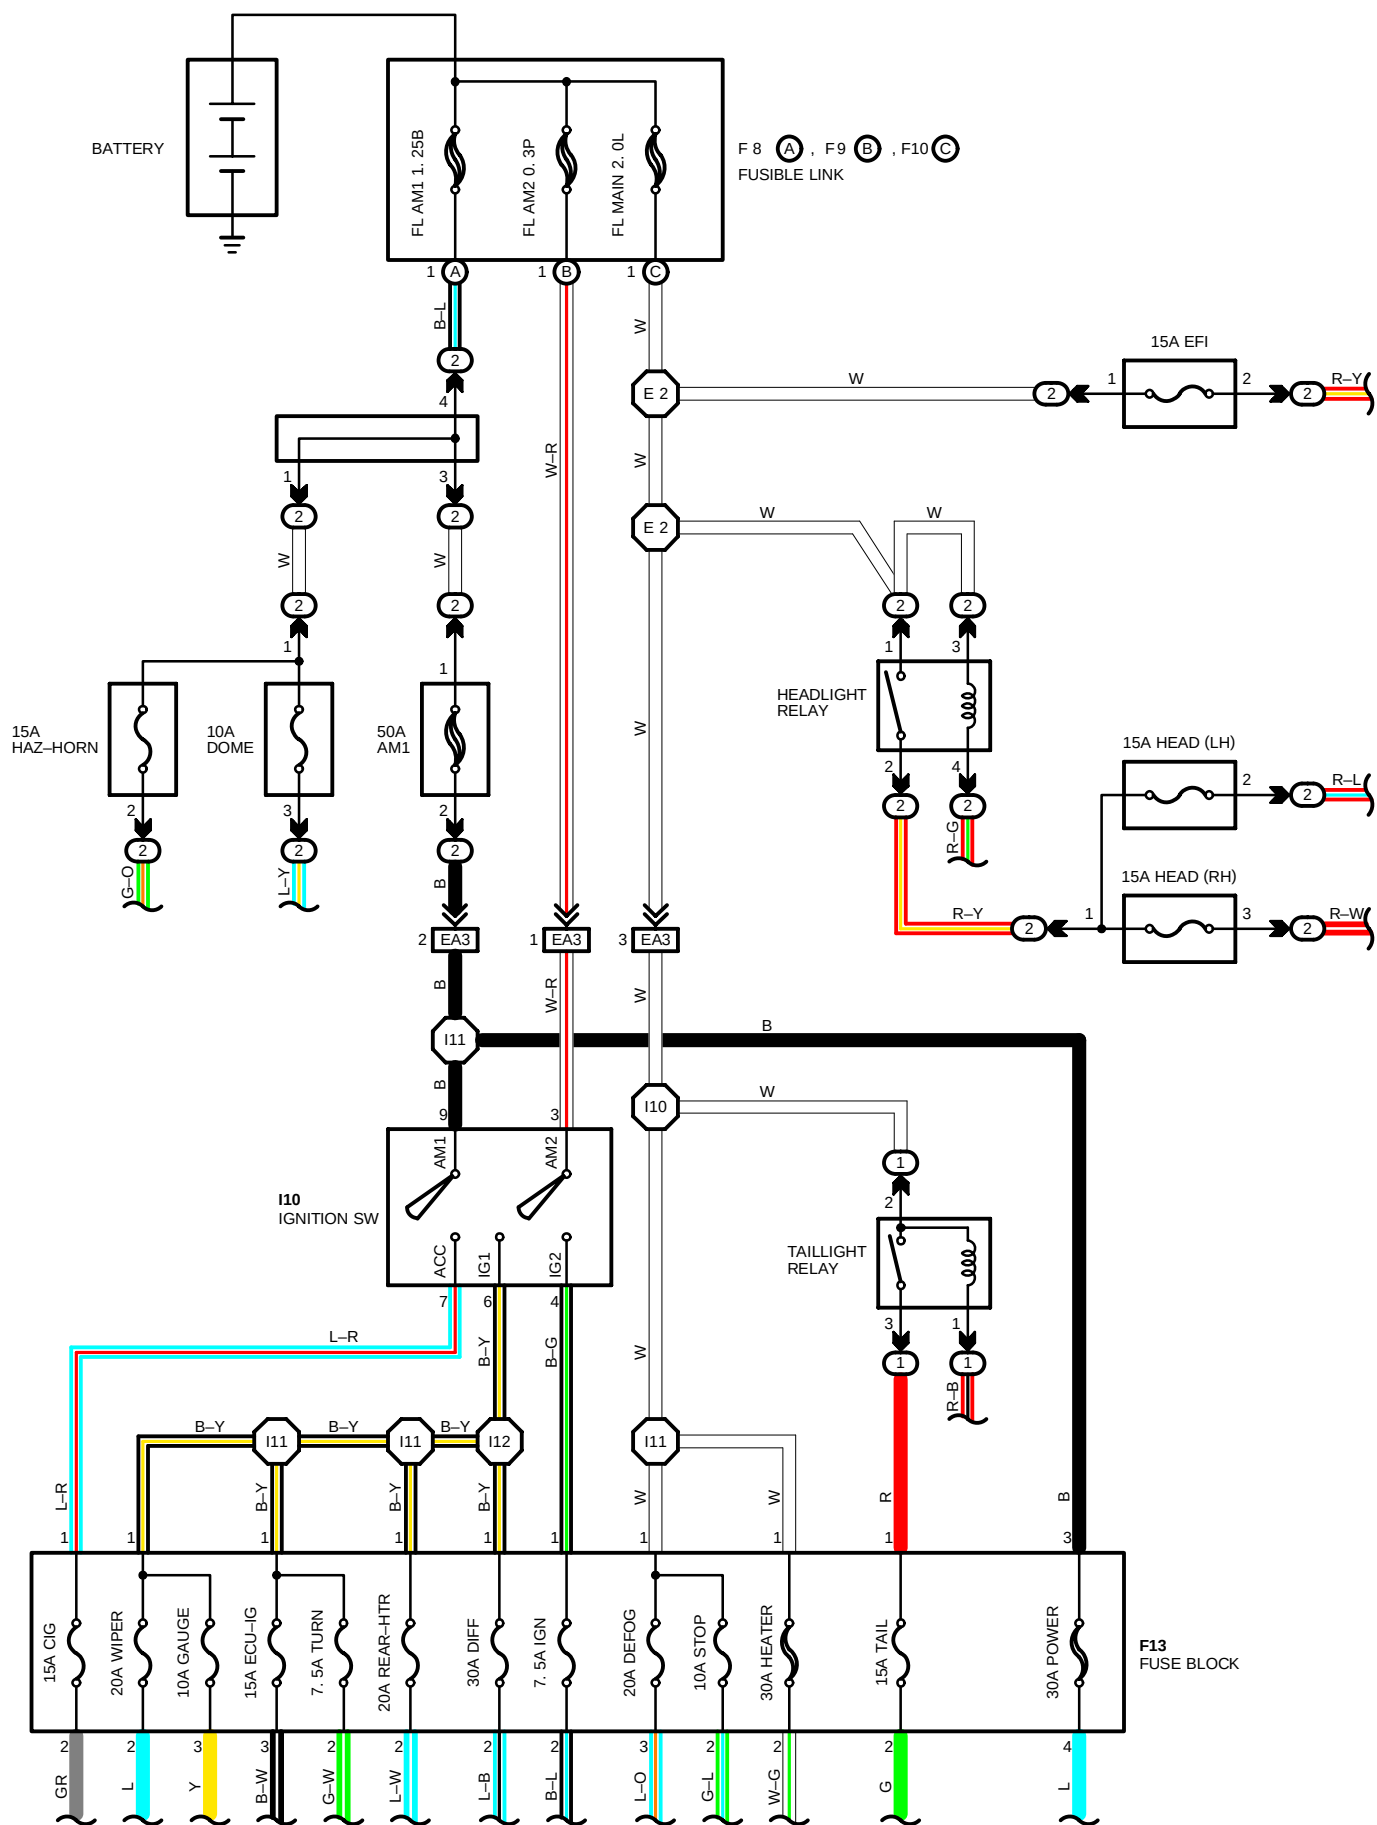

SERVICE HINTS

HEADLIGHT RELAY

(2) 1- (2) 2: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

I10 IGNITION SW

9-7 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION

9-6 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

3-4: CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

TAILLIGHT RELAY

(1) 2- (1) 3: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
F 8	A	21	F10	C	21	I10	22
F 9	B	21	F13		22		

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	24	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

⬡ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	24	ENGINE ROOM MAIN WIRE	I11	26	COWL WIRE
I10	26	COWL WIRE	I12		

 F 8 (A) , F10 (C)



F 9 (B) GRAY



F13

(SEE PAGE 20)

I10 BLACK

