



RADIO AND PLAYER

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

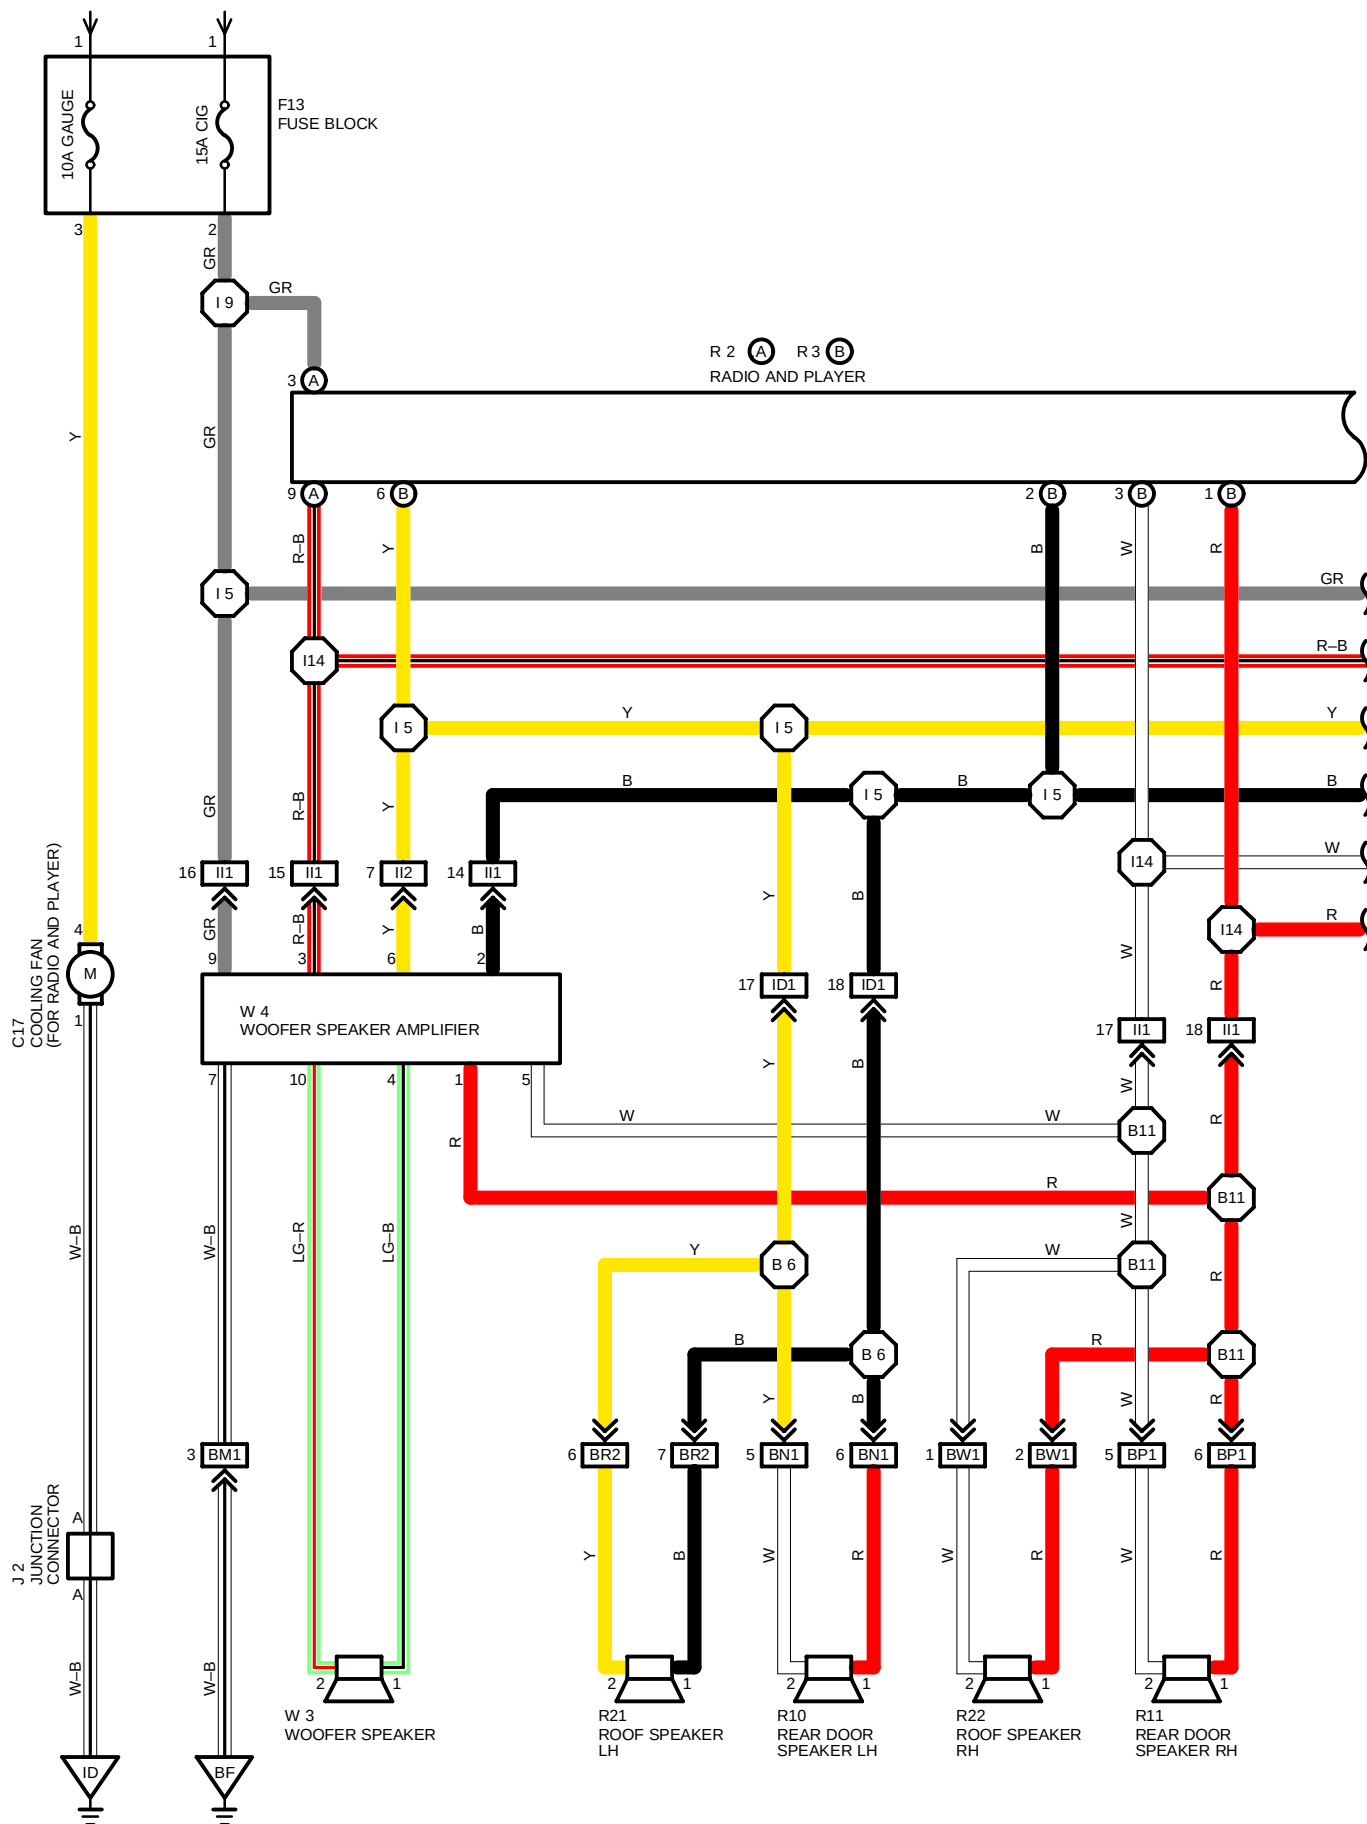

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

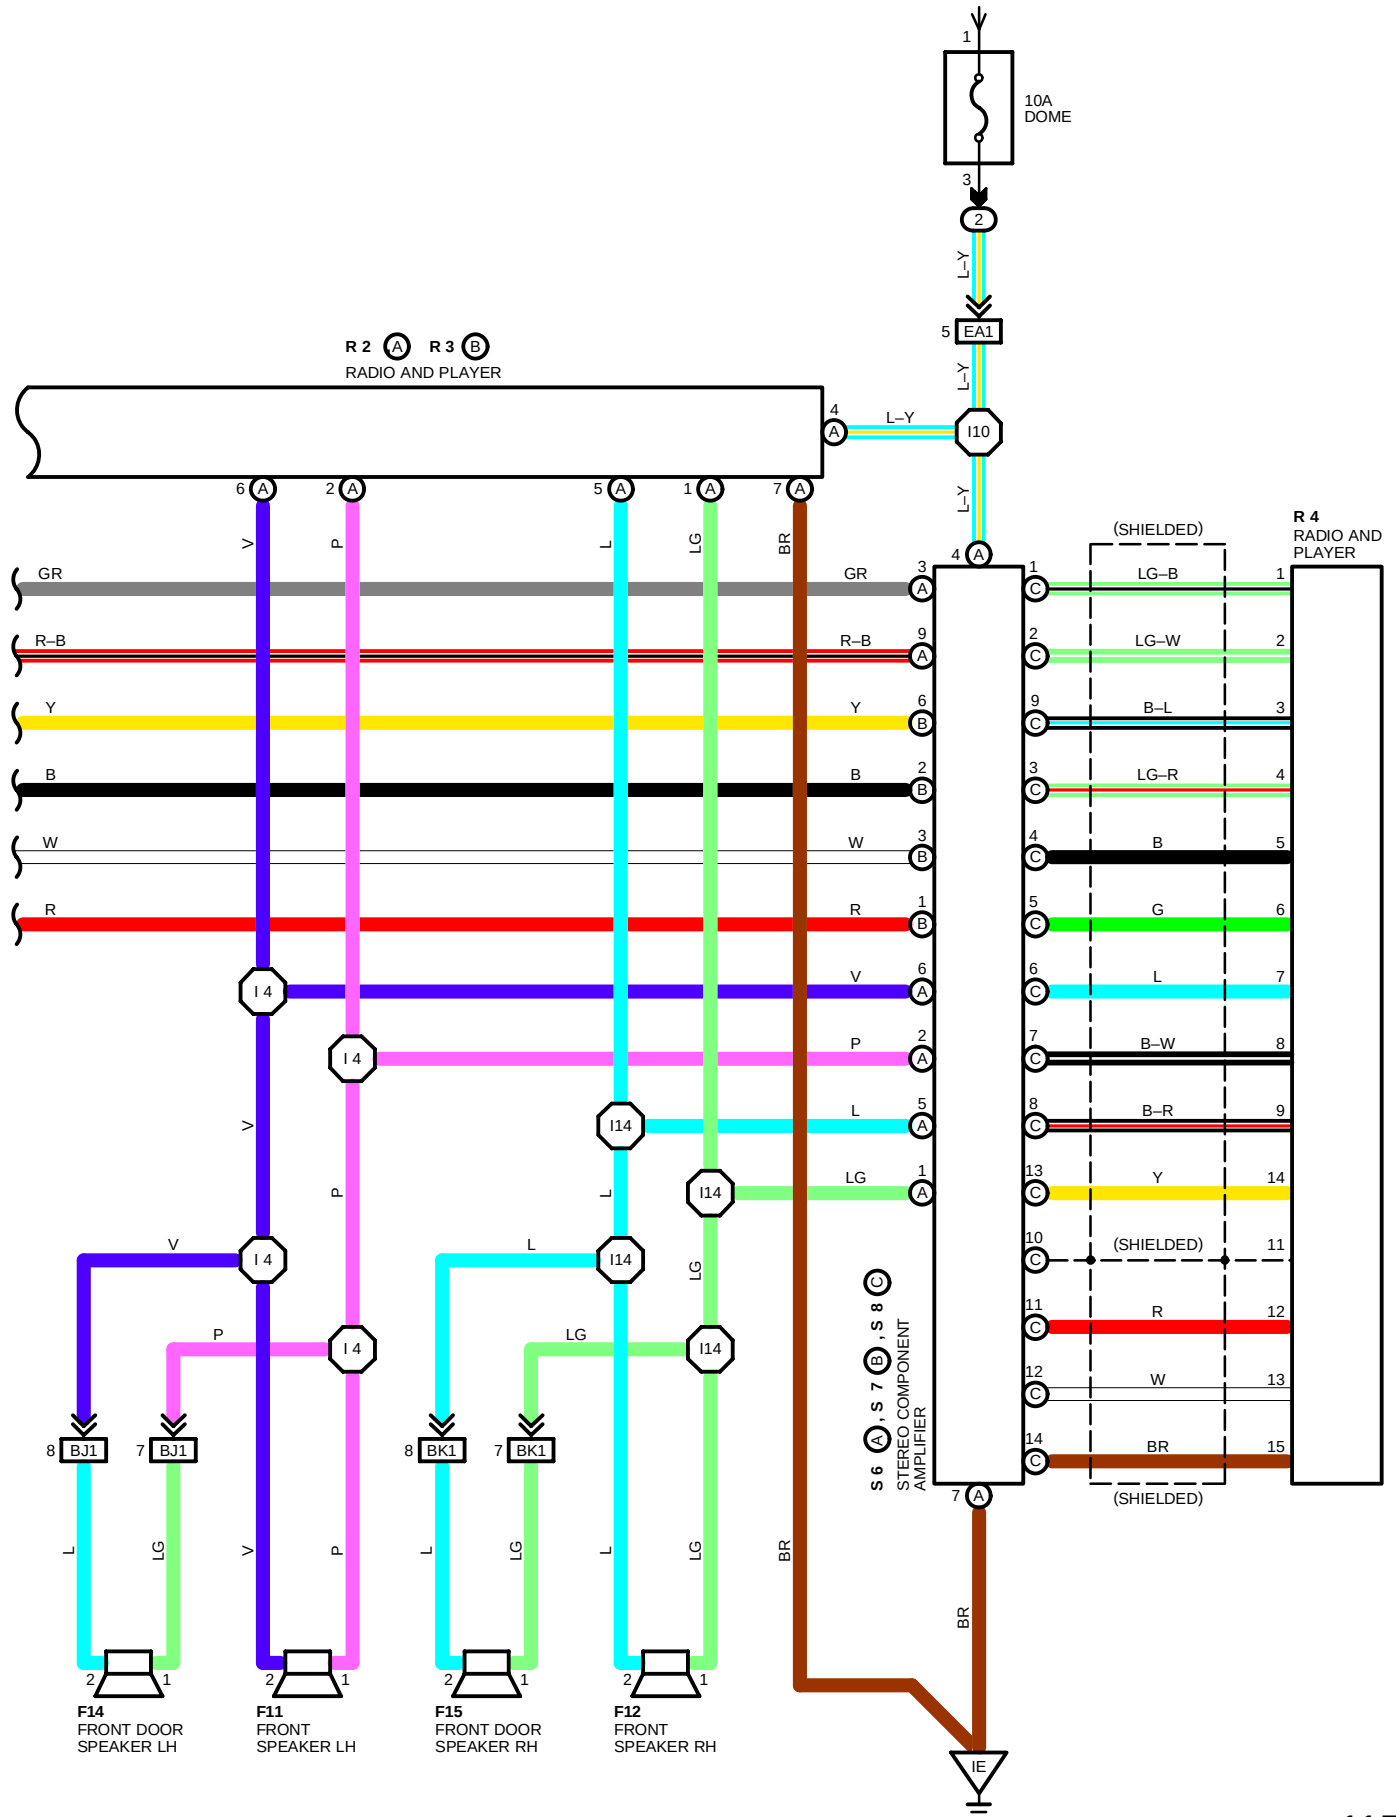

RADIO AND PLAYER

SERVICE HINTS

R 2(A) RADIO AND PLAYER

(A) 4-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

(A) 7-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C17	22	R 2	22	S 6	22
F11	22	R 3	22	S 7	22
F12	22	R 4	22	S 8	22
F13	22	R10	23	W 3	23
F14	23	R11	23	W 4	23
F15	23	R21	23		
J 2	22	R22	23		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	24	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID1	26	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
II1	26	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
II2		
BJ1	28	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	28	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BM1	28	FLOOR NO. 2 WIRE AND FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE BOX)
BN1	28	REAR DOOR LH WIRE AND FLOOR NO. 1 WIRE (LEFT CENTER PILLAR)
BP1	28	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BR2	30	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BW1	30	ROOF NO. 2 WIRE AND FLOOR NO. 2 WIRE (RIGHT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	26	LEFT KICK PANEL
IE	26	RIGHT KICK PANEL
BF	28	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 4	26	COWL WIRE	I14	26	COWL WIRE
I 5			B 6	30	FLOOR NO. 1 WIRE
I 9			B11	30	FLOOR NO. 2 WIRE
I10					

