


REAR WINDOW DEFOGGER

FROM POWER SOURCE SYSTEM (SEE PAGE 42)

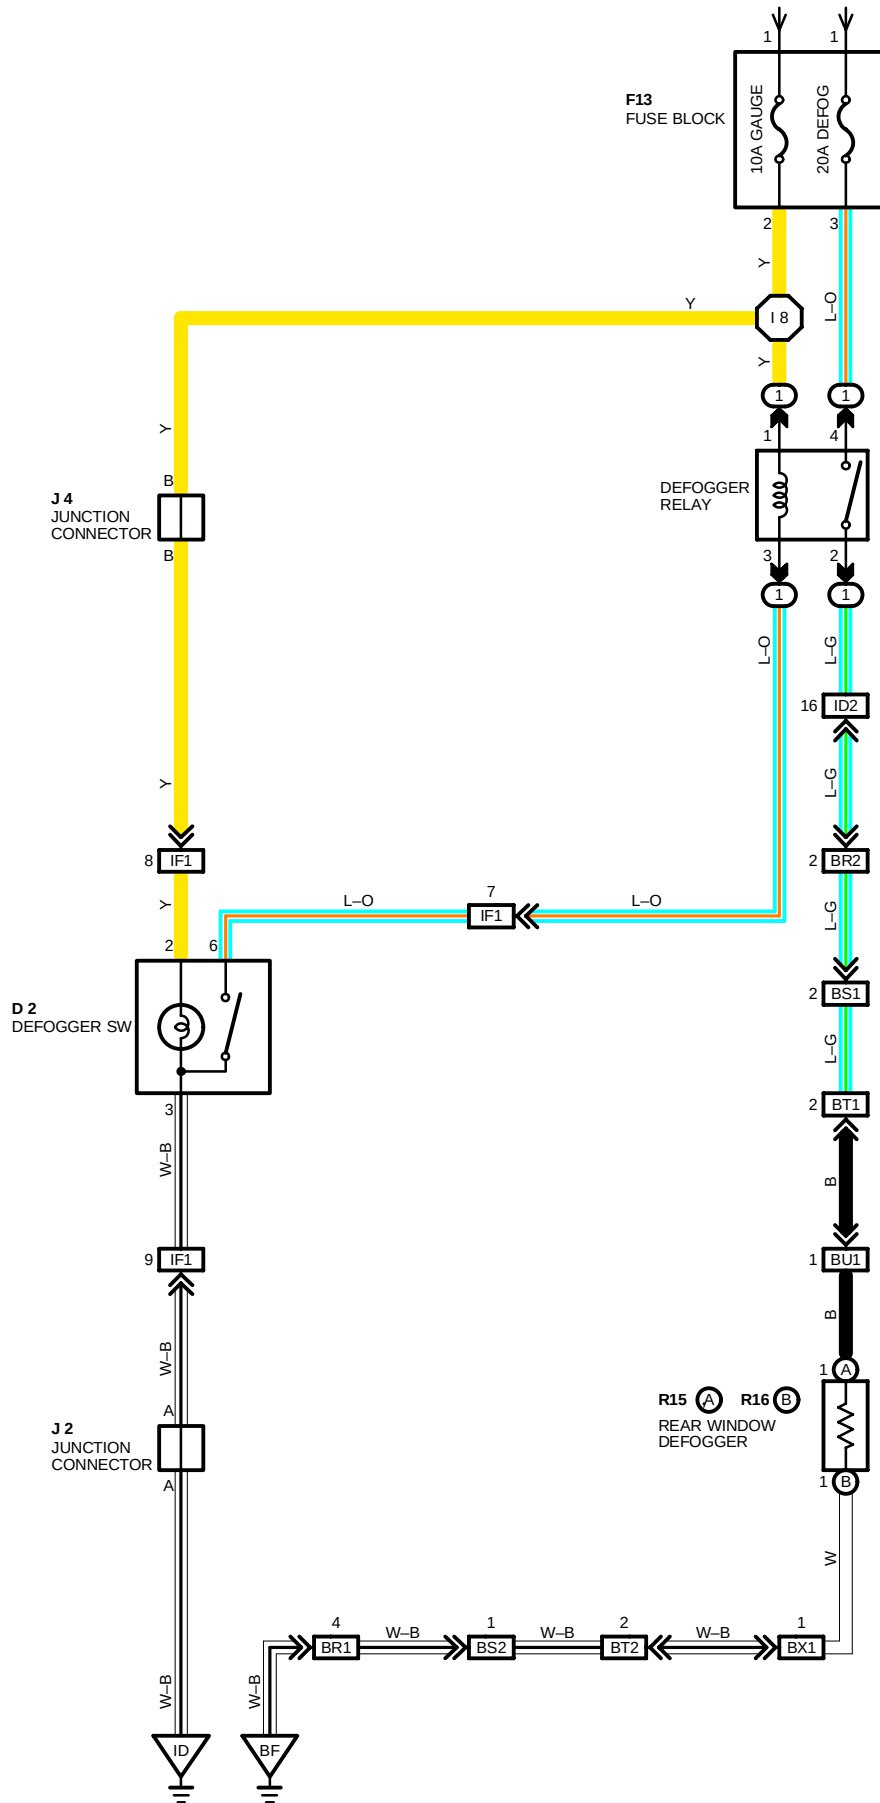

SERVICE HINTS

DEFOGGER RELAY

(1) 4 –(1) 2 : CLOSED WITH IGNITION SW ON AND DEFOGGER SW ON

D 2 DEFOGGER SW

3–GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

2–GROUND: ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 2	22	J 2	22	R15	A 23
F13	22	J 4	22	R16	B 23

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	26	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IF1	26	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)
BR1	30	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR2		
BS1	30	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BS2		
BT1	30	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BT2		
BU1	30	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BX1	30	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	26	LEFT KICK PANEL
BF	28	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 8	26	COWL WIRE			



F13
(SEE PAGE 20)



 (HINT : SEE PAGE 7)



(HINT : SEE PAGE 7)

